

THE MASTER SECTION

Overview	72
Part 1 - VALUE	73
Part 2 - SNAPSHOT	75
Part 3 - EFFECTS	80
Part 4 - DYNAMICS	91
Part 5 - MENU	92
Part 6 - FUNCTION KEYS	135
Part 7 - UNDO/REDO	136

OVERVIEW

The Master Section includes the LCD display and its associated switches, the PARAM encoder control and the ▲▼◀▶ arrow keys.

The Master Section is used primarily for 328XD configuration so it is recommended that you take a good look through this section of the manual.

Part 1 - VALUE

Part 2 - SNAPSHOT

Part 3 - EFFECTS

Part 4 - DYNAMICS

Part 5 - MENU

Part 6 - FUNCTION KEYS

Part 7 - UNDO/REDO

