

PART 6

FUNCTION KEYS

The ◀ and ▶ cursor keys when pressed together act as function keys, the purpose of which is governed by the active LCD mode.

Value

With the LCD in VALUE mode, using the FUNCTION keys will toggle the automation mode between READ ONLY and READ/WRITE. The LCD will indicate momentarily that the automation mode has changed. For more information on automation modes, see **Section 4**.

Snapshot

Using the FUNCTION keys while viewing the Snapshot list will return the selected Snapshot to the last recalled.

Using the FUNCTION keys while viewing a Snapshot's assigned timecode address will reset the value to 00:00:00:00.

Snapshot List

When the LCD is displaying the list of stored Snapshots, pressing the ◀ and ▶ Function keys will return the list to highlight the last recalled Snapshot.

Tape Mach Setup

When adjusting the Loc 1 or Loc 2 and Offset settings located in the Tape Mach Setup menu, press the ◀ and ▶ FUNCTION keys to return the setting to a timecode value of 00:00:00:00. For more information on the Tape Mach Setup menu, consult **Section 3J Part 5.13**.

MIDI Controllers

When the LCD displays the MIDI Controllers menu, pressing the ◀ and ▶ Function keys will instigate a dump of all the values for currently set controllers from the MIDI Out port.

Recalling Factory Default Settings

While holding the FUNCTION keys during the boot process of the 328XD, a full factory reset can be made, returning the console to its original state and erasing all stored Snapshots, User Setups and Presets. Note that holding the ◀ ▶ FUNCTION keys and the ▲▼ cursor keys also during the console boot process will restore the desk to its Factory Default state, but leaving all stored Snapshots, User Setups and Presets intact.