

PART 7

UNDO / REDO

The UNDO and REDO keys can be used to correct any adjustments or perhaps to make an A/B comparison between two different settings.

Adjustment to any parameter stored within a Snapshot (see **Section 3J Part 2** for the full list of parameters) will light the UNDO switch. Pressing UNDO will then restore the console parameters to the previous state and the REDO switch will light instead. If you are making an A/B comparison, you could then press the REDO switch to restore the console to the state it was in before UNDO was pressed.

Note that while the REDO switch is lit, any further parameter adjustment will reset the undo buffer. The UNDO switch will then light again to indicate this.

The undo buffer will also be reset by the following:

- Pressing any SELECT switch
- Pressing any E-STRIP MODE switch
- Entering DYNAMICS ON E-STRIP mode
- Exiting DYNAMICS ON E-STRIP mode
- Entering / leaving Bank Select 1-16
- Entering / leaving Bank Select 17-32
- Entering / leaving Master Bank Select
- Entering / leaving MIDI Controller Bank
- Copying channels
- Recalling a Snapshot
- Recalling a User Setup
- Recalling the Factory Defaults
- Rebooting the 328XD

In addition, as the MIDI Controller menu settings are stored within and recalled as part of a Snapshot, while in the MIDI Controllers menu, the UNDO and REDO switches may be used.