


Start code = 0
 Implemented from CPU software version 0.5

Exterior 200 DMX Protocol

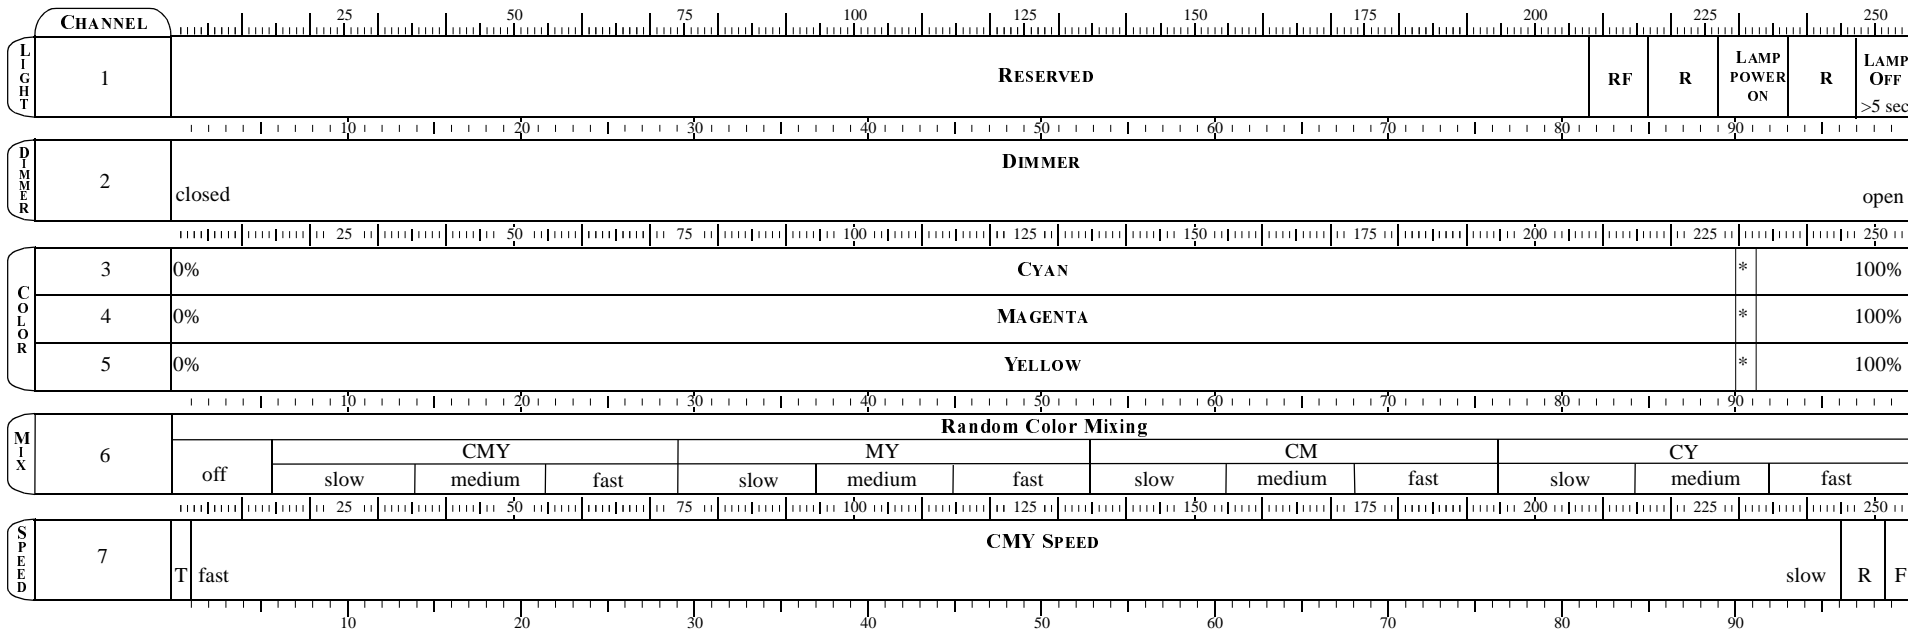

* Set CMY from 230 to 232 to override disabled function.
 T = tracking mode (0-2)
 RF=reset fixture
 R = reserved (no change)
 F = fast (252 -255)