


CROWN COMMERCIAL AUDIO SERIES — 140MAX PACK

 
QUICK-START GUIDE

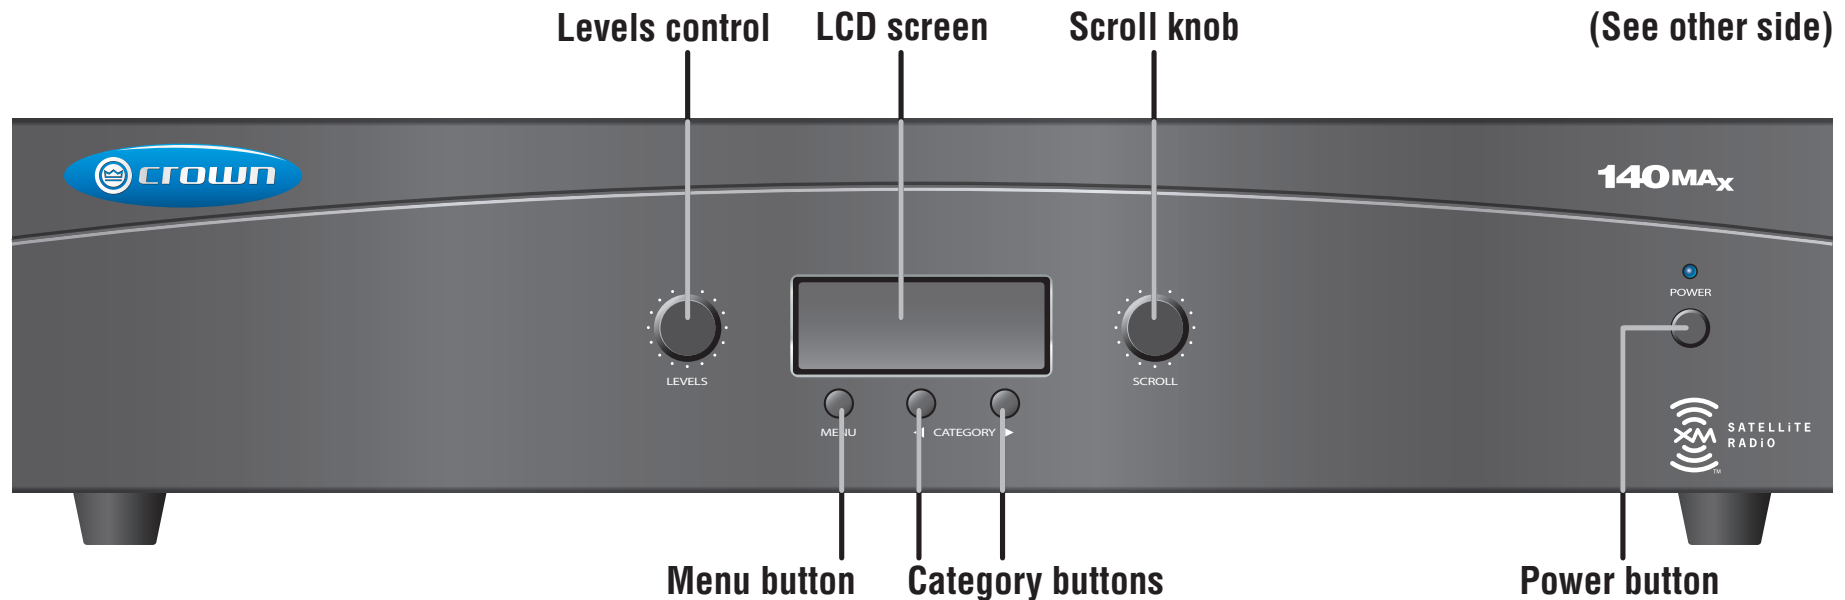

HOW TO LISTEN TO XM RADIO AND FIND CHANNELS

After making connections as shown on other side of this sheet, and after subscribing to XM Radio,

1. Press **Power Button** to turn on power.
2. Turn up **Levels control** for the desired volume.
3. Adjust antenna position to fill the signal-strength box in the LCD screen.
4. Turn **Scroll knob** to find a channel you like.
5. Press **Scroll knob** to listen to that channel.
6. If you want that channel to be a preset, press **Scroll knob** again.



HOW TO SELECT PRESET CHANNELS

1. Press **Menu** button until you see "Preset" in the LCD screen.
2. Turn **Scroll knob** until you see the Preset channel you want, then press **Scroll knob**.



HOW TO SELECT CHANNELS BY CATEGORY (MUSICAL GENRE)

1. Press the **Menu** button until you see "Category" in the bottom left of the display.
2. Press **Category up/down** buttons until you see a category you want.
3. Turn **Scroll knob** until you see a channel you want.
4. Press **Scroll knob** to listen to that channel. Press again to save that channel as a Preset.



CROWN COMMERCIAL AUDIO SERIES — 140Max PACK

QUICK-START GUIDE

