

INSTRUCTION MANUAL

AXB-232++

RS-232/422/485 INTERFACE



AV FOR AN IT WORLD

IMPORTANT SAFETY INSTRUCTIONS

- 1. READ these instructions.
- 2. KEEP these instructions.
- 3. HEED all warnings.
- 4. FOLLOW all instructions.
- 5. DO NOT use this apparatus near water.
- 6. CLEAN ONLY with dry cloth.
- 7. DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. DO NOT defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. PROTECT the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. ONLY USE attachments/accessories specified by the manufacturer.



12. USE ONLY with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- 13. UNPLUG this apparatus during lightning storms or when unused for long periods of time.
- 14. REFER all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. DO NOT expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
- 16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
- 17. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 18. DO NOT overload wall outlets or extension cords beyond their rated capacity as this can cause electric shock or fire.



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.



ESD Warning: The icon to the left indicates text regarding potential danger associated with the discharge of static electricity from an outside source (such as human hands) into an integrated circuit, often resulting in damage to the circuit.

WARNING:	То
WARNING:	No
WARNING:	Eq
WARNING:	То

To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture. No naked flame sources - such as lighted candles - should be placed on the product. Equipment shall be connected to a MAINS socket outlet with a protective earthing connection. To reduce the risk of electric shock, grounding of the center pin of this plug must be maintained.

COPYRIGHT NOTICE

AMX© 2016, all rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of AMX. Copyright protection claimed extends to AMX hardware and software and includes all forms and matters copyrightable material and information now allowed by statutory or judicial law or herein after granted, including without limitation, material generated from the software programs which are displayed on the screen such as icons, screen display looks, etc. Reproduction or disassembly of embodied computer programs or algorithms is expressly prohibited.

LIABILITY NOTICE

No patent liability is assumed with respect to the use of information contained herein. While every precaution has been taken in the preparation of this publication, AMX assumes no responsibility for error or omissions. No liability is assumed for damages resulting from the use of the information contained herein. Further, this publication and features described herein are subject to change without notice.

AMX WARRANTY AND RETURN POLICY

The AMX Warranty and Return Policy and related documents can be viewed/downloaded at www.amx.com.

Table of Contents

AXB-232++	5
Overview	5
Specifications	5
Installation and Wiring	7
Overview	7
Setting the Internal Jumpers	7
Setting Jumper JP4 To Terminate RS-422 Input With 100 ohms	7
Setting Jumper JP5 To Set the RS-422 Port For RS-485 Use	7
Setting the DIP Switches	8
Setting the DEVICE DIP switch	8
Setting the RS-232/422 DIP Switch	8
Wiring Devices to the AXB-232++	9
Preparing Captive Wires	
Wiring Guidelines	
Using AxLink	
Using AxLink and External Power Supply	
Using RS-232	9
Using Hardware Handshaking	10
Using PS_422	10
Using DS_425	10
Rack-Mounting the AXB-232++ (Optional)	11
Replacing the Lithium Batteries	11
Drogramming	12
	12
Send_Commands	12
B9M0FF	12
BAUDHIGH	
BAUDLOW	12
BAUDMED	12
CB10EE	12
CHARD	
CTSPSH	12
CTSPSHF	13
EOFF	13
RXCLR	
RXOFF	13
RXON	13
	13
XUFF	13
ZAP!	
Axcess Program Characteristics	14

Send_String Escape Sequences	14
27,17, <time></time>	. 14
27,18,1	. 14
27,18,0	. 14
27,19, <time></time>	. 14
27,20,0	. 14
27,20,1	. 14
AXB-232++ Program Statements	15
Xmodem Timing Commands	15
AxLink Master Statements	15
Reserved Channels	16
Channel	. 16
Function	. 16
Master Mode	16

AXB-232++

Overview

The AXB-232++ RS-232/422/485 Interface (FG5761-10) is an AxLink bus controller that provides remote control for devices that require a variety of control protocols. The AXB-232++ extends RS-232, RS-422, or RS-485 control to remote sources over the 4-wire AxLink data/power bus. Onboard processing and memory allows the controller to take on complex tasks by itself, reducing the processing burden for the Axcess control system. For example, the control system can use simplified commands for generic video switcher or code control, a modular driver program in the AXB-232++ can process control for specific makes and models.



FIG. 1 AXB-232++ front panel

Specifications

The following table lists the specifications for the AXB-232++.

Specifications	
Power	12 VDC @ 160 mA
Processor	On board 32-bit processor and 384K (of non-volatile memory) run Axcess programs independent of the control system. This relieves the AxLink bus and controller for the processing time for controlling those devices. (Requires Axcess Version 3.0 or higher.)
Asynchronous data standards	 Baud rates - 300, 600, 1200. 2400, 4800, 9600, 19200 and 38400. 56400 is supported via the BAUDMED Send Command (see the Send_Commands section on page 12 for details). 115200 is supported via the BAUDHIGH Send Command (see the Send_Commands section on page 12 for details). Data bits - 7, 8, and 9 Stop bits - 1 and 2 Parity - None, Odd, Even, Mark and Space
Buffers	1KB input buffer1KB AxLink buffer
Front Panel	
AxLink LEDs	 Green AxLink status indicator: <i>Full-Off</i> indicates no power is being received or the controller is not functioning properly. <i>One blink per second</i> power is active and AxLink communication is functioning. <i>Full-On</i> indicates power is active and AxLink data communication is not functional.
RX LED (Red)	Blinks to indicate the AXB-232++ is receiving RS-232, RS-422, or RS-485 data. The RX LED blinks even if the data being received is incorrect.
TX LED (Red)	Blinks to indicate the AXB-232++ is sending RS-232, RS-422, or RS-485 data.
DEVICE DIP Switch	An eight-position DIP switch used to set the device number for the AXB-232++. Refer to Setting the DEVICE DIP switch, on page 8, and Setting Jumper JP5 To Set the RS-422 Port For RS-485 Use section on page 7 for more information.
RS232/422 DIP Switch	An eight-position DIP switch used to set the communication parameters for the RS-232/422 device. Refer to <i>Setting the RS-232/422 DIP switch</i> , on page 8, for more information.

Specifications (Cont.)				
Rear Panel				
Hardware handshaking connector	An RTS/CTS data connector that can be wired for hardware handshaking if called for by the controlled device (4-pin male).			
RS422/232 connector	A captive-wire connector wired for RS-422/232 data control (8-pin male).			
AxLink connector	Receives power and data via the AxLink bus and AxLink system controller (4-pin male).			
Internal Jumpers	Sets differential input termination and enables RS-485 output.			
Supports	XON/XOFF software and hardware handshaking			
Dimensions (HWD)	1.5" x 5.5" x 5.5" (3.81 cm x 13.97 cm x 13.97 cm)			
Weight	1.1 lbs. (498.95 g)			
Enclosure	Metal with black matte finish			
Included Accessories	 AxLink connector (4-pin female) Phoenix connector (8-pin male) 			
Optional Accessories	 CC-232 Control Cable AC-RK Accessory Rack Kit 12 VDC power supply, 800 mA 			

Installation and Wiring

Overview

The AXB-232++ can be used as an independent RS-232/422/485-controlled interface by setting the internal jumpers. Configure the communication parameters using the DIP switches on the front panel.

Setting the Internal Jumpers



FIG. 2 Location of internal jumpers

Setting Jumper JP4 To Terminate RS-422 Input With 100 ohms

Terminating a device involves installing a 100 ohm line terminator, this is typically used to achieve better communication and signal integrity. You will want to terminate when the communication is at a high data rate or over a long distance. Termination can be harmful because it increases the current in the line, and more radiation that could interfere with signals.

Jumper JP4 places 100 Ohms termination across RS422 receive data pins 5 & 6:

- 1. Disconnect the RS-232/422/485 connectors.
- 2. Unscrew the two screws on the rear panel, and remove the panel.
- 3. Slide the circuit board out of the enclosure.
- 4. Locate the JP4 jumper (FIG. 2).
- 5. Install the jumper in the 'ON' position (default setting = OFF).
- 6. Slide the circuit board back into the enclosure.
- 7. Replace the panel, and refasten the screws.
- 8. Reconnect the RS-232/422/485 connectors.

Setting Jumper JP5 To Set the RS-422 Port For RS-485 Use

- 1. Disconnect the RS-232/422/485 connectors.
- 2. Unscrew the two screws on the rear panel, and remove the panel.
- 3. Slide the circuit board out of the enclosure.
- 4. Locate the JP5 jumper (see FIG. 2 on page 7).
- 5. Set jumper JP5 to the ON position (the default setting is OFF).
- 6. Slide the circuit board back into the enclosure.
- 7. Replace the panel, and refasten the screws.
- 8. Reconnect the RS-232/422/485 connectors.

Setting the DIP Switches

NOTE: Use the DIPSwitch 2.0 application available for free download from AMX to quickly figure out DIP Switch settings for all types of DIP Switches.

Setting the DEVICE DIP switch

Set the device number on DEVICE DIP switch, located on the front of the AXB-232++. The device can be 1 of the 255 devices in an Axcess control system. The device number must match the device assignment in the Axcess program. Device numbers are assigned into the following three segments:

- Cards 1 through 95
- Boxes 96 through 127
- Panels 128 through 255

Set the device number by setting the device DIP switches. The device number is the total of all of the switches in the ON position, and take effect by cycling the power. The following table shows the switch numbers and their corresponding values.

DEVICE DIP Switch Settings								
Position	1	2	3	4	5	6	7	8
Value	1	2	4	8	16	32	64	128

Setting the RS-232/422 DIP Switch

Set the stop bits, data bits, parity, and baud rate on the RS-232/422 DIP switch, located on the front panel (see FIG. 1 on page 5). The AXB-232++ supports the following asynchronous data standards:

Supported	Supported Asynchronous Data Standards				
Stop bits	1 and 2				
Data bits	7, 8, and 9				
Parity	None, Odd, Even, Mark, and Space				
Baud rates	 300, 600, 1,200, 2,400, 4,800, 9,600, 19,200 and 38,400. 57,600 is achieved by setting the DIP switch to 300 baud, and using the 'BAUDMED' Send_Command (see the Send_Commands section on page 12 for details). 115,200 is achieved by setting the DIP switch to 300 baud, and using the 'BAUDHIGH' Send_Command (see the Send_Commands section on page 12). 				

The table below shows the RS-232/422 DIP switch numbers, functions, and their corresponding values.

RS-232/422 DIP Switch Settings								
Switch	1	2	3	4	5	6	7	8
Function	Stop Bits	Data Bits		Parity			Baud Rates	
Setting	Off	Off	Off	Off	Off	Off	Off	Off
Value	2 bits	7 bits		Unused			300	
	On	On	On	Off	Off	On	Off	Off
	1 bit	8 bits		Unused			600	
	•		Off	On	Off	Off	On	Off
			Unused			1,200		
RS	6232/422		On	On	Off	On	On	Off
ممر				Unused			2,400	
			Off	Off	On	Off	Off	On
				Mark			4,800	
			On	Off	On	On	Off	On
				Even			9,600	
			Off	On	On	Off	On	On
				Odd			19,200	
			On	On	On	On	On	On
				None			38,400	

Wiring Devices to the AXB-232++

Preparing Captive Wires

To connect the wiring into a captive-wire connector:

- 1. Strip 1/4 inch off the wire insulation for all four wires.
- 2. Tin 2/3 of the exposed wire.
- 3. Insert each wire into the appropriate captive-wire connector up to the insulation.
- 4. Tighten the captive screws to secure the fit in the connector.

NOTE: If the device is using a separate power supply, do not connect the power wiring from the AXB-232++ to that device.

Wiring Guidelines

The interface requires a 12 VDC power to operate properly. The interface uses a PSN2.8 power supply. The Central Controller supplies power via the AxLink cable or external 12 VDC power supply. The maximum wiring distance between the Central Controller and interface is determined by power consumption, supplied voltage, and the wire gauge used for the cable.

The table below lists wire sizes and maximum lengths allowable between the AXB-RS232++ and Central Controller.

The maximum wiring lengths for using AxLink power are based on a minimum of 13.5 volts available at the Central Controller's power supply.

Wiring Guidelines at 160 mA				
Wire Size	Maximum Wiring Length			
18 AWG	733.57 feet (223.59 m)			
20 AWG	464.11 feet (141.46 m)			
22 AWG	289.35 feet (88.19 m)			
24 AWG	182.39 feet (55.59 m)			

Using AxLink

Connect the AxLink wiring to the connector on the AXB-232++ as shown in FIG. 3.



FIG. 3 AxLink bus and +12 VDC power wiring

Using AxLink and External Power Supply

Connect the AxLink and power wiring to the connector on the AXB-232++ as shown in FIG. 4.



FIG. 4 AxLink bus and +12 VDC power wiring

Using RS-232

When communicating via RS-232, connect the wiring as shown in FIG. 5.



FIG. 5 RS-232 wiring

Using Hardware Handshaking

When the controlled device requires hardware handshaking, connect the wiring as shown in FIG. 6.



FIG. 6 Hardware handshaking wiring

Using RS-422

When communicating via RS-422, connect the wiring as shown in FIG. 7.





Using RS-485

When communicating via RS-485, connect the wiring as shown in FIG. 8.



FIG. 8 RS-485 wiring

Rack-Mounting the AXB-232++ (Optional)

To rack-mount the AXB-232++ into the optional AC-RK Accessory Rack Kit:

- 1. Remove any connected power, and AxLink and RS-232 connectors from the rear panel.
- 2. Remove the 2 screws on the front panel of the AXB-232++, and remove the front panel as well as the space bracket behind the panel.
- 3. Place the unit in the appropriate opening in the AC-RK.
- 4. Place the front panel of the AXB-232++ on the front of the rack, over the unit.
- 5. Fasten the front panel to the rack and unit with the 2 screws you removed.

Replacing the Lithium Batteries

The AXB-232++'s lithium batteries have a life of approximately 5 years to protect its memory. When DC power is on, the batteries are not used. When you install the AXB-232++, record the date the batteries should be replaced.

NOTE: There is a danger of explosion if you replace the batteries incorrectly. Replace batteries with the same or equivalent type recommended by the manufacturer. Dispose of the used batteries according to the manufacturer's instructions. Never recharge, disassemble, or heat batteries above 212°F (100°C). Never solder directly to the batteries or expose the contents of the batteries to water.

Before removing the lithium batteries, contact your dealer and verify that they have a current copy of your program to avoid an inadvertent loss of data and prevent an unnecessary service outage.

- 1. Discharge the static electricity from your body.
- 2. Unplug the two-pin power connector and any other connectors.
- 3. Remove the two screws on the front panel, remove the front panel, and slide the circuit board out of the enclosure.
- 4. Carefully slide each battery out of its socket (FIG. 9), and insert the new battery.

Battery (CR2032 type - 20mm coin cell)

FIG. 9 Lithium battery and socket

- 5. Slide the circuit board back into the enclosure, replace the front panel, and refasten the 2 screws.
- 6. Reconnect any connectors that you removed.

Programming

Send_Commands

The AXB-232++ supports the same command set as the AXC-232. The following table lists the AXB-232++ Send_Commands.

AXB-232+	+ Send_Commands
B9MOFF	Sets data bit mode to normal with DIP switch settings (default).
	Syntax:
	'B9MOFF'
	Example:
	SEND_COMMAND AXB232, 'B9MOFF'
DOMON	
DAMON	Syntax.
	The mode, nine data bits with one stop bit, overrides the data, stop, and parity settings. When the AXB-232++ issues this
	command, it locks in the baud rate determined by the current DIP switch setting.
	Example:
	SEND_COMMAND_AXB232, 'B9MON'
BAUDHIGH	Enables 115,200 baud rate when the DIP switch is set to 300 baud.
	Example:
	SEND_COMMAND AXB232, 'BAUDHIGH'
BAUDLOW	Enables 300 baud rate when the DIP switch is set to 300 baud setting (default).
	Syntax:
	'BAUDLOW'
	Example:
	SEND_COMMAND AXB232, 'BAUDLOW'
BAUDMED	Enables 57,600 baud rate when the DIP switch is set to 300 baud.
	Syntax:
	BAUDMED'
	SEND COMMAND AXR232 'BAUDMED'
CRION	Enables placement of characters in the huffer specified by CPEATE BUIEFER 1 (default)
CBTON	Suntax.
	'CBION'
	Example:
	SEND_COMMAND AXB232, 'CB10N'
	Enables placement of characters in the buffer.
CB10FF	Disables placement of characters in the buffer specified by CREATE_BUFFER 1.
	Syntax:
	CBIOFF'
	SEND COMMAND AXB232. 'CB10FF'
	Disables placement of characters in the buffer.
CHARD	Sets delay between all transmitted characters to the increment specified.
	Syntax:
	'CHARD- <time>'</time>
	Variable:
	time = 100 microsecond increments 0 - 255.
	Example:
	SEND_COMMAND_AXB232, 'CHARD-10' Sets 1mS delay between all transmitted characters
CTEDEU	Sets this deay between an transmitted characters.
CISPSH	channel is on
	Svntax:
	'CTSPSH'
	Example:
	SEND_COMMAND AXB232,'CTSPSH'

AXB-232	++ Send_Commands (Cont.)
CTSPSHF	Disables the 'CTSPSH' command.
	Syntax:
	'CTSPSHF'
	Example:
	SEND_COMMAND AXB232,'CTSPSHF'
EOFF	Disables the 'EON ' command (default).
	Syntax:
	'EOFF'
	Example:
	SEND_COMMAND AXB232, 'EOFF'
EON	Forces the AXB-232++ to ignore transmitted characters on its receiver. When using RS-485, the TX and RX are tied together.
	Syntax:
	'EON'
	Example:
	SEND_COMMAND AXB232, 'EON'
HSOFF	Disables hardware handshaking (default).
	Syntax:
	'HSOFF'
	Example:
	SEND_COMMAND AXB232, 'HSOFF'
HSON	Enables hardware handshaking.
	Syntax:
	'HSON'
	Example:
	SEND_COMMAND_AXB232, 'HSON'
	Enables naroware nanosnaking.
RXCLR	Clears any characters in the Receive buffer waiting to be sent to the Master. If 'RXCLR' is sent while RTS is low, RTS returns
	nign.
	Syntax:
	Fxample
	SEND COMMAND AXB232. 'RXCLR'
DVOEE	AVP 222 L L dess not pass on received characters to the Master (default)
RAUFF	AND-232++ dues not pass on received characters to the Master (default).
	Example:
	SEND_COMMAND AXB232,'RXOFF'
RXON	Finables AXB-232++ to send incoming characters received to the Master. The AXB-EM automatically sends this command to
10.01	the AXB-232++ when it executes 'CREATE BUFFER'.
	Syntax:
	'RXON'
	Example:
	SEND_COMMAND AXB232, 'RXON'
TXCLR	Clears and stops any characters waiting in the Transmit buffer.
	Syntax:
	'TXCLR'
	Example:
	SEND_COMMAND AXB232,'TXCLR'
XOFF	Disables software handshaking (default).
	Syntax:
	'XOFF'
	Example:
	SEND_COMMAND AXB232, 'XOFF'
XON	Enables software handshaking.
	Syntax:
	'XON'
	Example:
	SEND_COMMAND AXB232, 'XON'
ZAP!	Clears the Axcess program in the AXB-232++.
	Syntax:
	'ZAP!'
	Example:
	SEND_COMMAND AXB232, 'ZAP!'

Axcess Program Characteristics

The AXB-232++ is capable of running Axcess programs. It handles string processing, relieving AxLink and the Master of the processing times.

Send_String Escape Sequences

The AXB-232++ does not regard certain three-character combinations within a Send_String program as literal characters, but as commands. The following table lists those combinations.

Send_String	Escape Sequences
27,17, <time></time>	Sends a break character of the specified length of time. Syntax: "27,17, <time>" Variable: time = 100 microsecond increments 1 - 255. Example: SEND_STRING AXB232,"27,17,10" Sends a break character of 1mS.</time>
27,18,1	Sets the ninth data bit to 1 for all of the following characters to be transmitted. Syntax: "27,18,1" Example: SEND_STRING AXB232,"27,18,1" Used in conjunction with the 'B9MON' command.
27,18,0	Clears the ninth data bit to 0 for all of the next characters to be transmitted. Syntax: "27,18,0" Example: SEND_STRING AXB232,"27,18,0" Used in conjunction with the 'B9MON' command.
27,19, <time></time>	Inserts a delay before the next character to be transmitted. Syntax: "27,19, <time>" Variable: time = 100 microsecond increments 1 - 255. Example: SEND_COMMAND AXB232, "27,19,10" Inserts a 1mS delay before the next character to be transmitted.</time>
27,20,0	Asserts RTS hardware handshake output high. Syntax: "27,20,0" Example: SEND_COMMAND AXB232,"27,20,0"
27,20,1	Asserts RTS hardware handshake output low. Syntax: "27,20,1" Example: SEND_COMMAND AXB232,"27,20,1"

AXB-232++ Program Statements

The Axcess program of the AXB-232++ communicates with the master as Device 0. Its device communicates with the RS232/422 Input/Output (I/O) of the AXB-232++ as Device 1. The following table lists AXB-232++ statements.

AXB-232++ Program Statements		
Statement	Function	
CREATE_BUFFER 0, buffer	Places strings that come from the Master into <i>buffer</i> . If no CREATE_BUFFER 0 exists, the incoming strings from the Master are sent out the RS232 port.	
CREATE_BUFFER 1, buffer	Places strings that come from the RS-232 port into <i>buffer</i> . If no CREATE_BUFFER 1, exists, the incoming strings are sent to the Master.	
CREATE_BUFFER 2, buffer	Places commands (i.e. SEND_COMMANDs) that come from the AxLink Master into the <i>buffer</i> . Each command will be preceded by 2 characters: The first character will always be an ^{1*1} , the second character is the length of the command, the remaining <i>n</i> characters (as given in the second character) are the command itself.	
CREATE_LEVEL 0, level, variable	Places levels sent by the master for <i>level</i> in <i>variable</i> .	
OFF[0, channel]	Sends a RELEASE to the Master.Sends a message that <i>channel</i> is off.	
OFF[1, channel]	Turns off a <i>channel</i> . This command has no external effect. It can be used as status.	
ON[0, channel]	Sends a PUSH to the Master.Sends a message that <i>channel</i> is on.	
ON[1, channel]	Turns on channel. This command has no external effect. It can be used as status.	
SEND_COMMAND 0, command	Sends command to the Master. Provides support for commands like 'RDS'.	
SEND_COMMAND 1, command	Sends <i>command</i> to the AXB-232++ as if the Master had sent it.	
SEND_COMMAND AXB_232, 'BAUDHIGH'	Sets the baud rate to 115.2k (DIP switch set to 300).	
SEND_COMMAND AXB_232, 'BAUDLOW'	Sets the baud rate to 300 (DIP switch set to 300).	
SEND_COMMAND AXB_232, 'CB10N'	Enables placement of characters in the <i>buffer</i> specified by CREATE_BUFFER 1.	
SEND_COMMAND AXB_232, 'CB10FF'	Disables placement of characters in the <i>buffer</i> specified by CREATE_BUFFER 1.	
SEND_LEVEL 0, level, variable	Sends variable as the value for level.	
SEND_STRING 0, string	Sends string to the Master.	
SEND_STRING 1, string	Sends string out the RS-232 port.	

Xmodem Timing Commands

The following table lists the AXB-232++ Xmodem timing commands. Xmodem timeouts exist to accommodate potential Ethernet delays and for consistency among and within products. Any Xmodem timing command will change timing and retries for Axcess code download as well as Softrom transfer.

Xmodem Timing Commands	
Command	Description
'TIMEOUT XX'	Xmodem timeouts via the Program Port. (Default is 10 sec.)
SEND_COMMAND SERIAL, 'XMTO XX'	Over AxLink, where XX is from one to 50 seconds in 1-second increments.
'RETRY XX'	Xmodem retries via the Program Port. (Default is 5.)
SEND_COMMAND SERIAL, 'XMRT XX'	Over AxLink where XX is from one to 10 in increments of one.

AxLink Master Statements

The following table lists the AxLink Master statements for the AXB-232++.

AxLink Master Statements	
Statement	Function
MIN_TO	Activates a channel or variable for a minimum amount of time-even if the corresponding device-channel is released. The time duration is determined by SET_PULSE_TIME.
ON[AXB_232, channel]	Executes PUSH[0,channel] within AXB-232++.
OFF[AXB_232,channel]	Executes RELEASE[0, channel] within AXB-232++.

AXB-232++ Program Statements (Cont.)		
PULSE	Turns on a channel or variable for a certain amount of time. Once the time elapses, the channel or variable is turned off. The Pulse time remains the same value until it is changed within the program. Example: SET_PULSE_TIME(12) Sets the current duration of future Pulses to 1.2 seconds	
CEND COMMAND AVE 222 command	AVP 2221 L interprets command	
SEND_COMMAND AXB_232, Collinatio		
SEND_LEVEL AXB_232, level, variable	Places the <i>variable</i> into the CREATE_LEVEL variable, if it were defined in the AXB-232++ DEFINE_START section.	
SEND_STRING AXB_232, string	Places the <i>string</i> into the CREATE_BUFFER buffer, if you defined the buffer in the AXB-232++ DEFINE_START section. If it were not, this command transmits the <i>string</i> out the RS-232 port.	
то	Activates a channel or variable for as long as the corresponding device-channel of its Push statement is activated. When the device-channel referenced by the Push statement changes from off to on, the TO starts activating the device-channel or variable in the brackets following it. When the device-channel of its Push is released, the TO statement stops activating its device-channel or variable. For this reason, TO must be found only underneath a Push statement.	

Reserved Channels

The following table lists the channels reserved on Device 0.

Reserved Channels		
Channel	Function	
Channel 254	 This is only valid within the device and is not sent to the AxLink Master. Reflects AxLink status: When AxLink is active, this channel is on. When AxLink is inactive, this channel is off. When this channel changes state, the AXB-232++ generates a PUSH or RELEASE. 	
Channel 255	Reflects the state of the CTS input. If the AXB-232++ receives a 'CTSPSH' command, it generates PUSHes for both the Master and the AXB-232++.	

Master Mode

When an Axcess device is placed in "Master Mode", the Central Controller's PROGRAM port is moved to the Axcess device's RS-232 port. Master Mode can be very useful in situations where physical access to the Central Controller's PROGRAM port is not practical (for example, in installations where the Central Controller is located a long distance from the bus device(s)).

- To enter Master Mode, press the escape key, then type either MC or MD:
 - $<\!$ esc>MC connects the device in Master Mode
 - <esc>MD disconnects the device

(where <esc> means "press the Esc key")



© 2016 Harman. All rights reserved. NetLinx, AMX, AV FOR AN IT WORLD, HARMAN, and their respective logos are registered trademarks of HARMAN. Oracle, Java and any other company or brand name referenced may be trademarks/registered trademarks of their respective companies. AMX does not assume responsibility for errors or omissions. AMX also reserves the right to alter specifications without prior notice at any time. The AMX Warranty and Return Policy and related documents can be viewed/downloaded at www.amx.com.
 3000 RESEARCH DRIVE, RICHARDSON, TX 75082 AMX.com | 800.222.0193 | 469.624.8000 | +1.469.624.7400 | fax 469.624.7153 AMX (UK) LTD, AMX by HARMAN - Unit C, Auster Road, Clifton Moor, York, Y030 4GD United Kingdom • +44 1904-343-100 • www.amx.com/eu/