

Overview

The AC-3008 Podium Mounting Kit for Novara CP-3008 ControlPad (FIG. 1) provides a simple and elegant means for mounting a Novara CP-3008 8-Button ControlPad flush onto the top edge of a podium. Each kit is available with a mounting bracket and faceplate, and comes in three finishes (white, black & aluminum). The kit is easy to install and mounts the ControlPad securely and seamlessly onto the podium.

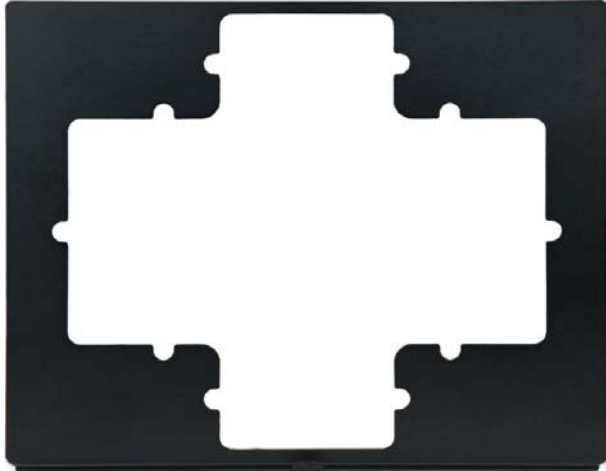


FIG. 1 AC-3008 PODIUM MOUNT BRACKET

Product Specifications

AC-3008 PODIUM MOUNT BRACKET SPECIFICATIONS	
Material:	Metal with black matte finish
Dimensions (LWH):	1/4" x 6" x 4 11/16" (0.64 cm x 15.2 cm x 11.9 cm)
Weight:	0.60 oz. (17 g)
Certifications:	RoHS, UL
Included Accessories (kits only):	(1) AC-CP-BRK, Podium Mount Bracket (2) screw, #4-40 x .250, PFH, 82DG, SS (2) screw, #4-40 x .250, Torx Flat head, Black Zinc (1) Faceplate, 8-Button ControlPad, Novara, Podium Mount, CP-3008* <i>*Note: this faceplate must be used in conjunction with a CP-3008 8-Button ControlPad, ordered separately</i>

Installation

Note: The Podium Mount Bracket should be installed into a wood or metal surface at least 3/8" (0.95 cm) thick.

The Podium Mount Bracket mounts onto standard 2 gang US, UK, or EU back boxes. Install the back box as normal according to instructions for your ControlPad. See the *NOVARA 3000 Series ControlPads Operation/Reference Guide* for information on mounting specifications for your ControlPad.

The following steps describe how to install the AC-3008 Podium Mount Bracket:

- Place the Podium Mount Bracket flat on the mounting surface. If you are installing the ControlPad using a 2 gang back box, line up the notches on the mounting bracket with the screw holes on the back box.
Note: You can place the locking tab facing up or down since the faceplate can connect to the mounting bracket from both its top and bottom.
- Place the circuit board onto the mounting bracket, ensuring that it fits perfectly over the bracket and the bracket is sitting flush with the edges of the circuit board.
- Attach the circuit board to the mounting bracket by using the screws provided with the ControlPad through the screw holes in the circuit board and the notches on the bracket and into the screw holes in the back box, securing the circuit board and mounting bracket onto the podium.

Note: If you need to label the buttons on the ControlPad or replace any key caps, it is best to do so before attaching the faceplate. Consult the Installation Guide included with your ControlPad for instructions.

- Put the faceplate over the circuit board, and slip the locking tab into the lock slot on the top or bottom rim of the faceplate, depending on whether you installed the mounting bracket facing up or down.

Note: If necessary, use a small screwdriver to slightly bend the locking tab so it connects and locks more easily into the faceplate.

- Use the supplied #6 screws supplied with the ControlPad to secure the faceplate to the circuit board.

There are two screw holes on the top of the faceplate rim, and two on the bottom. Use either the Torx screws or #4 Phillips-head screws to attach the faceplate.

Use a Torx driver with a T8 tip for the Torx screws; use a Phillips-head screwdriver for the Phillips-head screws.

- Reattach the knob to the faceplate by sliding it onto the knob shaft as far as it can go. You should be able to press the knob as a button for extra functionality.

- Tighten the knob in place using a .050" hex driver in the hole in the side of the knob.

FIG. 2 displays how the Podium Mounting Bracket is installed with a CP-3008 ControlPad

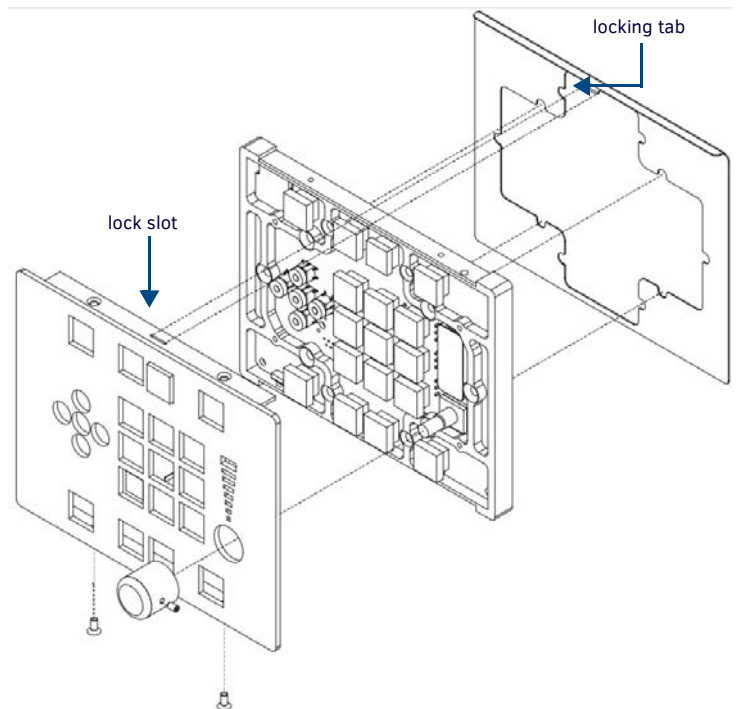


FIG. 2 INSTALLING THE AC-3008

