


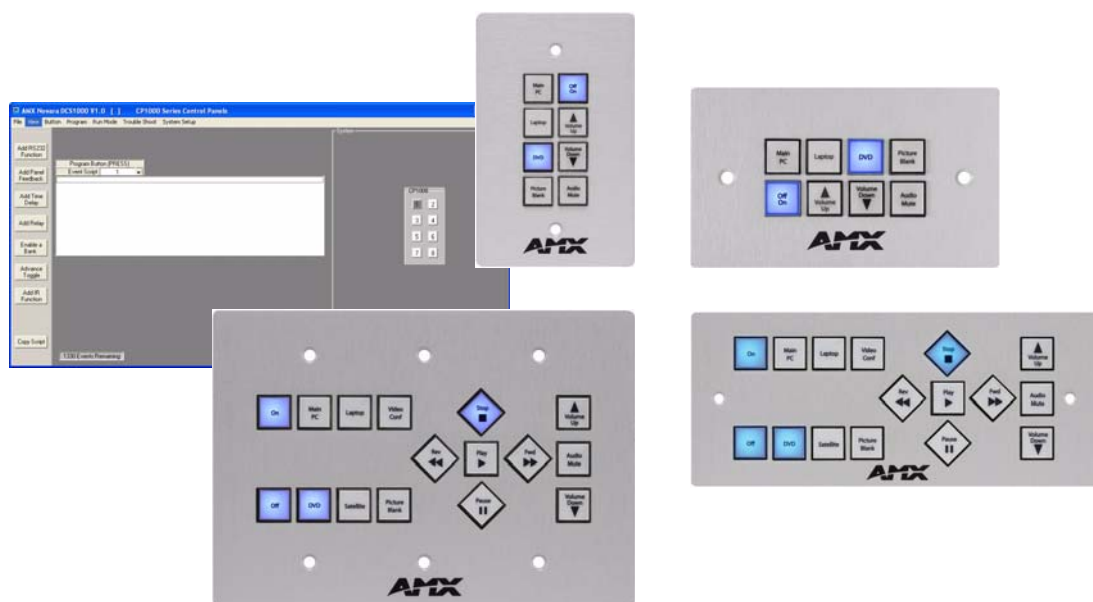

INSTRUCTION MANUAL

NOVARA CONTROLPADS AND KEYPADS

CP-1008-US-BA/BL/WH, CP-1016-TR-US-BA/BL/WH,
CP-1008-UK-BA/BL/WH, CP-1016-TR-UK-BA/BL/WH,
CP-1008-EU-BA/BL/WH,
SP-08-AX-US-BA/BL/WH, SP-16-TR-US-BA/BL/WH,
SP-08-AX-UK-BA/BL/WH, SP-16-TR-UK-BA/BL/WH,
SP-08-AX-EU-BA/BL/WH



IMPORTANT SAFETY INSTRUCTIONS

1. READ these instructions.
2. KEEP these instructions.
3. HEED all warnings.
4. FOLLOW all instructions.
5. DO NOT use this apparatus near water.
6. CLEAN ONLY with dry cloth.
7. DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. DO NOT defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. PROTECT the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. ONLY USE attachments/accessories specified by the manufacturer.



12. USE ONLY with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. UNPLUG this apparatus during lightning storms or when unused for long periods of time.
14. REFER all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. DO NOT expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
17. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
18. DO NOT overload wall outlets or extension cords beyond their rated capacity as this can cause electric shock or fire.



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.



ESD Warning: The icon to the left indicates text regarding potential danger associated with the discharge of static electricity from an outside source (such as human hands) into an integrated circuit, often resulting in damage to the circuit.

- WARNING:** To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.
- WARNING:** No naked flame sources - such as candles - should be placed on the product.
- WARNING:** Equipment shall be connected to a MAINS socket outlet with a protective earthing connection.
- WARNING:** To reduce the risk of electric shock, grounding of the center pin of this plug must be maintained.

COPYRIGHT NOTICE

AMX© 2015, all rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of AMX. Copyright protection claimed extends to AMX hardware and software and includes all forms and matters copyrightable material and information now allowed by statutory or judicial law or herein after granted, including without limitation, material generated from the software programs which are displayed on the screen such as icons, screen display looks, etc. Reproduction or disassembly of embodied computer programs or algorithms is expressly prohibited.


LIABILITY NOTICE


No patent liability is assumed with respect to the use of information contained herein. While every precaution has been taken in the preparation of this publication, AMX assumes no responsibility for error or omissions. No liability is assumed for damages resulting from the use of the information contained herein. Further, this publication and features described herein are subject to change without notice.

AMX WARRANTY AND RETURN POLICY

The AMX Warranty and Return Policy and related documents can be viewed/downloaded at www.amx.com.

ESD WARNING

	<p>To avoid ESD (Electrostatic Discharge) damage to sensitive components, make sure you are properly grounded before touching any internal materials.</p> <p>When working with any equipment manufactured with electronic devices, proper ESD grounding procedures must be followed to make sure people, products, and tools are as free of static charges as possible. Grounding straps, conductive smocks, and conductive work mats are specifically designed for this purpose. These items should not be manufactured locally, since they are generally composed of highly resistive conductive materials to safely drain static discharges, without increasing an electrocution risk in the event of an accident.</p> <p>Anyone performing field maintenance on AMX equipment should use an appropriate ESD field service kit complete with at least a dissipative work mat with a ground cord and a UL listed adjustable wrist strap with another ground cord</p>
---	--

	<p>WARNING: Do Not Open! Risk of Electrical Shock. Voltages in this equipment are hazardous to life. No user-serviceable parts inside. Refer all servicing to qualified service personnel.</p> <p>Place the equipment near a main power supply outlet and make sure that you can easily access the power breaker switch.</p>
---	---

WARNING: This product is intended to be operated ONLY from the voltages listed on the back panel or the recommended, or included, power supply of the product. Operation from other voltages other than those indicated may cause irreversible damage to the product and void the products warranty. The use of AC Plug Adapters is cautioned because it can allow the product to be plugged into voltages in which the product was not designed to operate. If the product is equipped with a detachable power cord, use only the type provided with your product or by your local distributor and/or retailer. If you are unsure of the correct operational voltage, please contact your local distributor and/or retailer.

FCC AND CANADA EMC COMPLIANCE INFORMATION:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Approved under the verification provision of FCC Part 15 as a Class B Digital Device.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

CAN ICES-3 (B)/NMB-3(B)

EU COMPLIANCE INFORMATION:

Eligible to bear the CE mark; Conforms to European Union Low Voltage Directive 2006/95/EC; European Union EMC Directive 2004/108/EC; European Union Restriction of Hazardous Substances Recast (RoHS2) Directive 2011/65/EU; European Union WEEE (recast) Directive 2012/19/EU; European Union Registration, Evaluation, Authorization and Restriction of Chemicals (REACH) Directive 2006/121/EC.

You may obtain a free copy of the Declaration of Conformity by visiting <http://www.amx.com/techcenter/certifications.asp>.

WEEE NOTICE:

	<p>This appliance is labeled in accordance with European Directive 2012/19/EU concerning waste of electrical and electronic equipment (WEEE). This label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.</p>
---	--

Table of Contents

Novara ControlPads	7
Overview	7
Product Specifications	8
Mounting Specifications - 8-Button ControlPads.....	9
CP-1008-US	9
CP-1008-UK	10
CP-1008-EU	11
Mounting Specifications - 16-Button ControlPads	12
CP-1016-US	12
CP-1016-TR-UK	13
Wiring and Connections	14
Novara ControlPads - Rear Panel Connectors.....	14
Relay 1 / Relay 2 Connectors	14
RS232 Out Connector	15
IR Out Connector	15
Input Connector	15
Power Supply Connector	16
USB Program Port.....	16
Button Layout	16
Novara AxLink Keypads	17
Overview	17
Product Specifications	18
Mounting Specifications - 8-Button Keypads.....	19
SP-08-AX-US.....	19
SP-08-AX-UK.....	20
SP-08-AX-EU	21
Mounting Specifications - 16-Button Keypads	22
SP-16-AX-TR-US	22
SP-16-AX-TR-UK	23
Wiring and Connections	24
ControlPads - Rear Panel Connectors	24
Power Supply Connector	24
Daisy-Chaining Keypads (AxLink only).....	25
Setting DIP Switches to Assign Alternate Button Numbering	26
Alternate Button Numbering: 8-Button Keypads	26
Alternate Button Numbering: 16-Button Keypads	26
Setting the AxLink Address DIP Switch.....	27
Setting the AxLink Device Address	27
Programming AxLink Keypads	27

Button Labelling	28
Overview	28
Installing Acetate Button Labels and Key Caps - READ THIS FIRST!	28
Removing/Replacing Button Labels	30
Disassembling the Novara Keypad	30
Replacing Key Caps / Button Labels	31
Re-Assembling the Keypad	31
Exploded View - 8-Button US Version	32
Exploded View - 8-Button UK/EU Version	32
Exploded View - 16-Button US/UK Version	33
AMX Novara DCS1000 Device Configuration Software	34
Installing the AMX Novara DCS1000 Application	34
Launching AMX Novara DCS1000	35
Overview	35
Downloading the Program to the ControlPad	36
Specifying Button Feedback	36
Adding Feedback to a Button Script (Example)	36
Button Feedback - On / All Buttons Off	37
Button Feedback - On / Group Off	37
Testing Grouped Feedback	38
Delay Time	38
Adding Delay Time to a Script (Example)	38
RS232 Functions	39
Opening RS232 Library Files	39
Adding a RS232 Command to an Event	39
Viewing RS232 Libraries	40
Adding a New Device To a RS232 Library	41
Adding a New RS232 Function to a Device	41
Copying RS232 Functions From an Existing Device to a New Device	41
Testing RS232 Functions	41
Creating a Test Serial Cable	42
Verifying RS232 Commands	42
IR Commands	42
Opening IR Library Files	42
Adding an IR Command to an Event	42
AMX IR Libraries	43
Loading an Existing IR Library	43
Creating New IR Libraries	43
Importing AMX IR Library (IRL) Files	43
Downloading IR Files From www.AMX.com	44
Creating New IR Libraries Using an IRIS IR/Serial Data Capture Device	47
Importing IR HEX File Codes	48

Using IR HEX Codes To Create New IR Libraries	49
Testing IR Functions	50
Input Port Scripts	51
Changing a Button Action	51
Press	51
Release	51
Toggle	51
Bank Assign	51
Bank Enable	53
Using Bank Assign to Control Two Projectors - Example	54
Advance Toggle	57
Copy and Paste	57
Start Up	58
Time Out	58
File Menu	59
Run Mode	59
Downloading the Program	59
Downloading To an Auto-running panel	59
Adding a Relay Unit	60
Control Strings for AxLink	61
Available Control Strings	61

Novara ControlPads

Overview

Novara ControlPads offer the ability to easily control presentation devices such as projectors, projection screens, video displays and other audio visual equipment as well as a variety of serial or IR-controllable devices like lighting and window treatments.

Novara ControlPads are designed to be easily configurable allowing control of equipment by RS232 commands and IR.

The ControlPads are configured using the *AMX Novara DCS1000 Device Configuration Software* software application, available for download from www.amx.com. Refer to the *AMX Novara DCS1000 Device Configuration Software* section on page 34 for details.

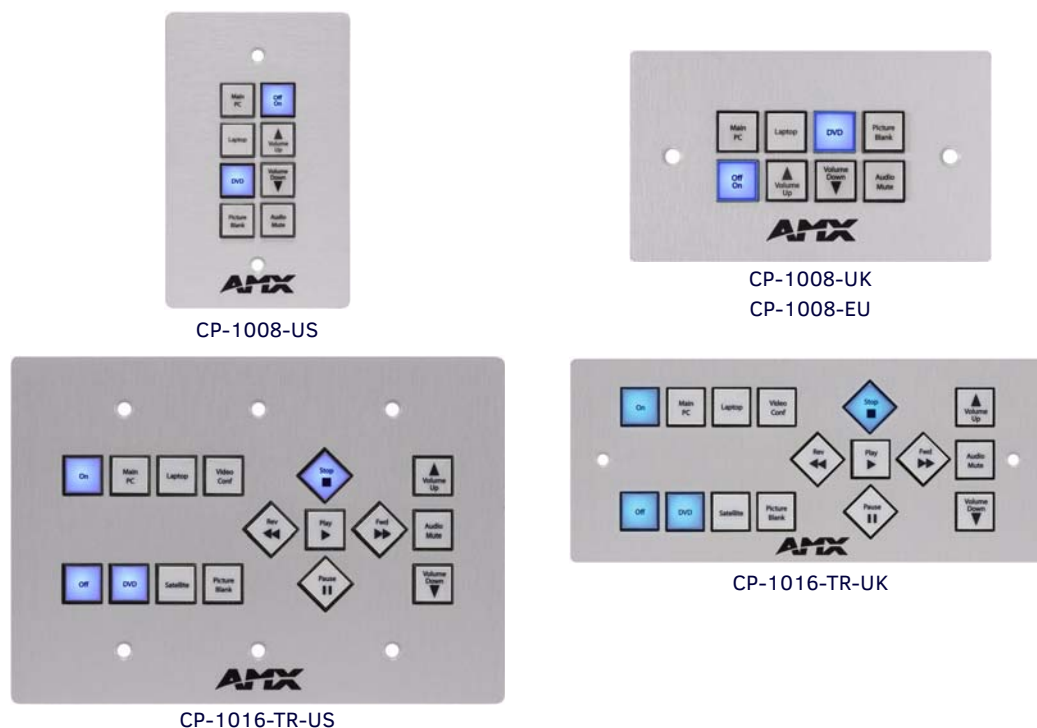


FIG. 1 Novara 1000 Series ControlPads

The Novara 1000 Series of ControlPads include:

Novara 1000 Series ControlPads		
Name	Description	Colors/FG#s
CP-1008-US 8-Button ControlPad	Fits 1-gang US conduit boxes. Refer to the <i>Minimum Internal Clearance for 1-Gang US Conduit Boxes</i> section on page 9 for details.	<ul style="list-style-type: none"> White: FG1301-08-SW Black: FG1301-08-SB Brushed Aluminum: FG1301-08-SA
CP-1008-UK 8-Button ControlPad	Fits standard 2-gang UK conduit box sizes	<ul style="list-style-type: none"> White: FG1301-08-KW Black: FG1301-08-KB Brushed Aluminum: FG1301-08-KA
CP-1008-EU 8-Button ControlPad	Fits standard 2-gang European conduit box sizes	<ul style="list-style-type: none"> White: FG1301-08-EW Black: FG1301-08-EB Brushed Aluminum: FG1301-08-EA
CP-1016-TR-US 16-Button ControlPad	Fits NEC-Compliant 3-gang US conduit boxes. Refer to the <i>Minimum Internal Clearance for 3-Gang US Conduit Boxes</i> section on page 12 for details.	<ul style="list-style-type: none"> White: FG1301-16-SW Black: FG1301-16-SB Brushed Aluminum: FG1301-16-SA
CP-1016-TR-UK 16-Button ControlPad	Fits standard 3-gang UK conduit box sizes.	<ul style="list-style-type: none"> White: FG1301-16-KW Black: FG1301-16-KB Brushed Aluminum: FG1301-16-KA

Product Specifications

Novara 1000 Series ControlPads	
Power Requirements:	<ul style="list-style-type: none"> Min: 250mA @ 12 VDC Max: 420mA @ 12 VDC (with all buttons illuminated to max brightness and 2 external devices attached to the RELAY 1/2 Ports in the ON state).
Button Layout:	<ul style="list-style-type: none"> 8 or 16 buttons Blue, backlit buttons with programmable feedback
Max number of events per ControlPad:	1330
Rear Panel Connectors:	<ul style="list-style-type: none"> RELAY 2 - Output port: can be used to control external devices (i.e. the AMX UPC-20+ Universal Power/Motor Controller - not included). <i>This is a current sink (not a voltage driver).</i> Max current sink - 100mA @ 12V. SHARED 12V - Common +12V. RELAY 1 - Output port: can be used to control external devices (i.e. the AMX UPC-20+ Universal Power/Motor Controller- not included). <i>This is a current sink (not a voltage driver).</i> Max current sink - 100mA @ 12V. RS232 OUT - RS232 output port: supports one-way RS-232 control (TX only). GND - Ground IR OUT - Connects to an IR Emitter to support one-way IR control (TX only). GND - Ground INPUT - Input detection: connects to an external switch (such as a PIR switch), for detecting a High to Low or Low to High state. -VE - Connects to the included 12V power supply (-). +VE - Connects to the included 12V power supply (+).
Top Panel Connector:	1 USB device configuration port.
Supported Baud Rates:	1200 - 115200
Dimensions (HWD):	<ul style="list-style-type: none"> CP-1008-US: 4.685" x 2.913" x 1.059" (119 mm x 74 mm x 27 mm) CP-1008-UK: 3.386" x 5.787" x 1.059" (86 mm x 147 mm x 27 mm) CP-1008-EU: 3.150" x 5.984" x 1.059" (80 mm x 152 mm x 27 mm) CP-1016-TR-US: 4.724" x 6.693" x 1.059" (120 mm x 170 mm x 27 mm) CP-1016-TR-UK: 3.385" x 8.140" x 1.170" (86 mm x 207 mm x 30 mm)
Weight:	<ul style="list-style-type: none"> CP-1008-US: 0.30 lbs (136 g) CP-1008-UK: 0.35 lbs (159 g) CP-1008-EU: 0.35 lbs (159 g) CP-1016-TR-US: 0.55 lbs (249 g) CP-1016-TR-UK: 0.65 lbs (295 g)
Included Accessories:	<ul style="list-style-type: none"> Button Kit - includes acetate sheet with 50 pre-cut button label inserts and clear plastic Key Caps External 12V Power Supply (57-1301-SA)
Certifications:	<ul style="list-style-type: none"> IEC 60950 FCC/CE RoHS compliant

Mounting Specifications - 8-Button ControlPads

NOTE: US version Novara ControlPads are designed to fit in NEC-Compliant wall boxes only. These devices will not fit properly in non-NEC-Compliant wall boxes.

CP-1008-US

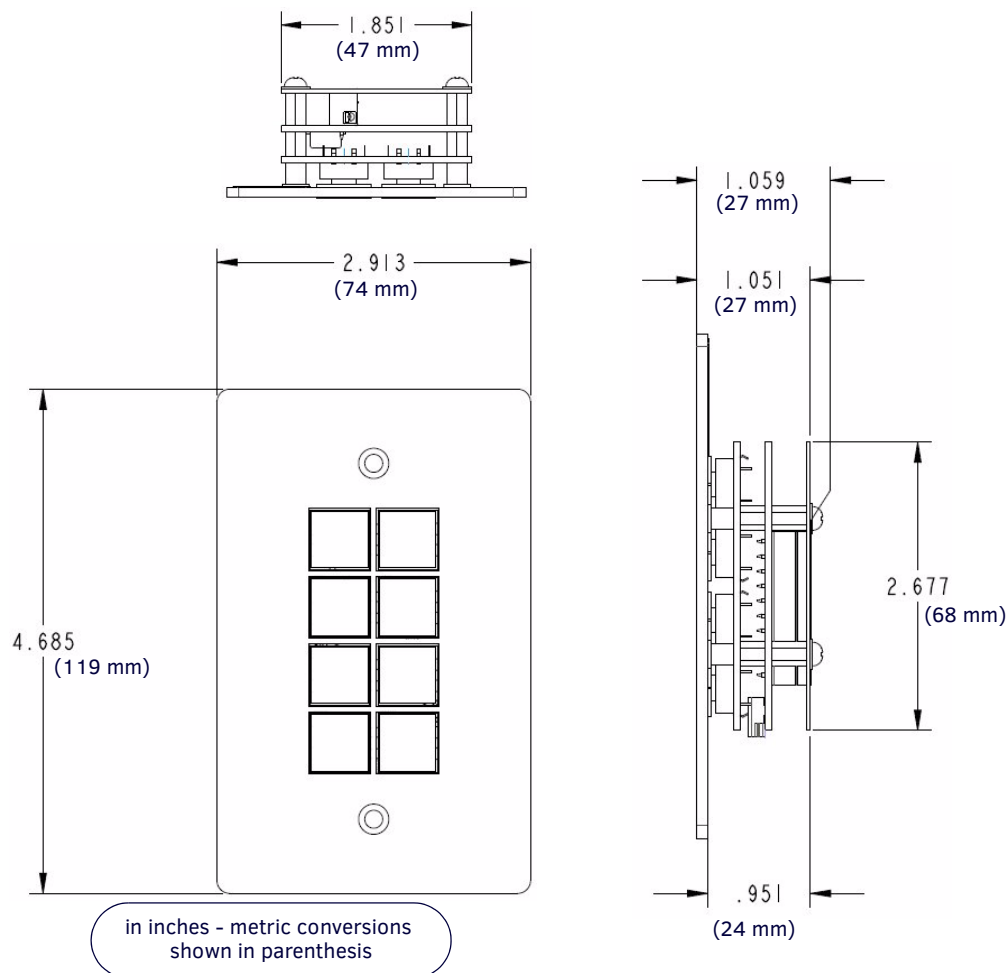



FIG. 2 Mounting Specifications - CP-1008-US

Minimum Internal Clearance for 1-Gang US Conduit Boxes

To ensure a proper fit with sufficient clearance, US-style Novara ControlPads require the following minimum internal dimensions within the conduit box:

US 1-Gang (HWD): 2.9" x 2.1" x 1.6" (73.6 mm x 53 mm x 41 mm)

These minimum interior dimensions will maintain a minimum .050" (1.27 mm) clearance.

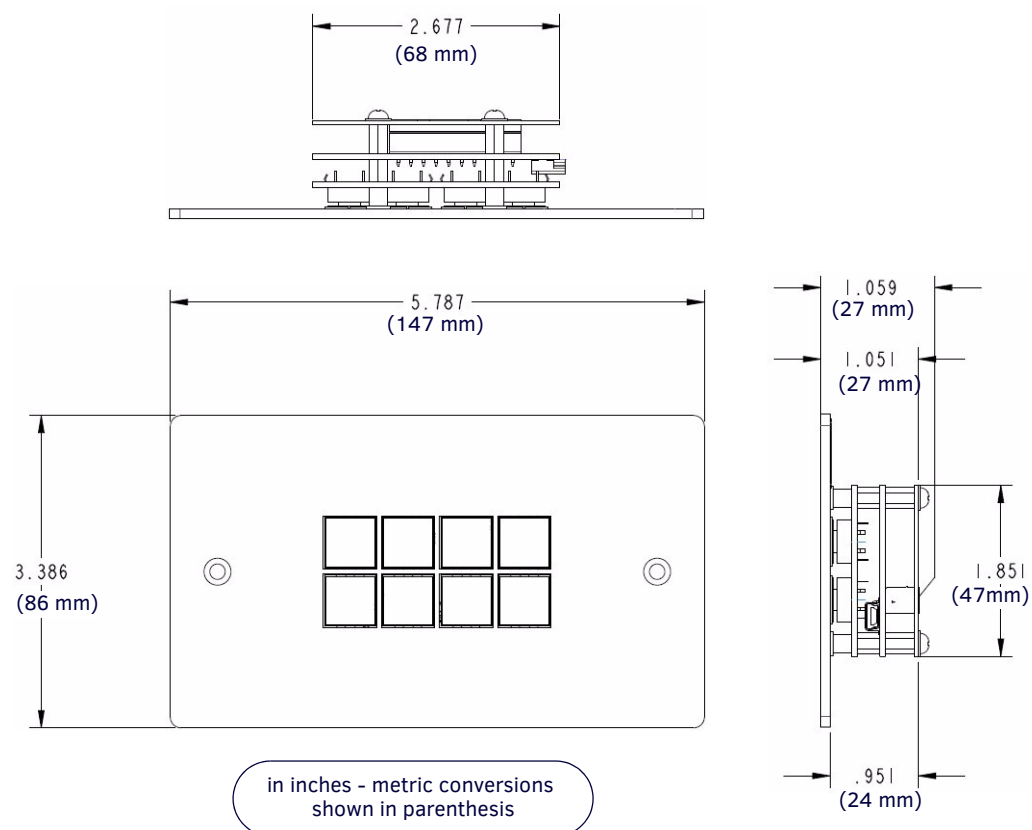CP-1008-UK**FIG. 3** Mounting Specifications - CP-1008-UK

CP-1008-EU

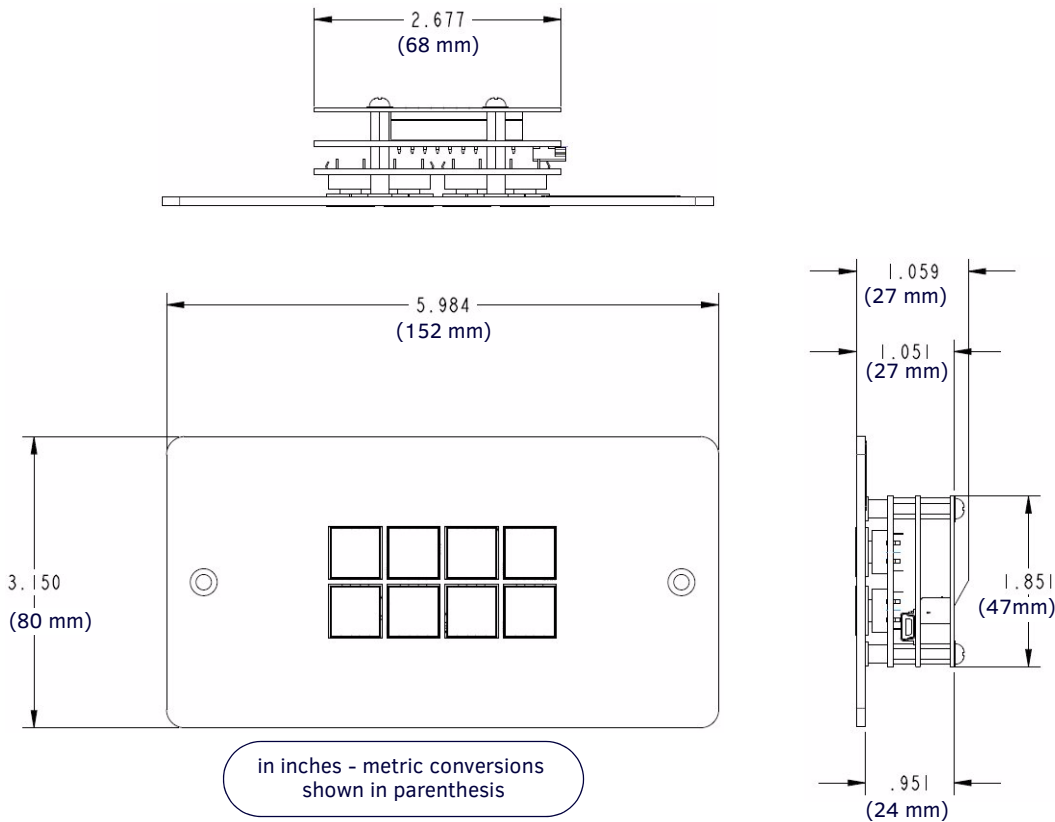


FIG. 4 Mounting Specifications - CP-1008-EU

Mounting Specifications - 16-Button ControlPads

NOTE: US version Novara ControlPads are designed to fit in NEC-Compliant wall boxes only. These devices will not fit properly in non-NEC-Compliant wall boxes.

CP-1016-US

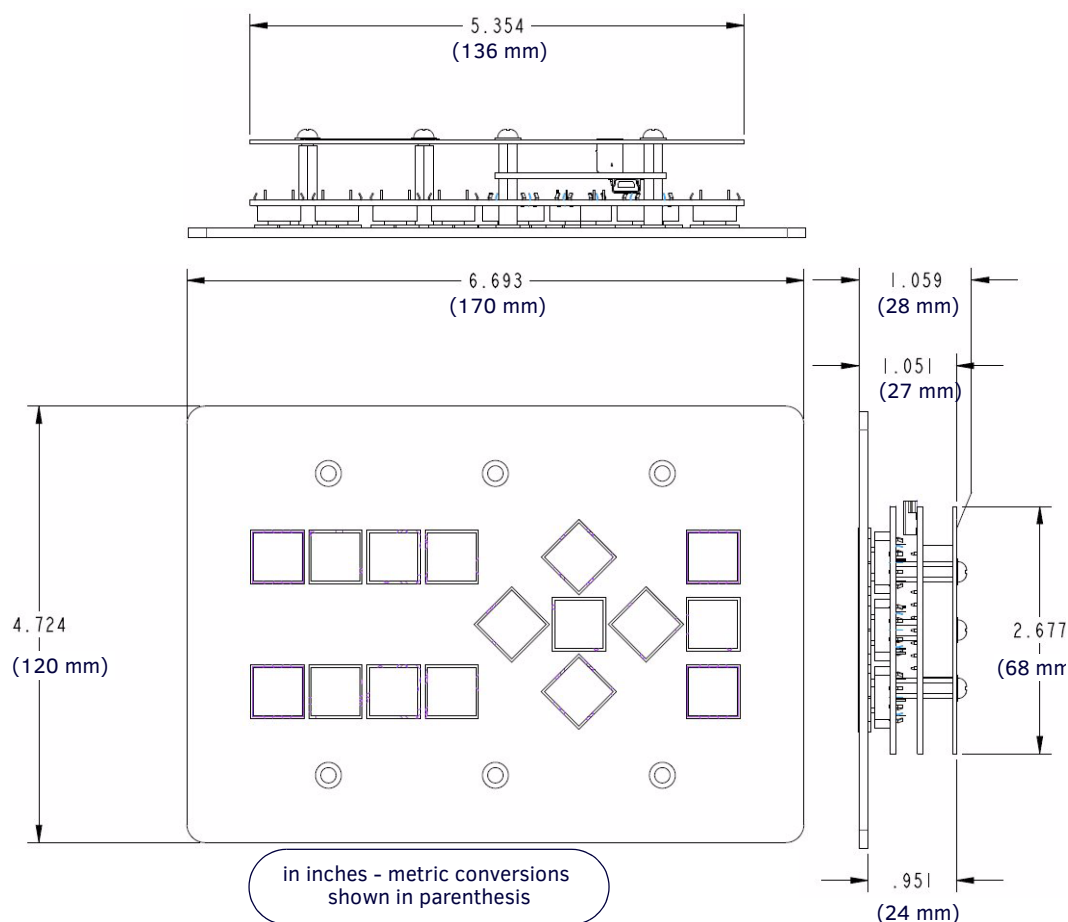


FIG. 5 Mounting Specifications - CP-1016-US

Minimum Internal Clearance for 3-Gang US Conduit Boxes

To ensure a proper fit with sufficient clearance, US-style Novara ControlPads require the following minimum internal dimensions within the conduit box:

US 3-Gang (HWD): 5.6" x 2.9" x 1.6" (142 mm x 73 mm x 41 mm)

These minimum interior dimensions will maintain a minimum .050" (1.27 mm)

CP-1016-TR-UK

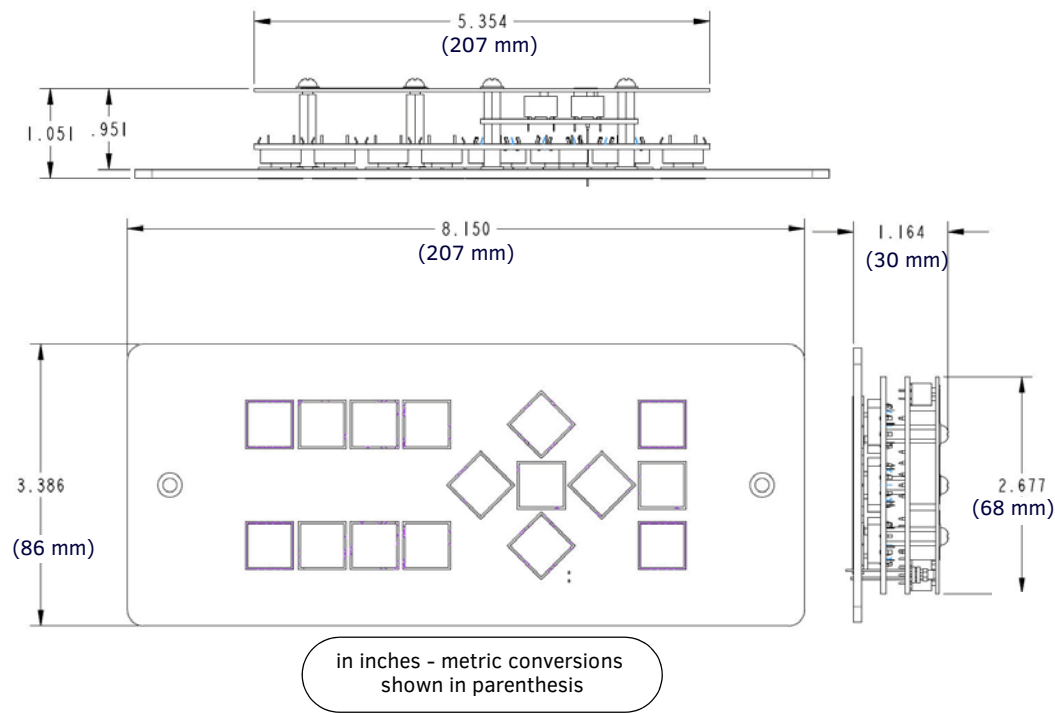


FIG. 6 Mounting Specifications - CP-1016-TR-UK

Wiring and Connections

Novara ControlPads - Rear Panel Connectors

FIG. 7 shows the rear panel connectors of the Novara ControlPads, and indicates a typical installation:

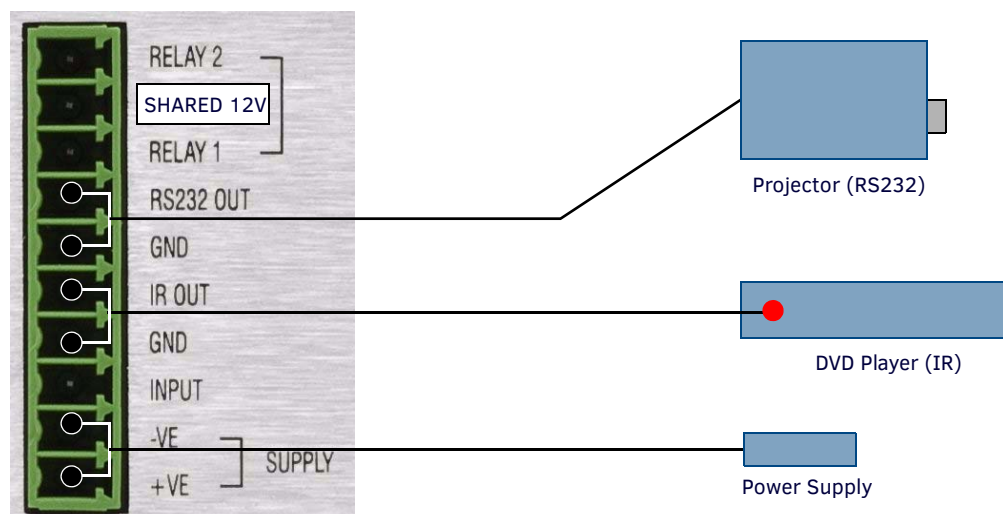


FIG. 7 Novara ControlPads - Rear Panel Connectors

NOTE: The rear panel connector layout is identical for all Novara ControlPads

Relay 1 / Relay 2 Connectors

The "Relay 1" and "Relay 2" Output ports each act as a switch to GND and are rated at 100 mA @ 12 VDC. These Output ports are used to control external devices (i.e. the PC1 Power Controller or AMX UPC-20+ Universal Power/Motor Controller - not included). These Output ports do not function like "Relay" ports on other AMX equipment:

- The Relay 1 and Relay 2 output ports are *current sinks*, not voltage drivers, they switch the ports to GND.
- The "SHARED +12V" connector is common +12 VDC (*not Ground*).
- These Output ports use 5V logic, but can handle up to 12V on the input without harm - at higher voltages you run a higher risk of surge damage.

NOTE: The Relay ports are for external relay control only.

FIG. 8 illustrates connecting the RELAY 1 (Output) Connectors to a **PC1 Power Controller**, in *momentary/latching* mode.

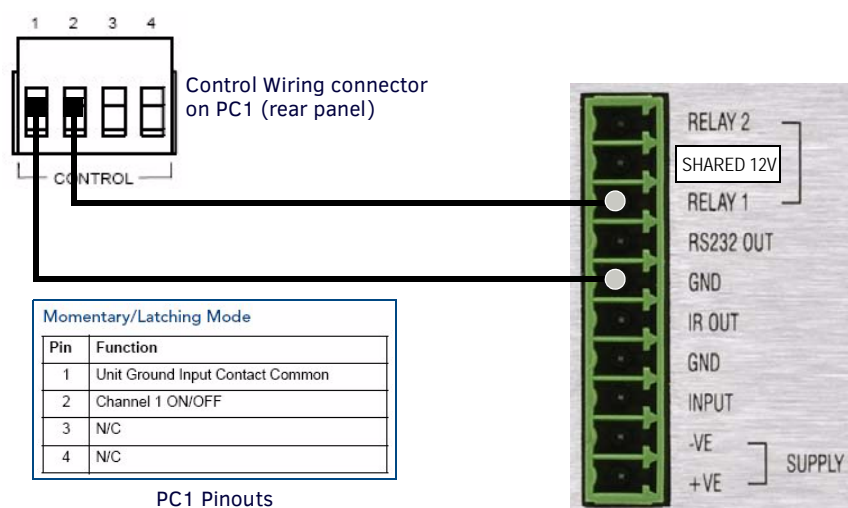


FIG. 8 Relay 1 / Relay 2 Connectors - Connected to PC1 Power Controller in momentary/latching mode

RS232 Out Connector

FIG. 9 illustrates connecting a 1000 Series ControlPad to RS232-controlled devices:

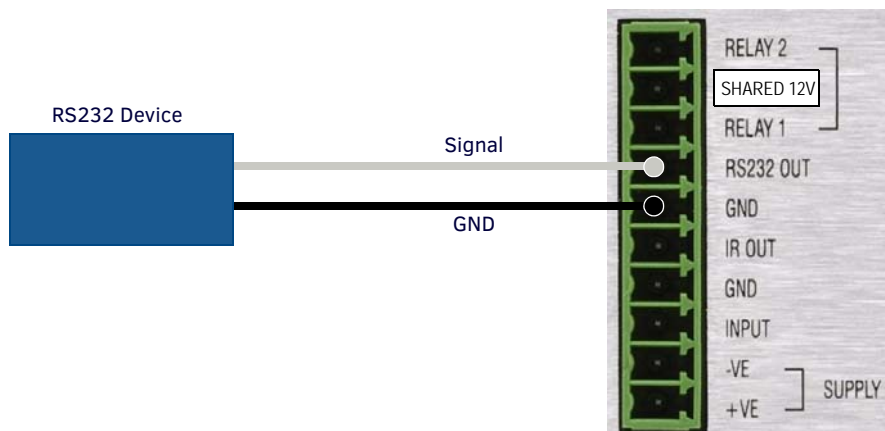


FIG. 9 RS232 Out Connector

NOTE: Novara ControlPads support one-way RS-232 control (RS-232 TX signals to the third-party device, not RS-232 RX signals from the controlled device).

IR Out Connector

NOTE: If using the CC-NIRC IR emitter with 2-pin phoenix connector (not included), be aware that the IR Emitter polarities on Novara ControlPads are opposite to that of other AMX equipment. This is not an issue if using the included 10-pin connector.

FIG. 10 illustrates connecting the IR transmitter heads to a 1000 Series ControlPad for IR-controlled devices:

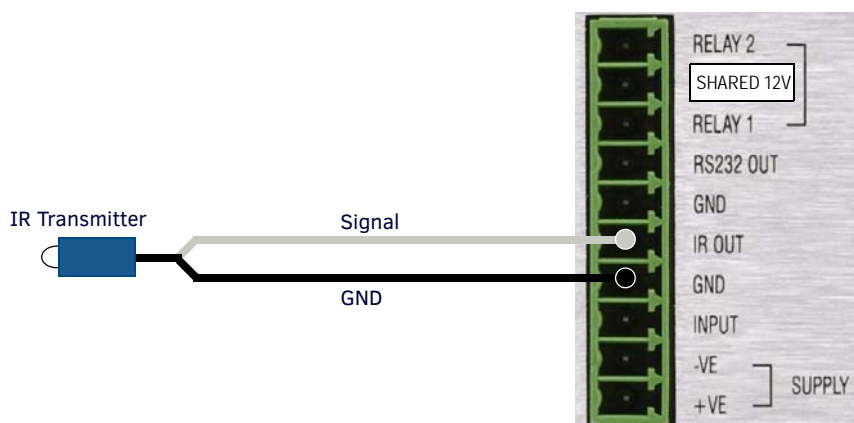


FIG. 10 IR OUT Connector

NOTE: The IR Transmitter must be placed directly in front of the controlled device's IR window.

Input Connector

FIG. 11 illustrates connecting the 1000 Series ControlPad to an external switch (such as a PIR switch), for detecting a High to Low or Low to High state.

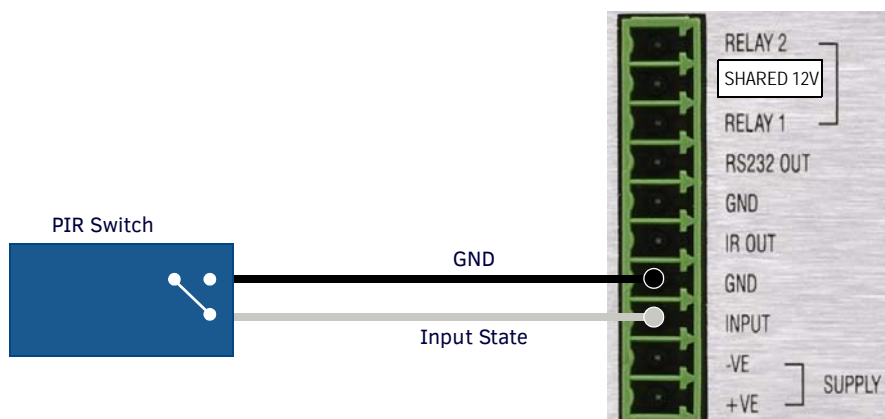


FIG. 11 Input Connector

If for example a PIR is attached to the Input, this will act as a trigger to reset the internal inactivity timer for Time Out routines.

Power Supply Connector

NOTE: If using an AMX Power Supply with a 2-pin phoenix connector (not included), be aware that the Power Supply polarities on Novara ControlPads are opposite to that of other AMX equipment. This is not issue if using the included 10-pin connector.

FIG. 12 illustrates connecting the 1000 Series ControlPad to the included power supply.

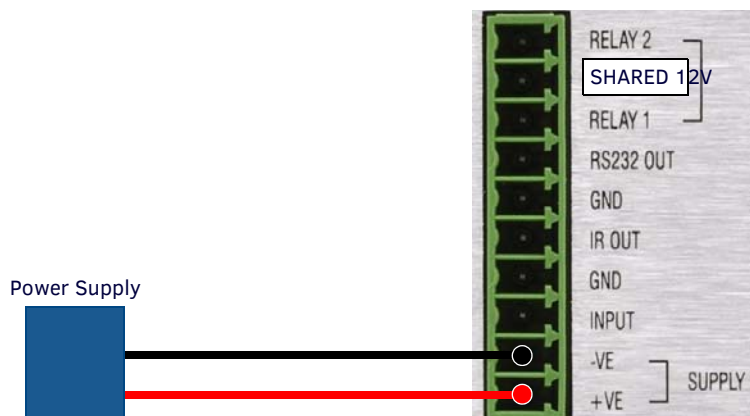


FIG. 12 Power Supply Connector

- Connect the White strip lead to the **+VE** terminal on the ControlPad,
- Connect the Black strip lead to the **-VE** terminal.

When the ControlPad is powered up or a program downloaded, button #2 will flash for 2 seconds then extinguish to indicate that the ControlPad has passed it's self-test.

USB Program Port

To download a program to the ControlPad, connect the USB Programming cable to the ControlPad USB Port on the top panel, and the USB Port of the PC (FIG. 13).

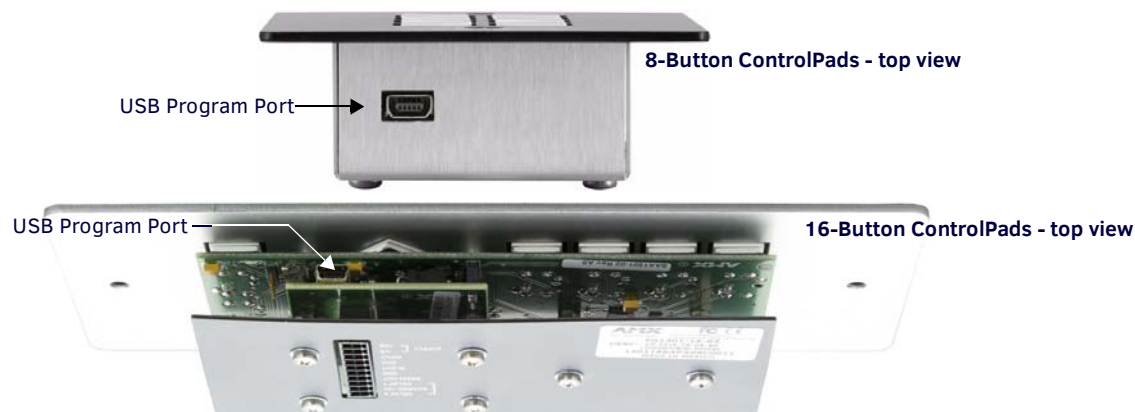


FIG. 13 USB Program Port

Novara 1000 Series ControlPads are configured using *AMX CP1000DCS* software (available for download at www.amx.com). Refer to the *AMX Novara DCS1000 Device Configuration Software* section on page 34 for configuration instructions.

Button Layout

FIG. 14 indicates the button layout for 8 and 16 button ControlPads:

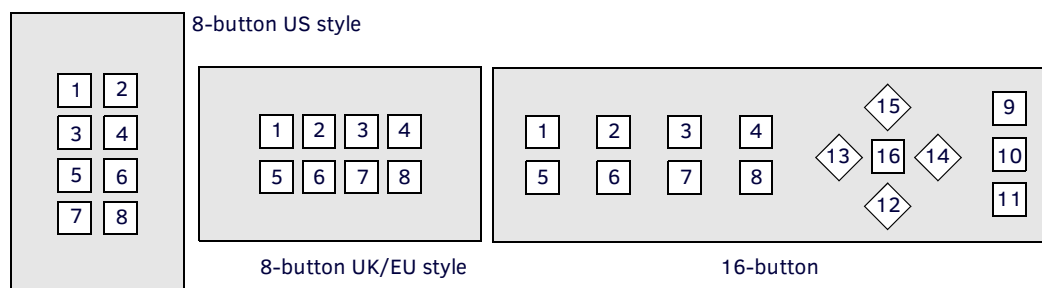


FIG. 14 1000 Series ControlPads Button Layout

Novara AxLink Keypads

Overview

Novara AxLink Keypads can be used in both AxLink and Novara installations.

- Novara AxLink Keypads feature a 4-pin AxLink connector and Status LED.
- Novara AxLink Keypads feature one bi-directional RS-232 port
- 8 and 16 button layouts are available. Each button has LED feedback.

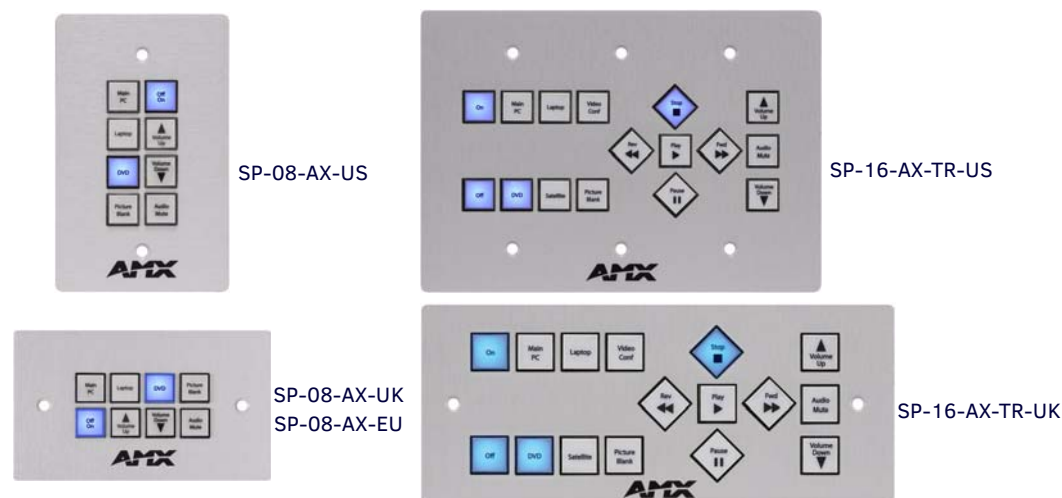


FIG. 15 Novara AxLink Keypads

Novara AxLink Keypads include:

Novara AxLink Keypads		
Name	Description	Colors/FG#s
SP-08-AX-US 8-Button Keypad	Fits 1-gang US conduit boxes. See Mounting Specifications for details.	<ul style="list-style-type: none"> • Brushed Aluminum: FG1311-08-SA • Black: FG1311-08-SB • White: FG1311-08-SW
SP-08-AX-UK 8-Button Keypad	Fits standard 2-gang UK back box sizes.	<ul style="list-style-type: none"> • Brushed Aluminum: FG1311-08-KA • Black: FG1311-08-KB • White: FG1311-08-KW
SP-08-AX-EU 8-Button Keypad	Fits standard 2-gang European back box sizes.	<ul style="list-style-type: none"> • Brushed Aluminum: FG1311-08-EA • Black: FG1311-08-EB • White: FG1311-08-EW
SP-16-AX-TR-US 16-Button Keypad	Fits 3-gang US conduit boxes. See Mounting Specifications for details.	<ul style="list-style-type: none"> • Brushed Aluminum: FG1311-16-SA • Black: FG1311-16-SB • White: FG1311-16-SW
SP-16-AX-TR-UK 16-Button Keypad	Fits standard 3-gang UK back box sizes.	<ul style="list-style-type: none"> • Brushed Aluminum: FG1311-16-KA • Black: FG1311-16-KB • White: FG1311-16-KW

Product Specifications

Novara AxLink Keypads	
System Requirements:	Novara AxLink Keypads are only compatible with AMX NetLinx Central Controllers.
Power Requirements:	<ul style="list-style-type: none"> • SP-08: Min: 80mA / Max: 130mA @ 12 VDC • SP-16: Min: 100mA / Max: 210mA @ 12 VDC
Button Layout:	<ul style="list-style-type: none"> • 8 and 16 button • Blue, backlit buttons with controllable feedback
Rear Panel Connectors:	<ul style="list-style-type: none"> • 4-pin AxLink connector/Status LED • Power connectors
Dimensions:	<ul style="list-style-type: none"> • SP-08-AX-US: 4.685" x 2.913" x 1.034" (119 mm x 74 mm x 26 mm) • SP-08-AX-UK: 3.386" x 5.787" x 1.034" (86 mm x 147 mm x 26 mm) • SP-08-AX-EU: 3.150" x 5.984" x 1.034" (80 mm x 152 mm x 26 mm) • SP-16-AX-TR-US: 4.724" x 6.693" x 1.037" (119 mm x 170 mm x 26 mm) • SP-16-AX-TR-UK: 3.385" x 8.140" x 1.170" (86 mm x 207 mm x 29 mm)
Weight:	<ul style="list-style-type: none"> • SP-08-AX-US: 0.30 lbs (136 g) • SP-08-AX-UK/EU: 0.35 lbs (159 g) • SP-16-AX-TR-US: 0.55 lbs (249 g) • SP-16-AX-TR-UK: 0.65 lbs (295 g)
Included Accessories:	<ul style="list-style-type: none"> • Button Kit - includes acetate sheet with 50 pre-cut button label inserts and clear plastic Key Caps
Other AMX Equipment:	<ul style="list-style-type: none"> • External 12V Power Supply (57-1301-SA)
Certifications:	<ul style="list-style-type: none"> • IEC 60950 • FCC/CE • RoHS compliant

Mounting Specifications - 8-Button Keypads

NOTE: Novara Keypads are designed to fit in NEC-Compliant wall boxes only. These devices will not fit properly in non-NEC-Compliant wall boxes.

SP-08-AX-US

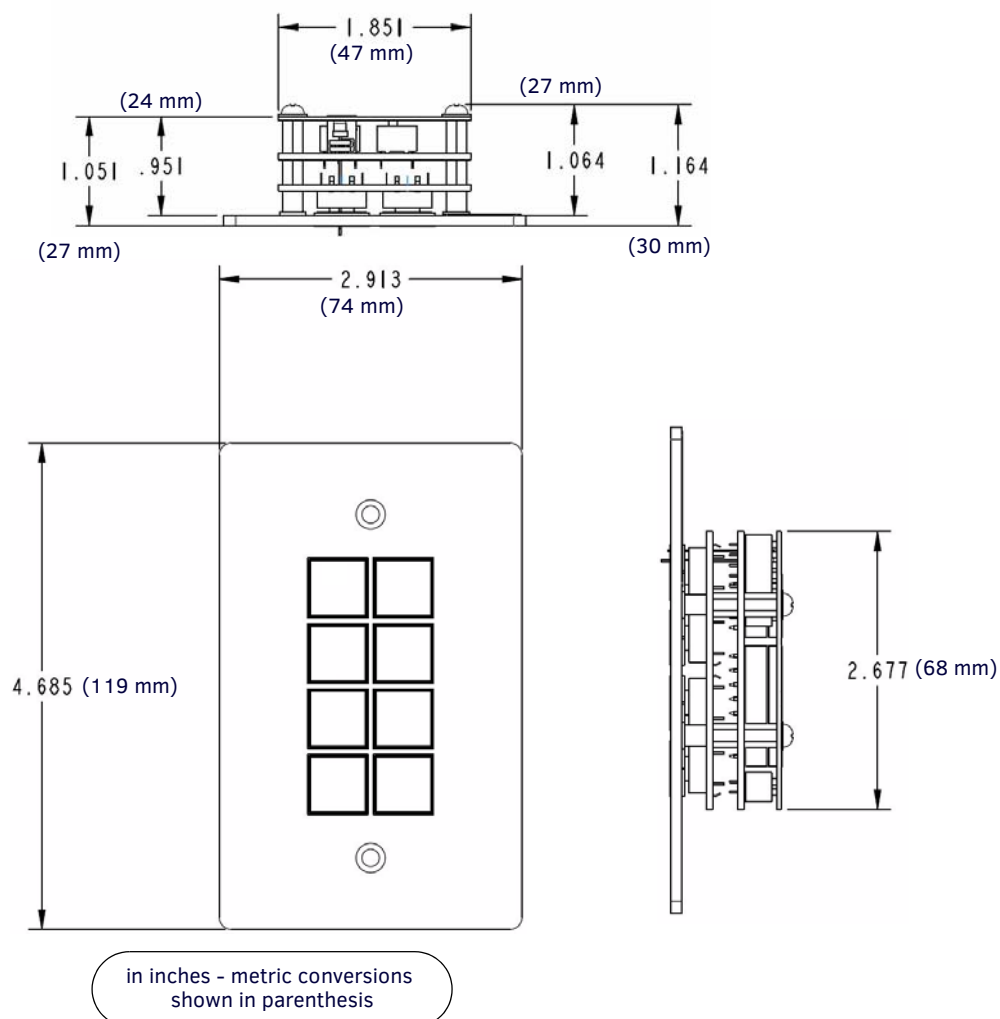



FIG. 16 Mounting Specifications - SP-08-AX-US


Minimum Internal Clearance for 1-Gang US Conduit Boxes

To ensure a proper fit with sufficient clearance, US-style Novara ControlPads require the following minimum internal dimensions within the conduit box:

US 1-Gang (HWD): 2.9" x 2.1" x 1.6" (74 mm x 53 mm x 41 mm)

These minimum interior dimensions will maintain a minimum .050" (1.27 mm) clearance.

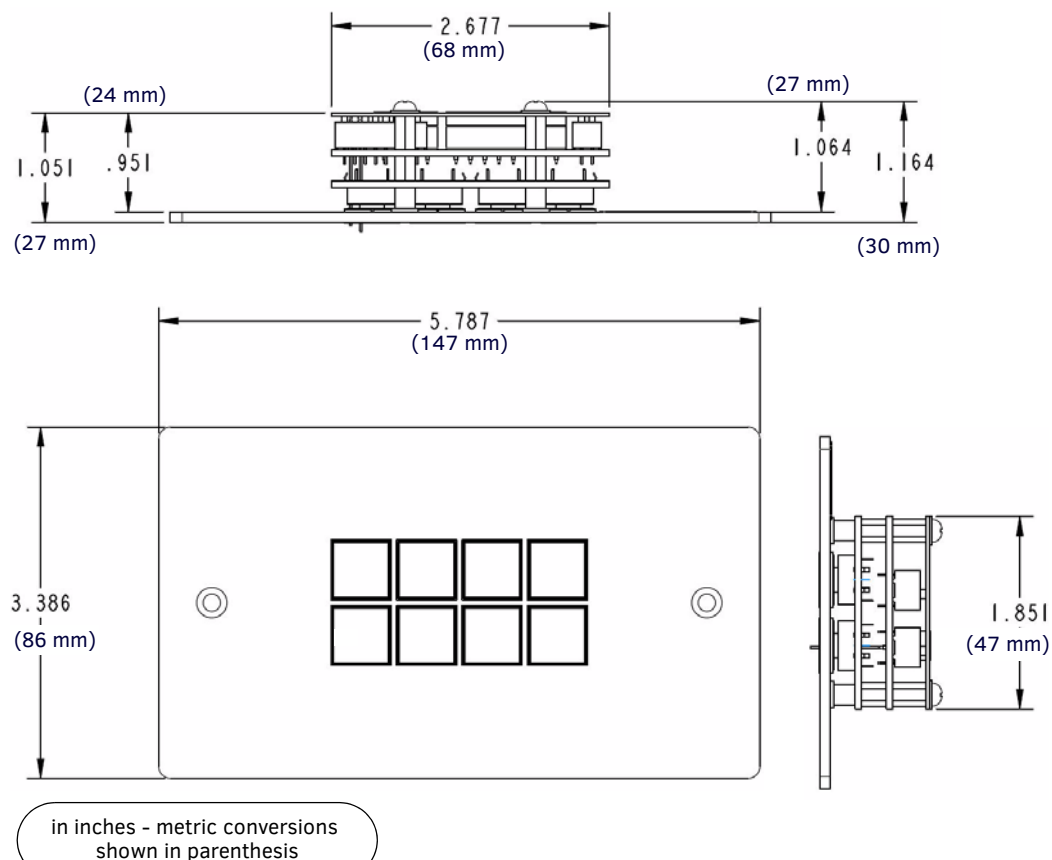SP-08-AX-UK**FIG. 17** Mounting Specifications - SP-08-AX-UK

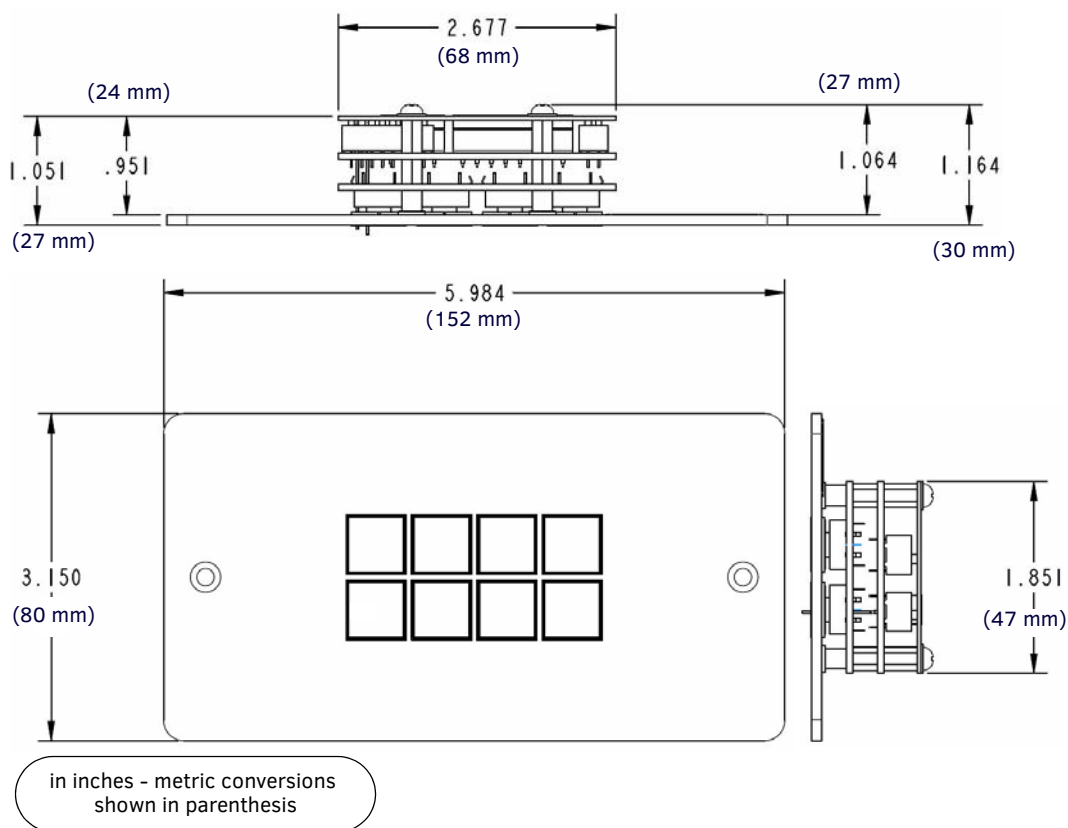SP-08-AX-EU**FIG. 18** Mounting Specifications - SP-08-AX-EU

Mounting Specifications - 16-Button Keypads

NOTE: US version Novara Keypads are designed to fit in NEC-Compliant wall boxes only. These devices will not fit properly in non-NEC-Compliant wall boxes.

SP-16-AX-TR-US

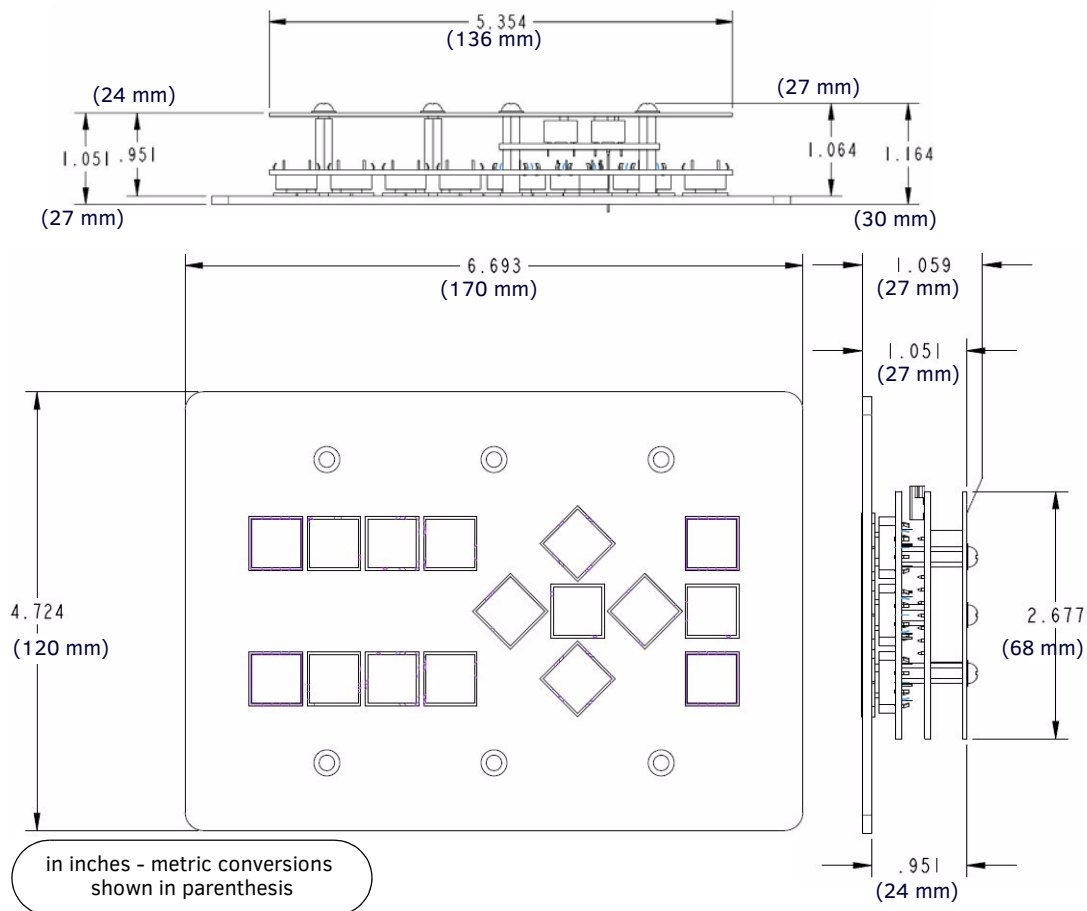



FIG. 19 Mounting Specifications - SP-16-AX-TR-US

Minimum Internal Clearance for 3-Gang US Conduit Boxes

To ensure a proper fit with sufficient clearance, US-style Novara ControlPads require the following minimum internal dimensions within the conduit box:

US 3-Gang (HWD): 5.6" x 2.9" x 1.6" (142 mm x 74 mm x 41 mm)

These minimum interior dimensions will maintain a minimum .050" (1.27 mm)

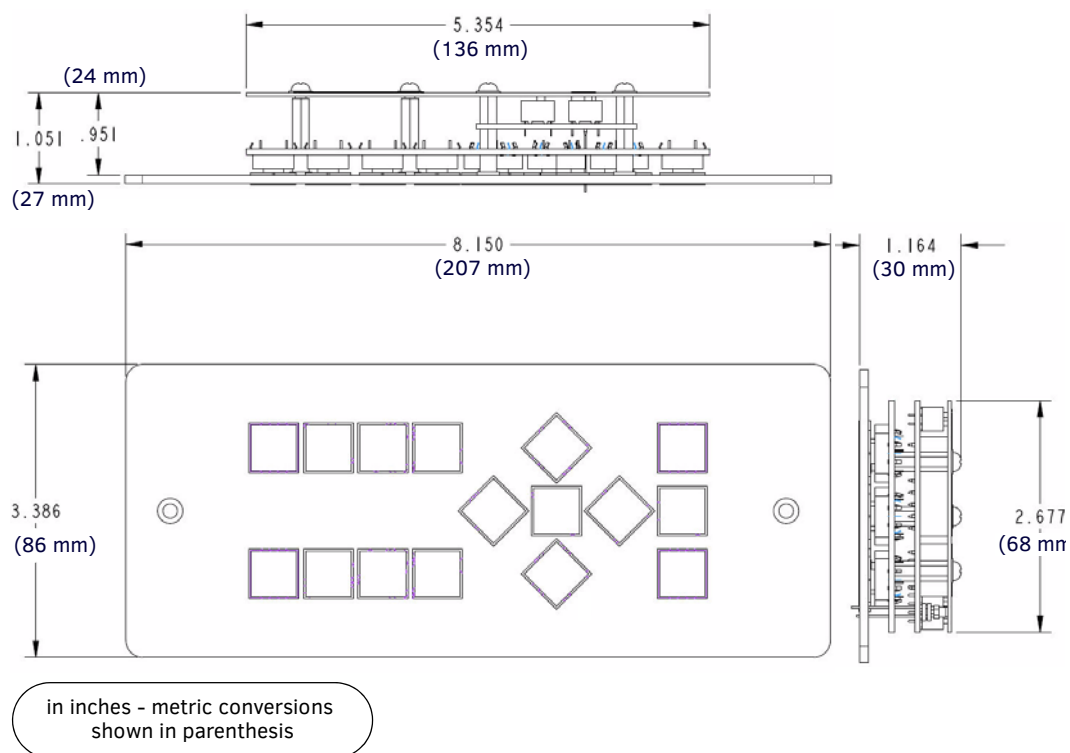SP-16-AX-TR-UK**FIG. 20** Mounting Specifications - SP-16-AX-TR-UK

Wiring and Connections

ControlPads - Rear Panel Connectors

FIG. 21 shows the rear panel connectors of the Novara AxLink Keypads, and indicates a typical installation:

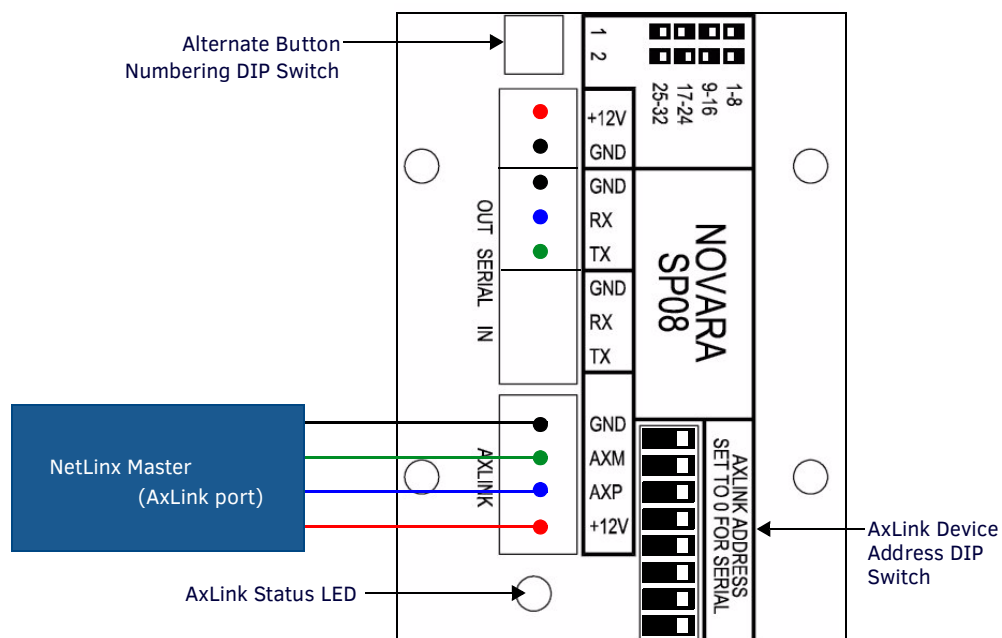


FIG. 21 Novara AxLink Keypads - Rear Panel Connectors

NOTE: The rear panel connector layout is identical for all Novara AxLink Keypads.

Power Supply Connector

Novara AxLink Keypads can be powered by the AxLink bus. Optionally, an external 12V power supply can be used (FIG. 22).

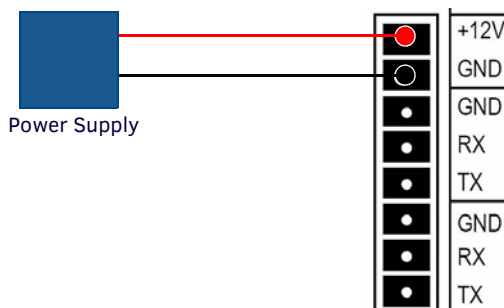


FIG. 22 Power Supply Connector

NOTE: If using an external Power Supply, be aware that the Power Supply polarities on Novara Keypads are opposite to that of other AMX equipment.

- Connect the White strip lead to the +VE terminal on the ControlPad
- Connect the Black strip lead to the -VE terminal

Daisy-Chaining Keypads (AxLink only)

To daisy chain the Keypads via AxLink, both Keypads should be connected to the AxLink, as shown in FIG. 23.


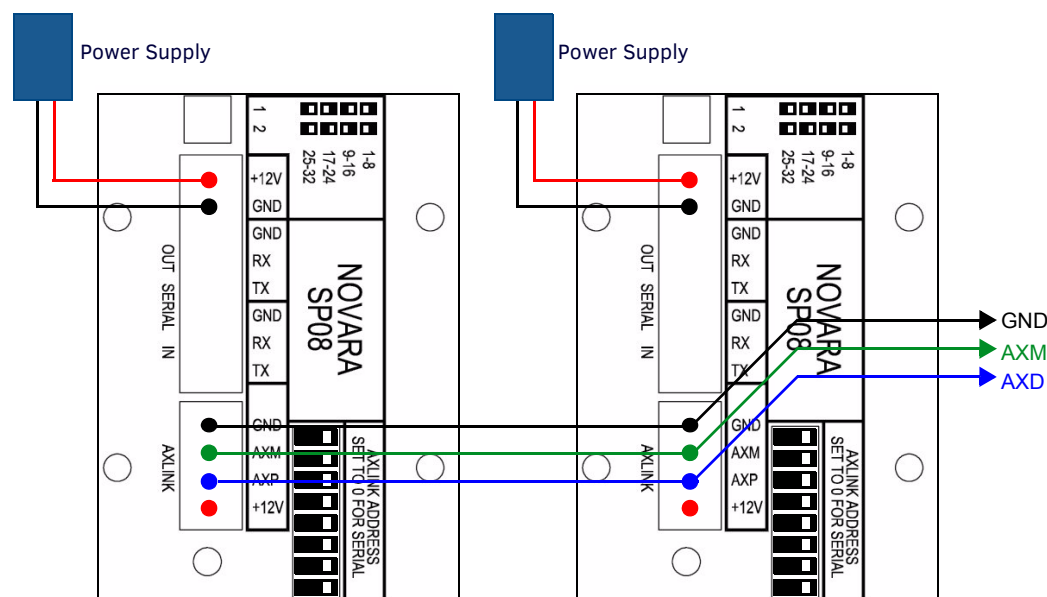


FIG. 23 Daisy-Chaining Keypads

- Use screened cable to link to units. Button Layout

FIG. 24 indicates the button layout for 8 and 16 button Keypads:

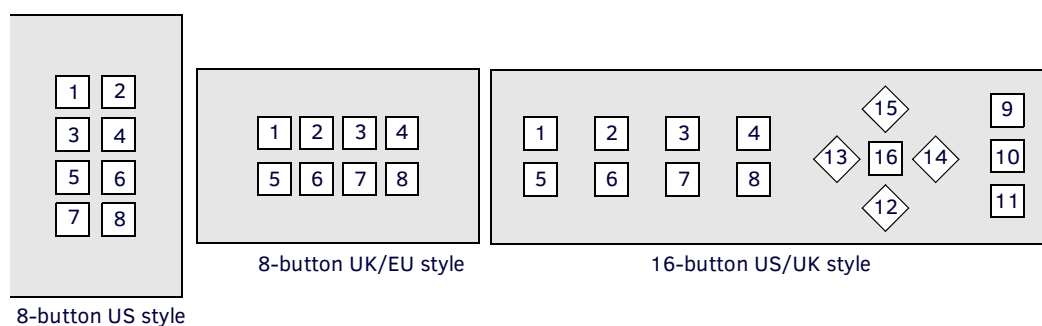

8-button US style

FIG. 24 Keypads Button Layout

- 8-Button Keypads can be configured for button numbers 1-8, 9-16, 17-24, or 25-32.
- 16-Button Keypads can be configured for button numbers 1-16 or 17-32.

Setting DIP Switches to Assign Alternate Button Numbering

Use the 2-position DIP Switch on the rear panel of the Keypads to specify alternate button numbers for each Keypad, for cases in which you want to avoid having multiple Keypads in the same system using the same button numbers.

NOTE: Multiple Keypads are allowed to share identical button numbers.

Alternate Button Numbering: 8-Button Keypads

The DIP Switch settings for 8-button Keypads are described in FIG. 25:

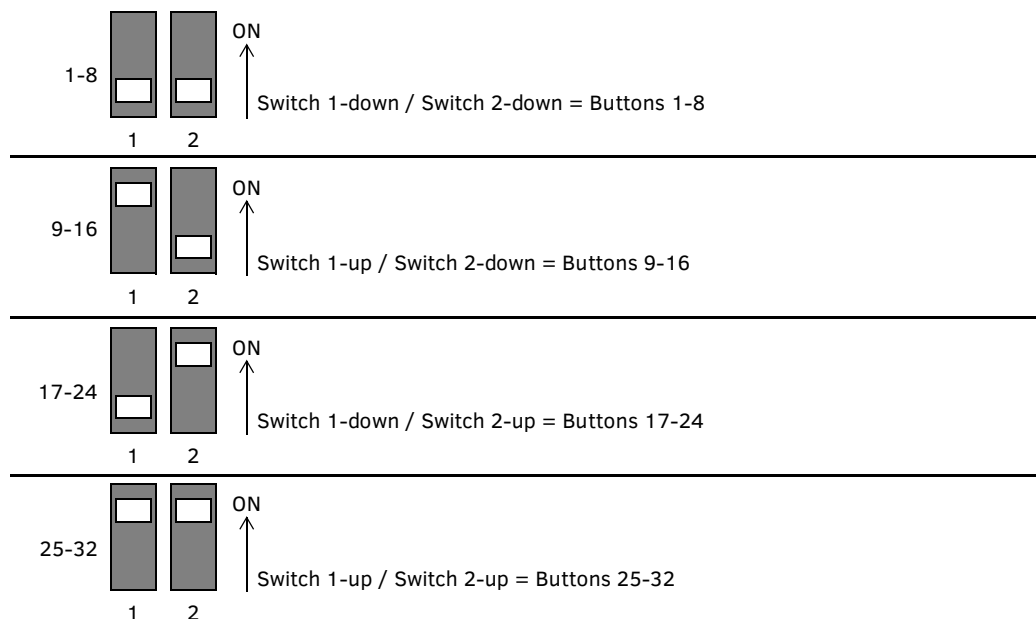


FIG. 25 DIP Switch Settings - Alternate Button Numbering: 8-Button Keypads

Alternate Button Numbering: 16-Button Keypads

The DIP Switch settings for 16-button Keypads are described in FIG. 26:

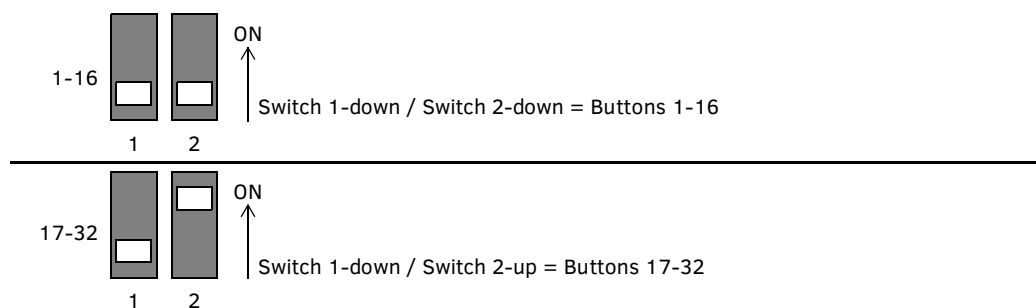


FIG. 26 DIP Switch Settings - Alternate Button Numbering: 16-Button Keypads

Setting the AxLink Address DIP Switch

The AxLink Device Address DIP switch determines whether this Keypad will function as an **AxLink** device or as a Serial device. If the DIP Switch is set to anything other than zero, this Keypad will be assigned an AxLink device address based on the switch settings.

Setting the AxLink Device Address

1. If connected, disconnect the power supply.
2. Locate the 8-position Device DIP switch on the rear panel (FIG. 27).
3. Set the DIP switch according to the switch values shown below.

Switch	1	2	3	4	5	6	7	8
Value	1	2	4	8	16	32	64	128

The device number is set by the total value of DIP switch positions that are ON (up). As an example, the first DIP switch in FIG. 27 defines device number 129 ($1+128=129$).

If you later change the device number, remove and reconnect the AxLink power connector to enter the new device number into memory. Use AMX's Dip Switch2 application (available for download from www.amx.com) to assist in calculating DIP switch position values.

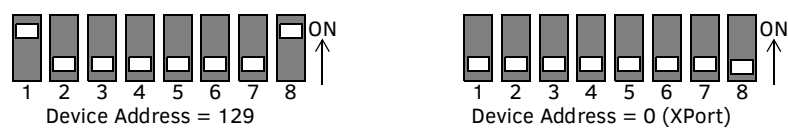


FIG. 27 Example Device DIP Switches

Programming AxLink Keypads

The SP-08-AX and SP-16-AX AxLink Keypads are typically programmed using the standard NetLinx keypad device format (like any other keypad).

- These keypads issue a Push, and feedback is controlled by turning the channel on and off.
- When using it as a standard NetLinx device there is no special or device specific programming to deal with.
- The SP-08-AX and SP-16-AX AxLink Keypads are programmed using the standard Netlinx keypad device format.

Button Labelling

Overview

Novara ControlPads, Keypads and AxLink Keypads come with a set of clear plastic Key Caps, which are designed to fit tightly over the pushbuttons, and allow you to place a label on each button according to the requirements of your particular installation.

Novara ControlPads, Keypads and AxLink Keypads also come with a pre-printed acetate sheet with a range of 50 (pre-cut) button label inserts. The button labels provided will accommodate most installations, but it is also possible to print your own button labels on acetate for custom button labelling.

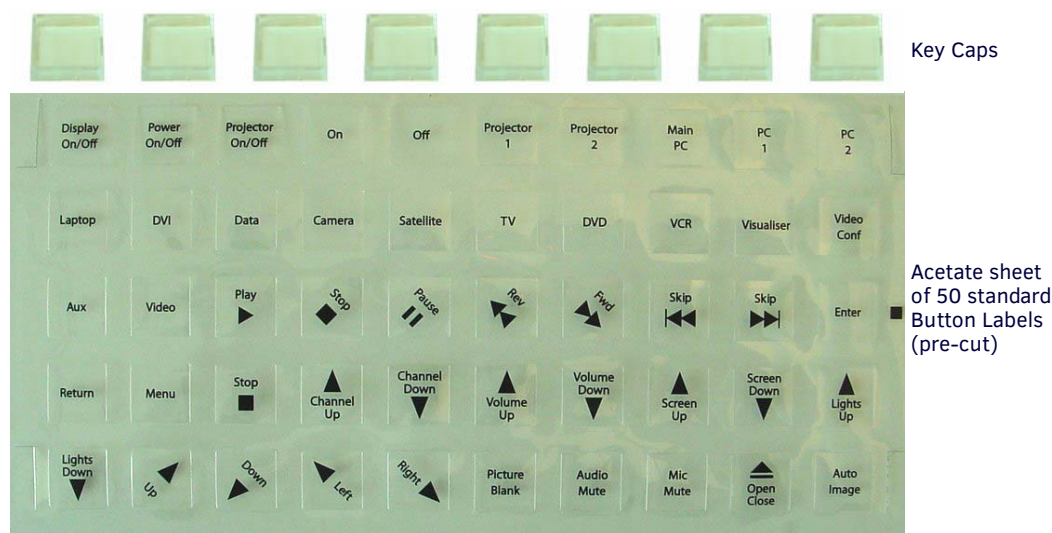


FIG. 28 Acetate Button Labels and plastic Key Caps

Installing Acetate Button Labels and Key Caps - READ THIS FIRST!

1. Punch out the desired Button Label from the included acetate sheet.
If you have printed your own custom button labels on acetate, cut each button label to fit inside the Key Caps.
 - Custom button labels must be cut to a **0.472" (12 mm) square** to fit securely inside the Key Caps.
 - The thickness of the acetate used must not exceed **.004" (0.10 mm)**.
2. Place the Key Cap face-down, and insert the Button Label into the bottom of the Key Cap (FIG. 29).

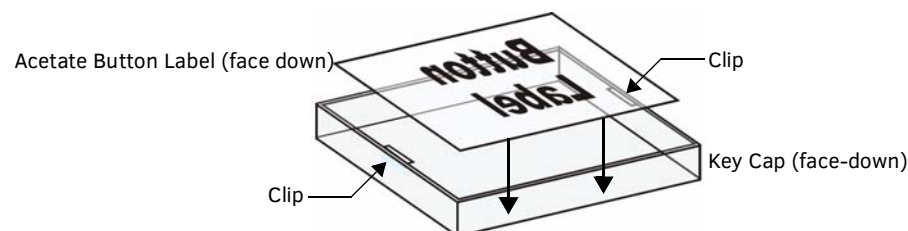


FIG. 29 Placing a Button Label inside a Key Cap

- Orient the Button Label inside the Key Cap so that the two clips are located on the left and right sides of the readable text on the Button Label, as indicated in FIG. 29.
- Be sure to place the Button Label face-down inside the Key Cap (see FIG. 29), otherwise the label will be seen in reverse once the Key Cap is installed.

3. Install the Key Cap on the pushbutton (FIG. 30):

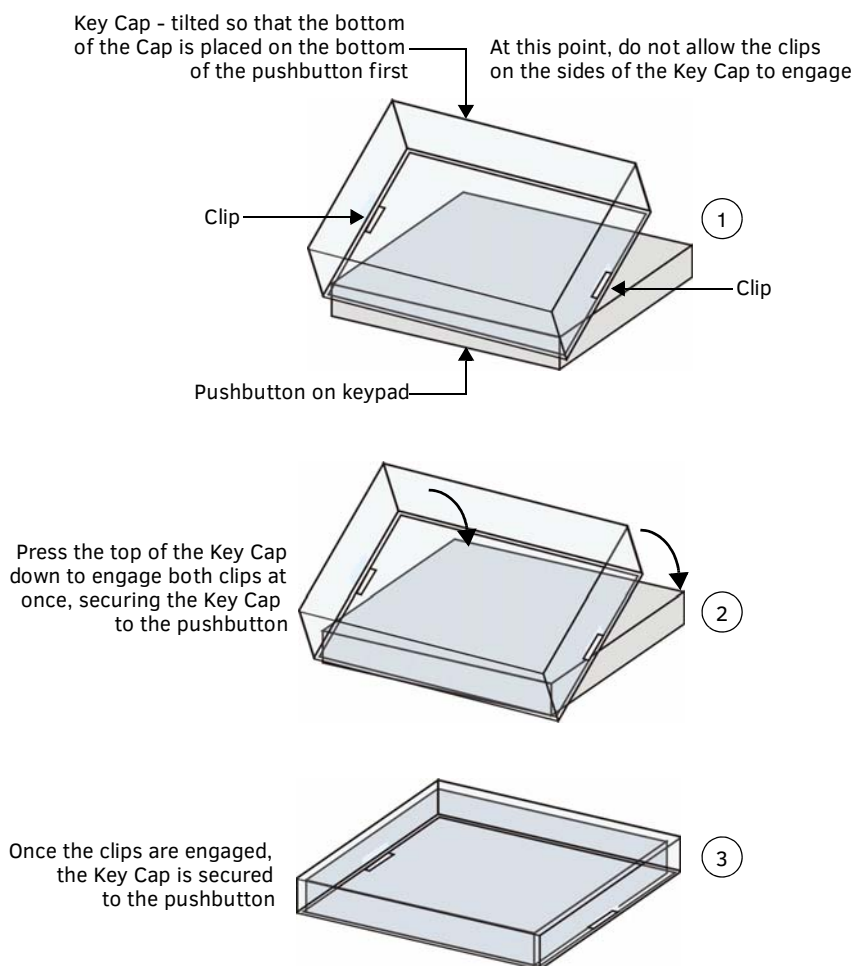


FIG. 30 Placing a Button Label inside a Key Cap

NOTE: Verify that the vertical orientation of the Button Label is correct relative to the keypad.

- Gently press the bottom of the Key Cap (no clip) onto the pushbutton. Do not allow the clips on either side to engage.
- With the bottom of the Key Cap secured, gently press the top of the Key Cap. This action will engage both clips simultaneously, and the Key Cap will snap into place on the push button.

NOTE: Be careful to follow these procedures closely - the bottom of the Key Cap must be installed on the pushbutton before the Key Cap clips engage, or there is a risk of the button being misaligned.

NOTE: Also note that removing the Key Caps requires additional steps - see the Removing/Replacing Button Labels section on page 30 for details.

Removing/Replacing Button Labels

The button labels on Novara keypads are acetate inserts that fit inside the Key Caps installed on the pushbuttons. In order to change the inserts, the key caps need to be removed. Removing the Key Caps on Novara keypads requires disassembling the keypad, so that they can be accessed through the rear of the faceplate:

Disassembling the Novara Keypad

NOTE: Remove power from the Novara keypad, and discharge any static electricity from your body by touching a grounded metal object before performing the following steps.

- This procedure will require a Phillips-head screwdriver and a 5mm wrench.
 - Detailed exploded views of each Novara keypad type are included on the reverse.
1. On the rear panel of the Novara keypad, remove the screws that secure the metal enclosure to the faceplate.

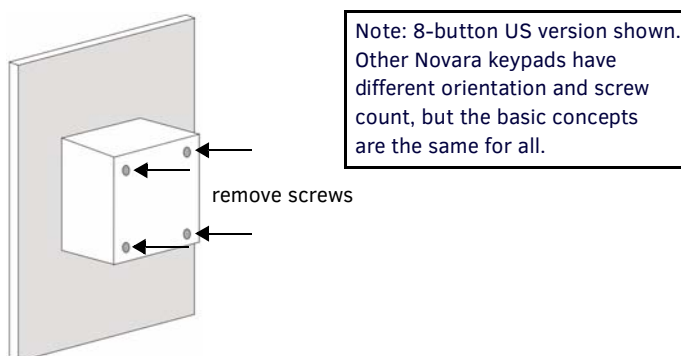


FIG. 31 Remove the metal enclosure to expose the circuit boards

- 8-Button keypads use 4 screws
 - 16-Button keypads use 6 screws
2. Remove the back enclosure to expose the circuit boards, mounted on stand-offs.
 3. Use a 5mm wrench to remove the first set of 5mm stand-offs.

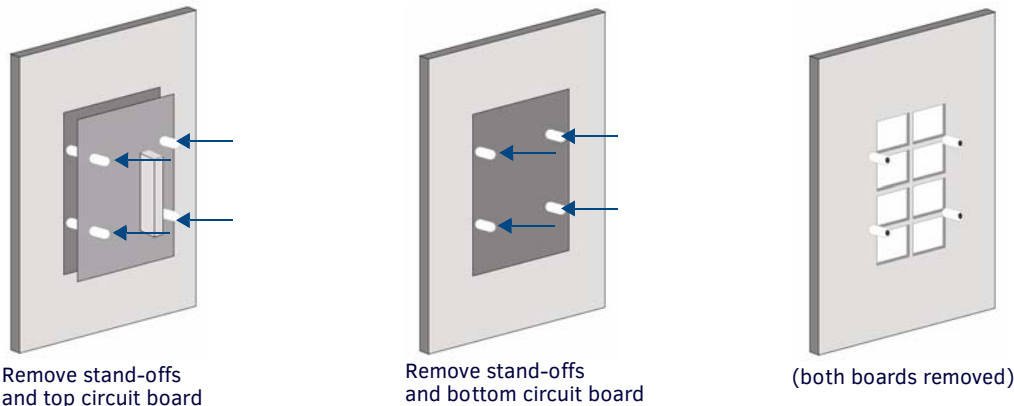


FIG. 32 Remove the first set of stand-offs (5mm)

4. Carefully pull the top circuit board straight up and off the standoffs.
 - This action also disengages two 4-pin connectors between the two boards. Be careful not to bend the pins.
 - Note the orientation of the board - it must be oriented in the same direction when replaced. The top is indicated by an UP arrow at the top center of the board. The bottom is indicated by the AMX logo (FIG. 33).
5. Use a 5mm wrench to remove the second set of stand-offs.
6. Carefully pull the bottom circuit board straight up and off the standoffs.
 - The bottom board has the pushbuttons on the reverse side. Be careful not to damage the buttons when removing the board.
 - Note the orientation of the board - it must be oriented in the same direction when replaced. The top of the is indicated by an UP arrow at the top center of the board. The bottom is indicated by the AMX logo (FIG. 33).

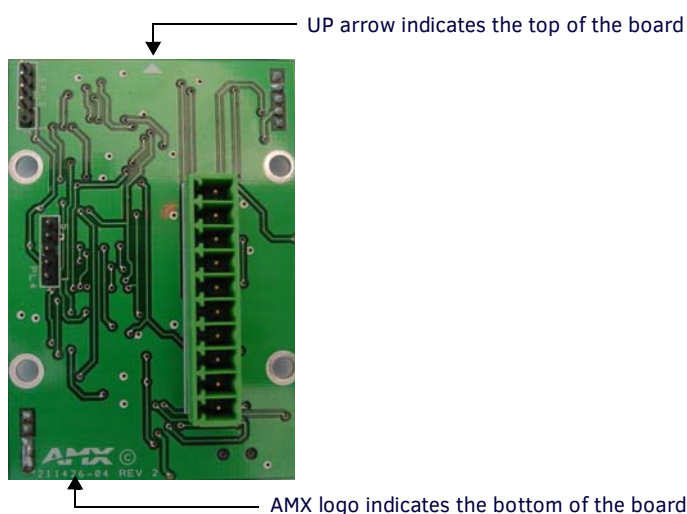


FIG. 33 Orientation marks on the circuit boards

Replacing Key Caps / Button Labels

Once the lower board has been removed, you have full access to the pushbuttons (with Key Caps installed, as shown in FIG. 34):

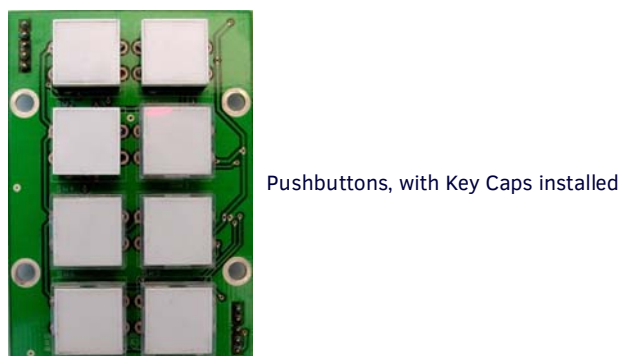


FIG. 34 Lower circuit board - pushbuttons

1. Carefully pry the Key Cap off of each pushbutton that you need to re-label.
2. Remove the existing acetate Button Label and Insert the replacement Label in each Key Cap. Be sure to place the Button Label face-down inside the Key Cap, otherwise the label will be seen in reverse once the Key Cap is installed.
3. Gently replace the Key Cap on the pushbutton:

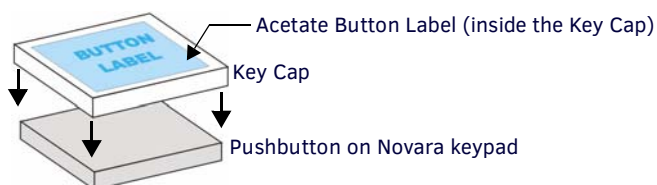


FIG. 35 Placing a Button Label inside a Key Cap

- Verify that the vertical orientation of the Button Label is correct relative to the Novara keypad.
- Align the Key Cap with the target pushbutton, and gently push the Key Cap down over the pushbutton.
- Once seated properly on the pushbutton, the Key Cap will snap into place.

Re-Assembling the Keypad

Follow the steps in reverse to re-assemble the keypad. Take care of the following:

- Be certain that the circuit boards are oriented correctly (see FIG. 33)
- Be certain that both 4-pin connectors (between the two boards) are seated properly.

Exploded View - 8-Button US Version

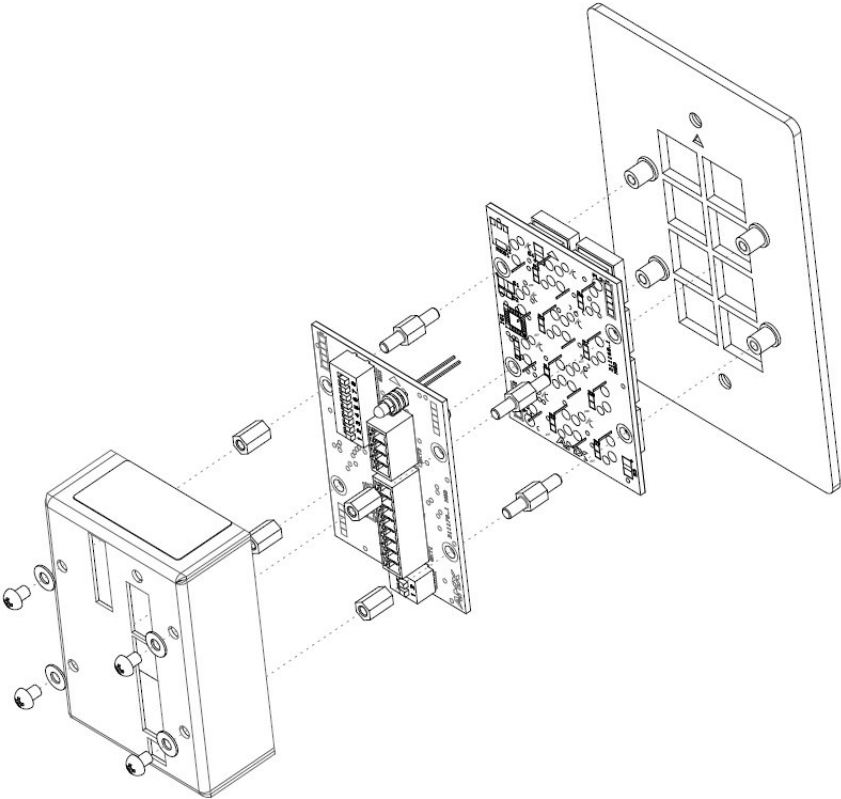


FIG. 36 8- Button US

Exploded View - 8-Button UK/EU Version

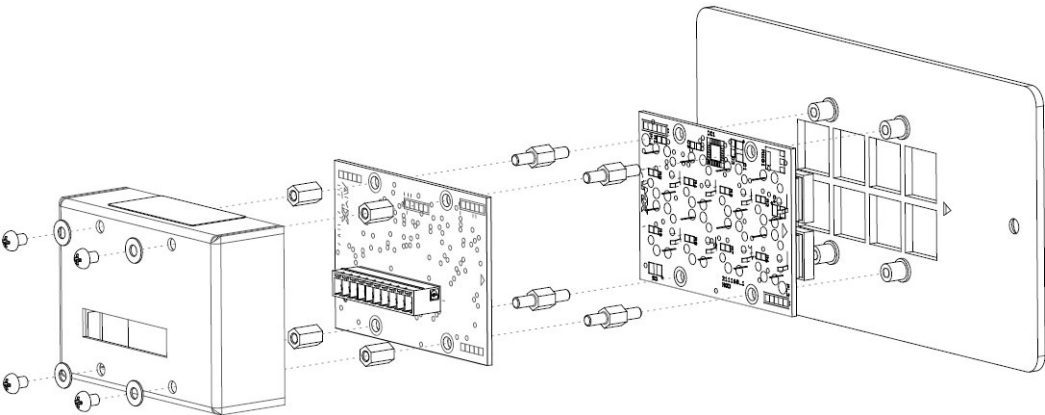
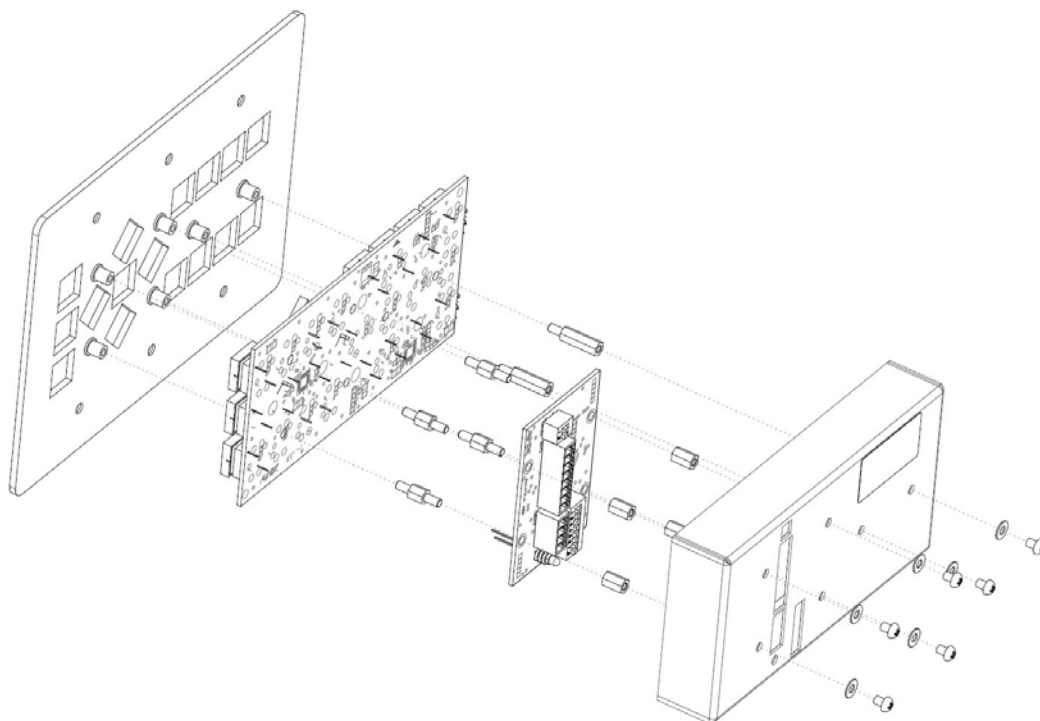


FIG. 37 8- Button UK/EU

Exploded View - 16-Button US/UK Version**FIG. 38** 16-Button US/UK

AMX Novara DCS1000 Device Configuration Software

Installing the AMX Novara DCS1000 Application

1. Download the AMX Novara DCS1000 installation file from www.amx.com (go to the **Products** page and search for *DCS1000*).
2. Double-click the installation file to launch the *AMX DCS1000 Setup Wizard* (FIG. 39). Click **Next** to proceed.

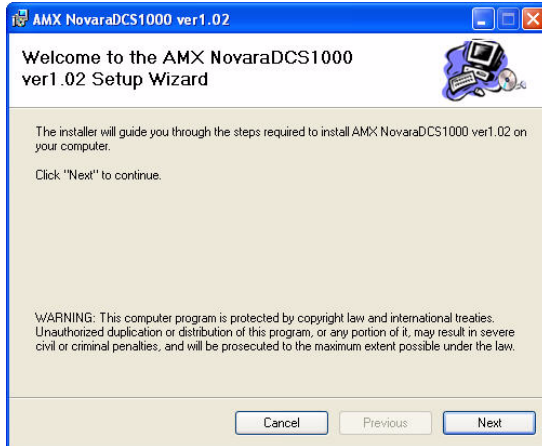


FIG. 39 AMX DCS1000 Setup Wizard

3. Read the *License Agreement* (FIG. 40), and click **I Agree** to accept the terms and proceed with the installation. (otherwise, click **Cancel**).

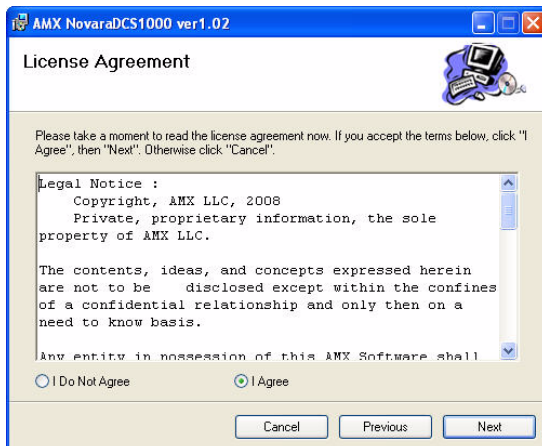


FIG. 40 AMX DCS1000 License Agreement

4. Click **Next** on each of the following dialogs to complete a standard installation (recommended).

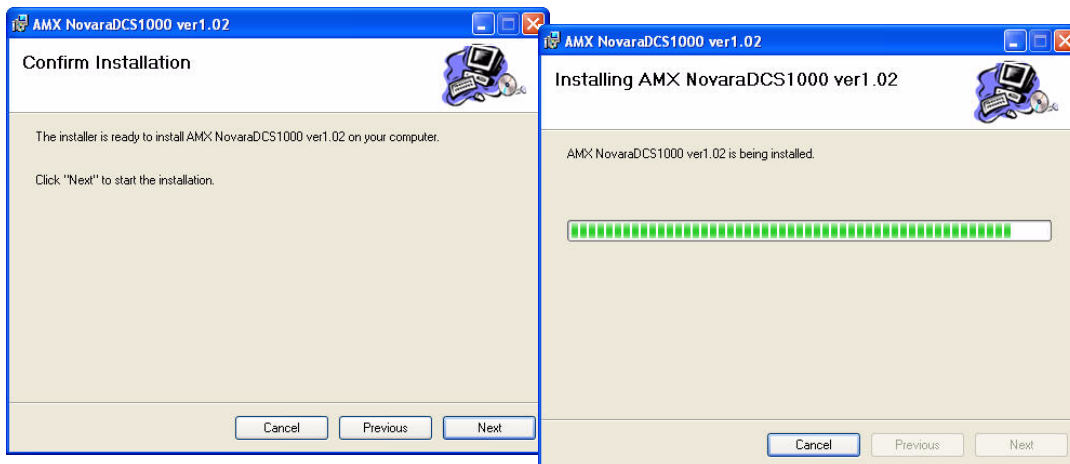


FIG. 41 AMX DCS1000 Standard Installation

5. In the *Installation Complete* dialog, click **Close** to finish (FIG. 42).

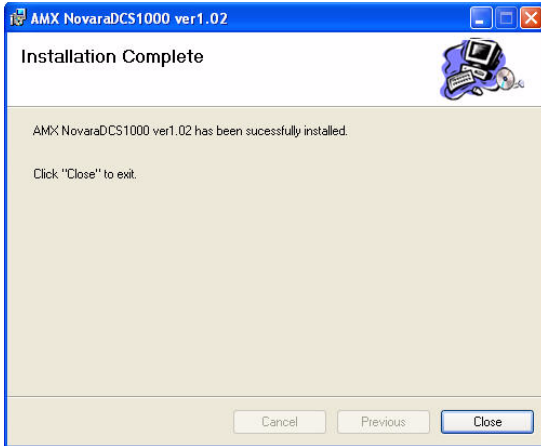


FIG. 42 Installation Complete dialog

Launching AMX Novara DCS1000

Assuming you followed the default installation procedures, launch the AMX Novara DCS1000 application by double-clicking the AMX Novara DCS1000 program icon on your desktop (FIG. 43).



FIG. 43 AMX Novara DCS1000 - Program icon

NOTE: Alternatively, navigate to *Start > Programs > AMX Novara DCS*, and click on the program icon.

Overview

Novara ControlPads and Keypads are configured using the *AMX Novara DCS1000* software application, available for download from www.amx.com (FIG. 44).

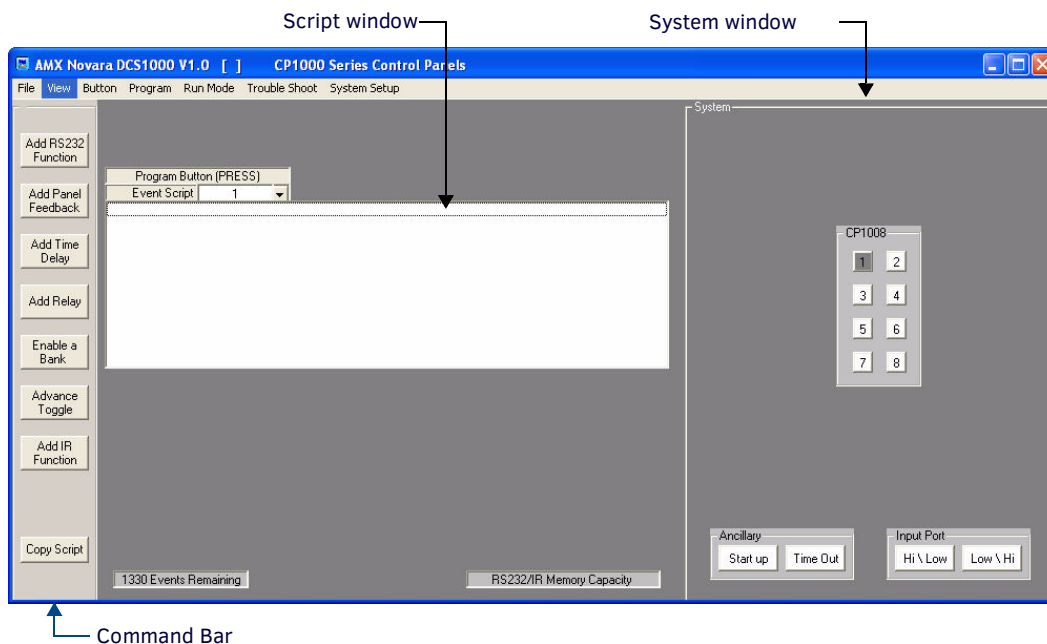


FIG. 44 AMX Novara DCS1000 software application (initial view)

The *AMX Novara DCS1000* application allows the ControlPad to perform various functions such as RS232/IR control/Button Feedback/Delay Time/Relay Control/Time Out if a button press is not detected after a certain time period.

- Each button is configured individually; it can be made to execute on a Press or Release.
- Each button can be configured to Toggle for up to 4 Presses or it could be assigned to a Bank of buttons having the same function but controlling different equipment.

- A Script is written for each button containing events. A script can be written for events to execute when the ControlPad is powered up by selecting 'Start Up' from the system window.
- An Event could be a button Feedback, a Delay Time etc.
- When any or all of the buttons have been configured, the information can be downloaded to the ControlPad.

Downloading the Program to the ControlPad

1. Connect the USB Programming Cable to a USB port on your PC, and to the **Program** (USB) port on the ControlPad.
2. Click on the **Program** menu bar item. This invokes the *Download Program* window (FIG. 45).

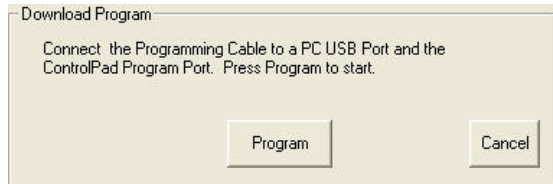


FIG. 45 Download Program window

3. Click the **Program** button to download the program to the ControlPad.

Specifying Button Feedback

A button LED has 3 possible states: *On*, *Off* and *Flash*. Use the **Add Panel Feedback** options to assign feedback to a selected button.

NOTE: Buttons can be assigned to a group where only one LED of the group may be on at any time.

Adding Feedback to a Button Script (Example)

1. Select a button to configure from the *System* window (FIG. 46).

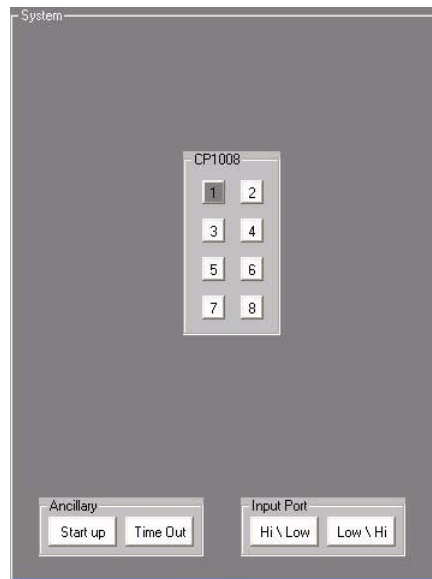


FIG. 46 System window - Button 1 selected

2. Click on the **Add Panel Feedback** button in the Command Bar to invoke the *Select Button Feedback* window (FIG. 47). The selected button will be listed as the default although any button may be selected, via the drop-down menu on the left side of the window.

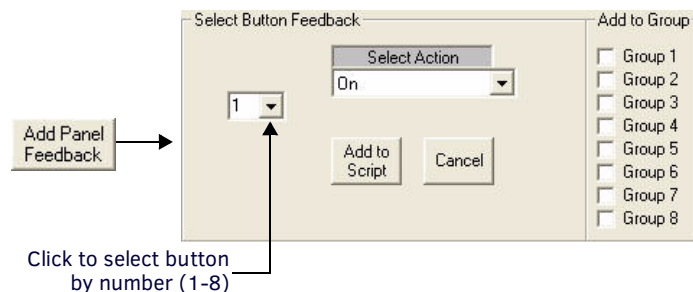


FIG. 47 Select Button Feedback window

3. Select '**On**' from the *Select Action* drop-down menu.

- Click the **Add to Script** button. The *Event Script* window indicates **Event 1** as being the chosen button feedback: **On** (FIG. 48).

```
EVENT 1 : Button 1 Feedback : On
```

FIG. 48 Event Script window - Event 1

- With button 2 selected, select **Flash** from the *Select Button Feedback* drop-down menu, and click on **Add To Script** add this feedback to the script. The *Event Script* will now show **Event 2** as **Button 2 Feedback: Flash** (FIG. 49).

```
EVENT 1 : Button 1 Feedback : On
EVENT 2 : Button 2 Feedback : Flash
```

FIG. 49 Event Script window - Event 2

- Download the program to the ControlPad - see the *Downloading the Program to the ControlPad* section on page 36.
- When the panel has been loaded press the configured button on the ControlPad (in this example, button #1). The chosen button for Event1 will illuminate and the button for Event2 will flash.
- Try configuring other buttons with On / Off / Flash actions.
- To Save your program, select **File > Save** from the menu bar.

NOTE: AMX Novara DCS1000 data files are saved with the extension *.NVA.

Button Feedback - On / All Buttons Off

The *On / All Buttons Off* Button Feedback option will illuminate the chosen button, and turn off all other buttons on the ControlPad (FIG. 50).

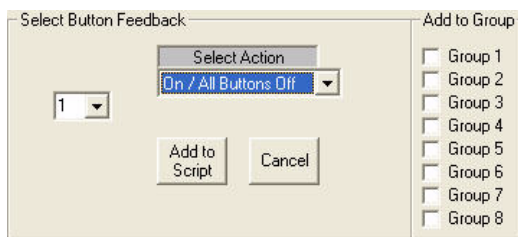


FIG. 50 Button Feedback - On / All Buttons Off

Button Feedback - On / Group Off

The *On / Group Off* Button Feedback option allows you to assign feedback to a Group, so that only one of the group may be illuminated at a time (FIG. 51).

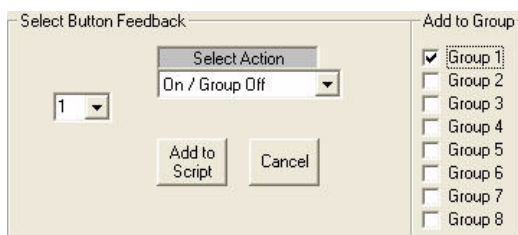


FIG. 51 Button Feedback - Button 1, On / Group Off, Group 1

For instance Play / Stop / Pause. An LED may be assigned to up to 8 groups.

- Clear the program by selecting **File > New** from the menu bar.
- Select Button 1 in the *System* window (see FIG. 46 on page 36).
- Click on **Add Panel Feedback** to invoke the *Select Button Feedback* window (FIG. 47 on page 36).
- From the *Select Action* drop-down menu, select **On/ Group Off**, and click **Group1** under Add To Group (as shown in FIG. 51). Repeat for Buttons 2 to 4.
- Select Button 5, click on **Add Panel Feedback**, select **On/ Group Off**, and click on **Group 2** (FIG. 52).



FIG. 52 Button Feedback - Button 5, On / Group Off, Group 2

Repeat for buttons 6 to 8.

6. To Save your program, select **File > Save** from the menu bar.

Testing Grouped Feedback

1. Download the program to the ControlPad (see the *Downloading the Program to the ControlPad* section on page 36).
2. Press Button 1 - the LED should illuminate.
3. Now press Button 2, this LED should illuminate, and extinguish Button 1.
 - Only the pressed button of 1 to 4 will stay illuminated.
 - Likewise only the pressed button of 5 to 8 will stay illuminated.

Delay Time

A delay time can be added in between events in a Script.

- Delays can range from 0.5 seconds up to 24hours.
- The delay is absolute and no other Event or Button press will be acknowledged until the time period has elapsed.

Adding Delay Time to a Script (Example)

1. Select a button, and add **Flash** feedback as Event 1 (FIG. 53).

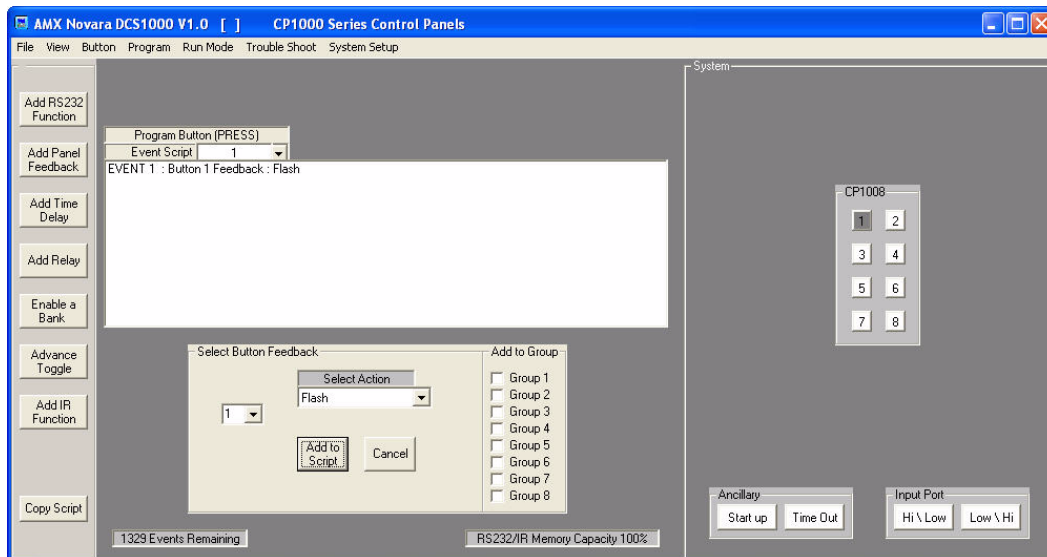


FIG. 53 Button 1 selected, "Flash" Button Feedback selected and added to Script as "Event 1"

2. Click **Add Time Delay** to invoke the *Set Time Delay* window (FIG. 54).



FIG. 54 Set Time Delay window

3. Use the left/right arrow buttons to specify a time period.
 - Click the arrows on the *Hours* field to adjust hours up/down, in one-hour increments.
 - Click the arrows on the *Minutes* field to adjust minutes up/down, in one-minute increments.
 - Click the arrows on the *Seconds* field to adjust seconds up/down, in one-half second increments.

For this example set the *Time Delay Between Events* period for 5 seconds (FIG. 55).



FIG. 55 Set Time Delay window - 5-second delay

4. Click **Add to Script** to add the Time Delay Between Events to the script, as **Event 2**.
5. Set the **Button Feedback** action to **On**, and add it to the script as **Event 3** (FIG. 56).

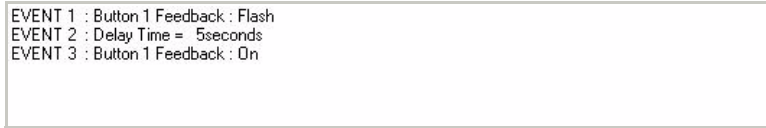


FIG. 56 Event Script window - Event 2 = Delay Time 5 seconds, Event 3 = Feedback On

6. Download the program (see the *Downloading the Program to the ControlPad* section on page 36).
7. Press the configured Button (in this case, Button #1).
8. The button will flash for 5 seconds, then stay On.

RS232 Functions

The ControlPad can be configured to output an RS232 command on a Button action. All RS232 commands are contained in Library files.

Opening RS232 Library Files

1. Clear the program by selecting **File > New** from the menu bar.
2. Click the **Add RS232 Function** button in the Command Bar to invoke the *Select RS232 Function* window, indicating the currently selected RS232 Library (FIG. 57).

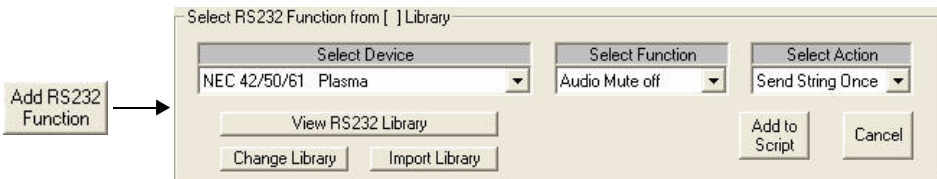


FIG. 57 Select RS232 Function window

If the Device to control is in a different RS232 Library, click the **Change Library** button and select the library to display (in the *Open* dialog).

NOTE: RS232 Library files use the file extension *.PRR.

Adding a RS232 Command to an Event

1. Select the device to control from the *Select Device* drop-down menu.
2. Select the desired function from the *Select Function* drop-down menu.
3. Select the desired action from the *Select Action* drop-down menu. Action options include:
 - **Send String Once** will send the command string one time only.
 - **Select Send No.** allows you to send a command up to 50 times.
Click the arrows on the *Select No. of Transmission Strings* field to specify the number of strings to send for this command.
 - Click the arrows on the *Select Delay Time between Strings* field to set a delay time between strings. (FIG. 58).

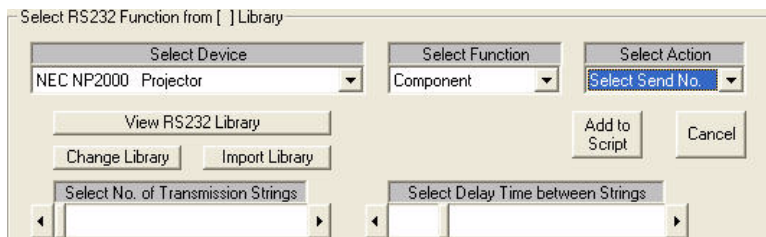


FIG. 58 Select RS232 Function window - Select Number of Strings/Delay Time between Strings

- **Send Continuous** sends continuous strings while a button is executed.
A delay time can be set between strings. This action is useful for Volume Up and Down commands.
Setting a delay time of 150mS between strings gives a steady ramp up and down (FIG. 59).

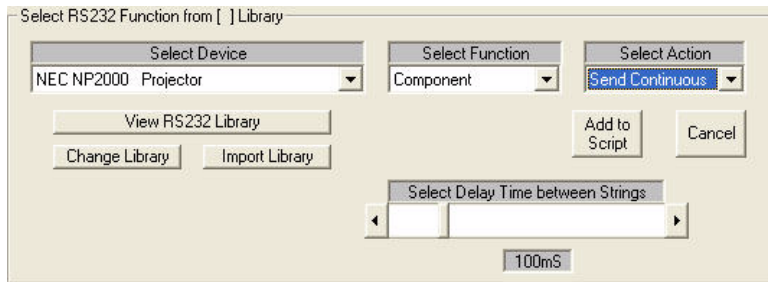


FIG. 59 Select RS232 Function window - Send Continuous/Delay Time between Strings

4. When the RS232 parameters have been set, click **Add to Script** to add this RS232 command to the script (FIG. 60).

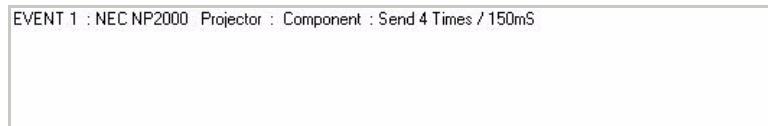


FIG. 60 Adding a RS232 Command to the Script

Viewing RS232 Libraries

To view the RS232 libraries, open the RS232 window then click the **View RS232 Library** button to open the *AMX RS232 Library* dialog (FIG. 61).

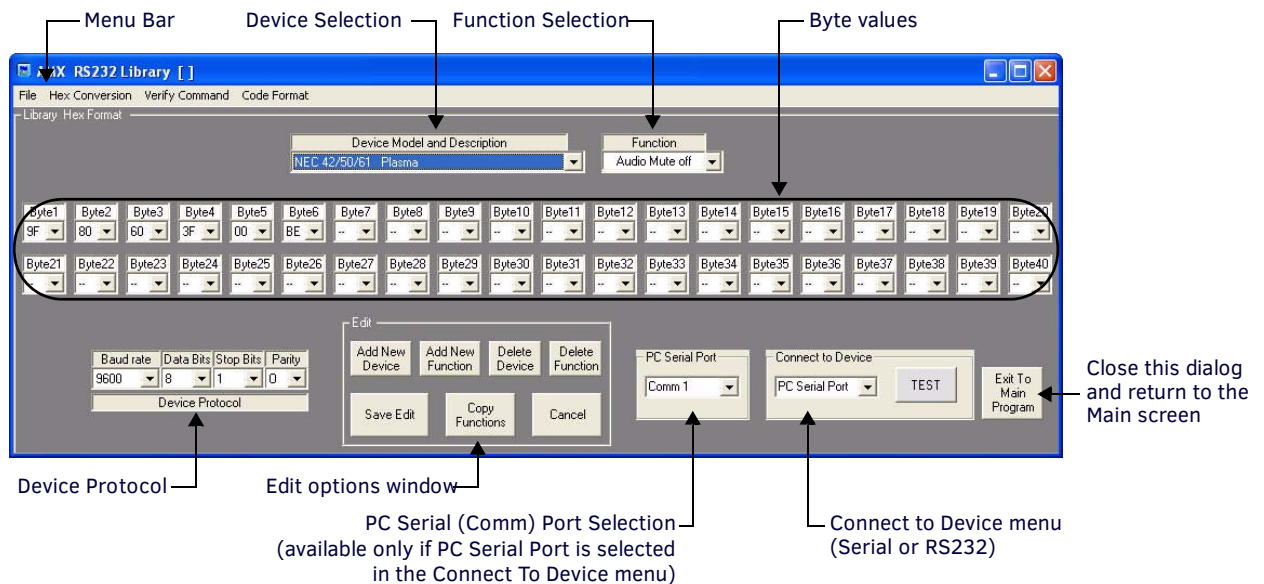


FIG. 61 AMX RS232 Library dialog

This dialog displays the currently selected RS232 Library contents

To view a functions' Protocol and string settings:

1. Select the device from the *Device Model and Description* drop-down menu
2. Select a function from the *Function* drop-down menu.

All the relevant information will be displayed.

- The *Device Protocol* can be changed by selecting new settings for **Baud rate**, **Data bits** and **Stop bits** from their respective drop-down menus.
- Command strings can be edited by changing Byte values via their individual drop-down menus (0-255).
- All Byte values are entered in Hex, Ascii or Decimal (selectable via the *Code Format* menu item).

When an edit is complete, click the **Save Edit** button to store the new values.

Adding a New Device To a RS232 Library

1. Click the **Add New Device** button in the *Edit* options (see FIG. 61) to invoke the *Add New Device* window (FIG. 62).



FIG. 62 AMX RS232 Library dialog - Add New Device window

2. Enter the *Device Make* and *Description*, then click **Save Device**. This opens a new *AMX RS232 Libraries* dialog for the new device (FIG. 63).

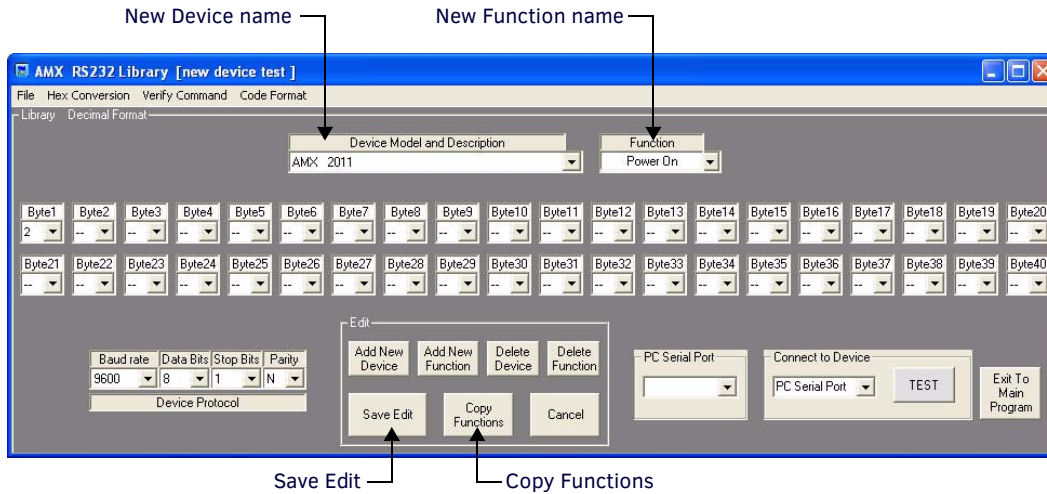


FIG. 63 AMX RS232 Library dialog (for a new device)

3. Enter a Function (in the *Enter Function* field).
4. Use the *Bytes* drop-down menus to enter the command string.
5. Specify the *Device Protocol* settings.
6. Click the **Save Edit** button (in the *Edit* options).

Adding a New RS232 Function to a Device

1. Click the **Add New Function** Command Bar button (see FIG. 57 on page 39). This opens the *AMX RS232 Libraries* dialog.
2. Select the relevant device, and fill in the function information as described above.
3. Click the **Save Function** button (in the *Edit* options) to save the new Function.

Copying RS232 Functions From an Existing Device to a New Device

1. Select the device to copy from then click on **Copy Functions** (in the *Edit* options - see FIG. 63). This invokes the *Add New Device* window (FIG. 64).

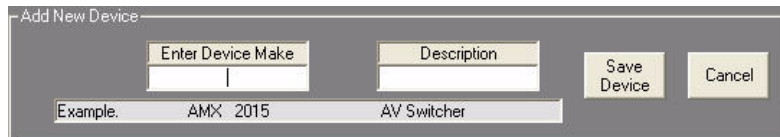


FIG. 64 AMX RS232 Library dialog - Add New Device window

2. Enter the *Device Make* and *Description*, then click **Save Device**.
3. This opens a new *AMX RS232 Libraries* dialog for the new device.
4. Edit the RS232 functions if necessary.

NOTE: For easy finding of RS232 Functions it is recommended that groups of RS232 Libraries are made containing common Devices. New RS232 Libraries can be created by clicking on New from the File Menu. Save the Library using a relevant name, such as the equipment Brand name or Projector etc. Devices and Functions can be added to the Library as above.

Testing RS232 Functions

As a confidence check when editing or adding, a function can be tested by directly connecting the PC to the Device RS232 port or by testing directly through a panel port.

1. Select the PC serial port or panel port you are using from the *Connect To Device* drop-down menu.
2. Click the Test button.

- The Device should then respond to the command sent.

Creating a Test Serial Cable

To connect to a Device to the PC a test cable can be made as follows:

PC Serial Port (female D9 connector) Pin 3 to Device (RX) / Pin 5 to Device (Gnd)

For testing through panel ports connect the Serial Programming Cable to the PC and to the panel's Program Port.

Verifying RS232 Commands

To check a command from a Panel Port use the *Verify RS232 Commands* dialog (FIG. 65).

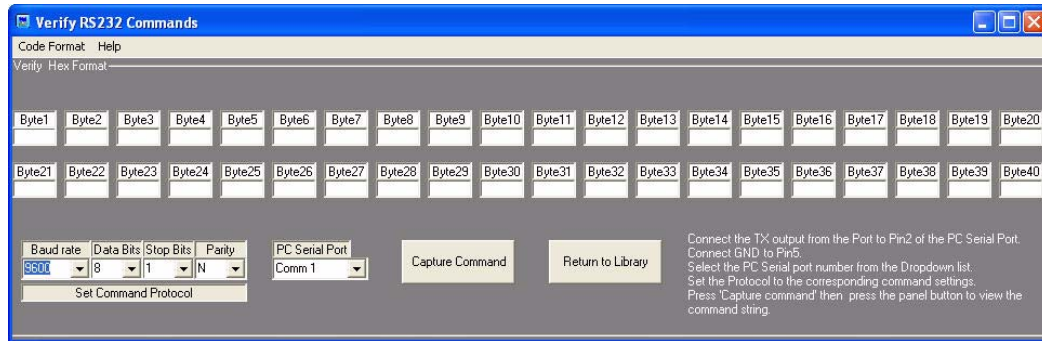


FIG. 65 Verify RS232 Commands dialog

- In the *AMX RS232 Library* dialog's menu bar, select **Verify Command**, to invoke the *Verify RS232 Commands* dialog. A cable will be required to connect the Panel port to the PC serial port. Connections are as follows:
 - Port TX to female D9 Pin 2
 - Port Gnd D9 Pin 5
- From the *PC Serial Port* drop-down menu, select the PC serial port that the cable is connected to (*Comm 1 - Comm 8*).
- In the *Set Command Protocol* window, set the **Baud rate**, **Data Bits** and **Stop bits** to match the command Protocol.
- Click **Capture Command**.
- Press the Panel button to transmit the command.

The captured string will appear in the Byte boxes. This should match the string in the Library.

IR Commands

The ControlPad can be configured to output an IR function on a Button action. All IR functions are contained within a Library.

Opening IR Library Files

- Click the **Add IR Function** button in the Command Bar to invoke the *Select IR Function* window, indicating the currently selected IR Library (FIG. 57).

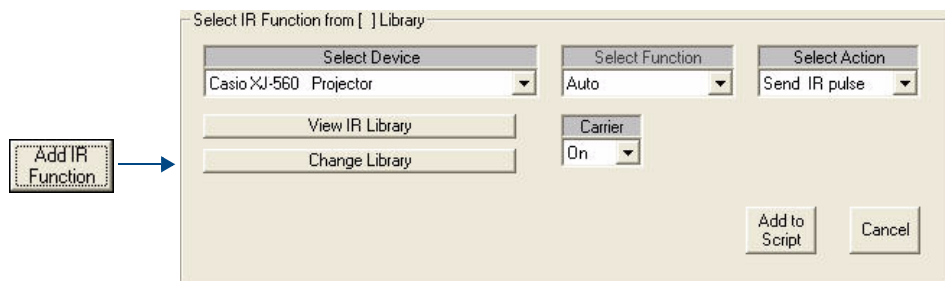


FIG. 66 Select IR Function window

If the Device to control is in a different IR Library, click the **Change Library** button and select the library to display (in the *Open* dialog).

NOTE: Novara IR Library files use the file extension *.PLR.

Adding an IR Command to an Event

- Select the device to control from the *Select Device* drop-down menu.
- Select the desired function from the *Select Function* drop-down menu.
- Select the desired action from the *Select Action* drop-down menu. Action options include:
 - Send IR Pulse** sends the IR function 4 times only.
 - IR Pulse No.** allows you to send a function up to 120 times, selectable from a scroll bar.
 - Send Continuous** sends continuous pulses while a button is executed. This action is useful for Volume Up and Down and Cursor functions.

NOTE: When hard-wiring to a device the carrier may have to be turned off, refer to Manufacturers instructions, otherwise carrier must be left On.

- When the IR parameters have been set, click **Add to Script** to add this IR command to the script (FIG. 67).

```
EVENT 1 : Casio XJ-560 Projector : Power : Send IR Pulse 4 Times : Carrier On
```

FIG. 67 Adding an IR Command to the Script

AMX IR Libraries

To view the IR libraries, open the IR window then click the **View IR Library** button to open the *AMX IR Library* dialog (FIG. 68).

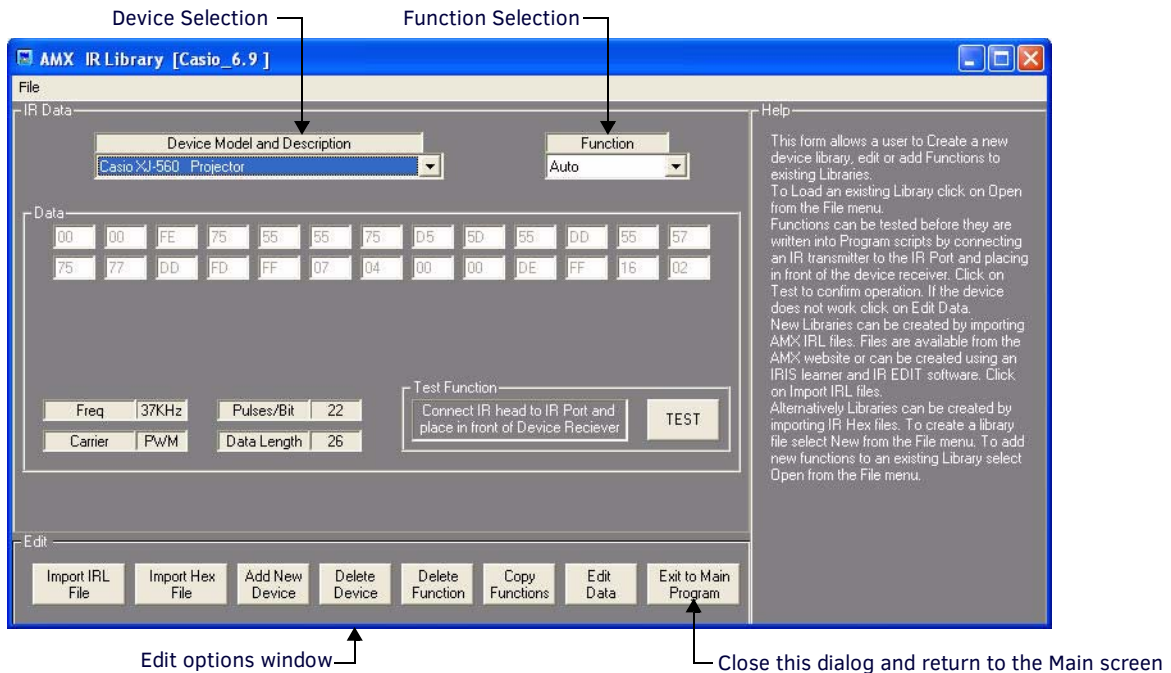


FIG. 68 AMX IR Library dialog

The options in this dialog allow you to create a new IR Device Library, as well as Edit or Add Functions to existing IR Libraries.

Loading an Existing IR Library

- Click **File > Open**. This invokes the Open dialog.
- Select an IR Library (Data) file.

NOTE: Novara IR Library (Data) files use the file extension *.PLR.

It is recommended that all IR functions are tested before being written into program scripts (see the *Testing IR Functions* section on page 50).

Creating New IR Libraries

New IR Libraries can be created by importing AMX IR Library (IRL) files, by capturing IR functions via an IRIS IR Capture Unit, or by importing IR Hex files.

Importing AMX IR Library (IRL) Files

- In the Edit Options window of the AMX Library Files dialog, click **Import IRL** (FIG. 69).

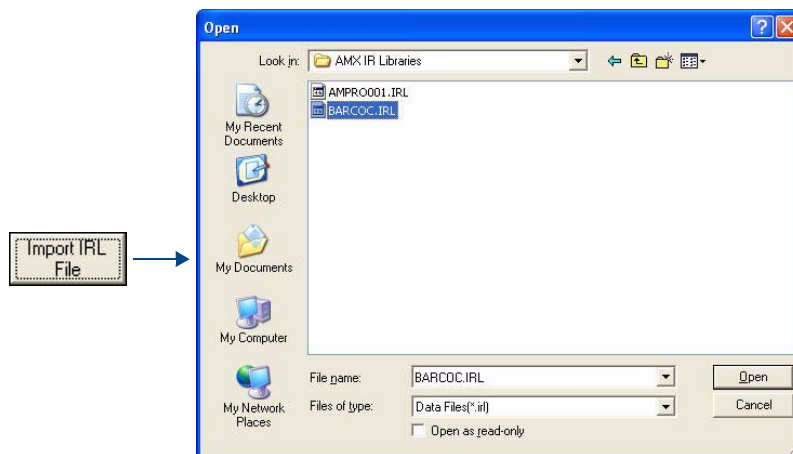


FIG. 69 Open dialog

2. In the Open dialog, select an IRL file, and click **Open**.
3. The selected IRL file is converted to the PLR format (FIG. 70).

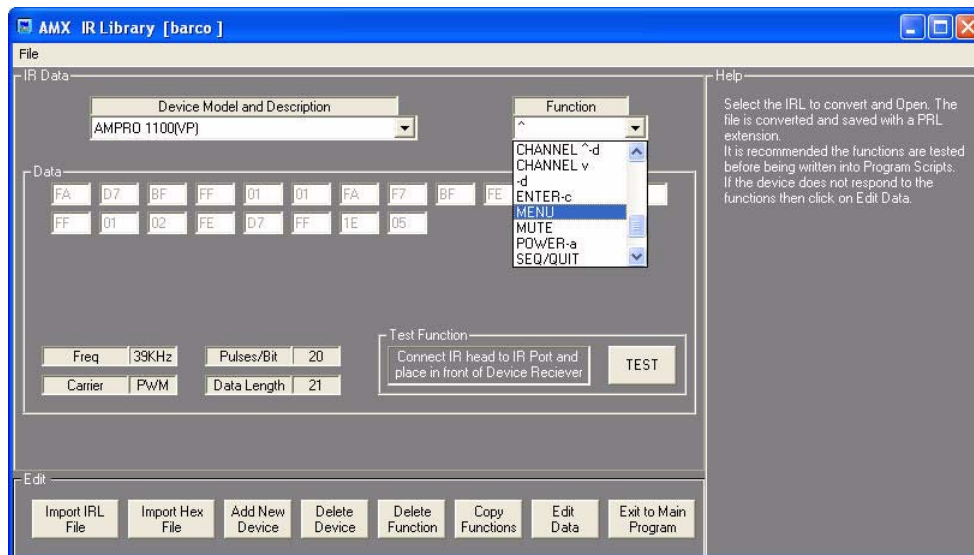


FIG. 70 AMX IR Library dialog - showing a converted IRL file

- The new file maintains the IRL name but with a PLR extension.
- Each IRL file only needs to be imported once.

Downloading IR Files From www.AMX.com

As a registered AMX Dealer, you can download AMX IR Library files directly from the *Partners* page of the www.amx.com website, as described below.

NOTE: You must log into the website as a Dealer in order to access these files.

1. Click the **Partners** link at the top of the main www.amx.com website to access the *AMX Device Discovery Partners* page (FIG. 71).

FIG. 71 www.amx.com - AMX Device Discovery Partners page

2. In the menu on the left side of the page, click on **Search Devices** to access the *Search Devices* page (FIG. 72):

FIG. 72 www.amx.com - Search Devices page

3. Fill in the search fields with as much information as you can provide for the device for which you need an IR file.

NOTE: All search boxes use implied wild cards. For example, entering 'son' in the Manufacturer box will return Sonance, Sonic Blue, Sonic Foundry and Sony.

4. In the *Control Method* drop-down, select **IR** (FIG. 73).

FIG. 73 Control Method drop-down menu

5. Click **Search**. The results of the search are displayed (FIG. 74):

Partners > InConcert Resource Center > Search Devices

Search Devices

Note: All search boxes use implied wildcards. For example, entering 'son' in the Manufacturer box will return Sonance, Sonic Blue, Sonic Foundry and Sony.

Device Model: Device Type:

Manufacturer: Control Method:

Manufacturer Series: AMX Systems:

Remote Control:

☐ Standard Modules
☐ Duet Modules

☐ Access ☐ Landmark
☐ Netlinx
☐ Standard Netlinx
Module ☐ Duet Module

Manufacturer	Device Type	Model	Series	Control Method	AMX Systems
Sony	AM/FM Tuner	STRDE135		IR	
Sony	AM/FM Tuner	STRDE197		IR	
Sony	AM/FM Tuner	STRSE200		IR	

3 device(s) retrieved.

FIG. 74 Search results

- Click **IR** in the *Control Method* column of the search results list to access the *Device Model Details* dialog for the selected device (FIG. 75).

Device Model Details - Mozilla Firefox

http://www.amxcorp.com/inconcert/ct/DevMdDe

Sony - AM/FM Tuner [STRDE135]

☒ Model Information
☒ Model Control Method
☒ IR
Specification
Meta Data
Cables
Downloads

IR Specifications

Communication Parameters: Carrier state : On

AXF Connection pins : 1+2

IR Meta Data

IR Cable(s)

Cable FG: 10-000

Description: 2p Phoenix To LED (IRC)

Supported AMX Devices:

- AXBIR54:IR/S1
- AXBIR54:IR/S2
- AXBIR54:IR/S3
- AXBIR54:IR/S4
- AXCENT2:IR/S1
- AXCENT2:IR/S2
- AXCENT2:IR/S3
- AXCENT2:IR/S4
- AXCENT2:IR/ICE

Done 0:4 Now: Partly Sunny, 83° F Thu: 96° F Fri: 100° F

FIG. 75 Device Model Details dialog (IR Control Method)

- In the left-hand menu bar under **Model Control Method** > **IR**, select **Downloads** to access the File(s) available for download for the selected device / control method (FIG. 76).

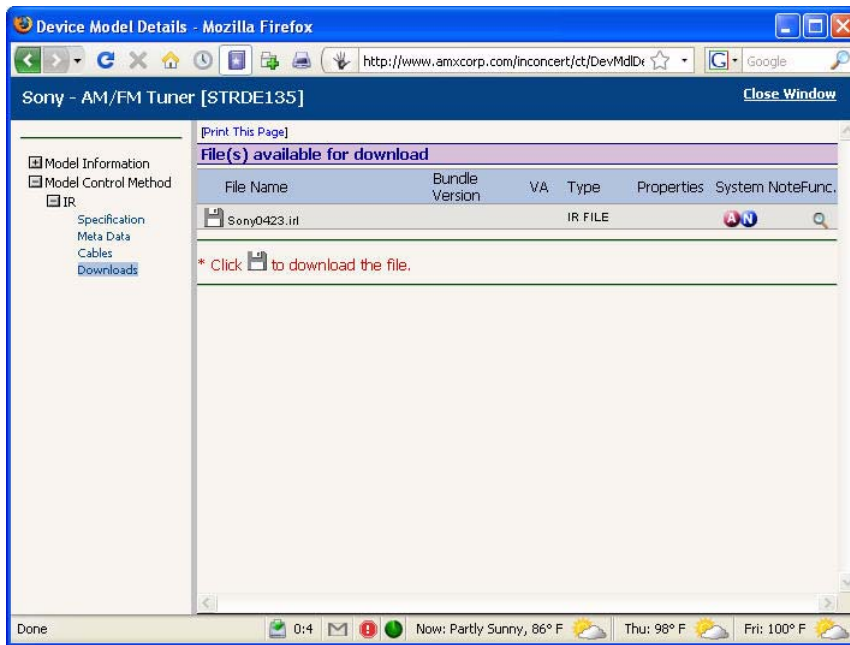


FIG. 76 Device Model Details dialog (Files Available for Download)

- Click the file icon to download a file in the **File(s) available for download** list.

Creating New IR Libraries Using an IRIS IR/Serial Data Capture Device

NOTE: The IRIS (FG5448) is a stand-alone, self-contained unit used to capture IR or wired function signals from a hand controller. Once captured and verified, the control functions are sent to a PC operating a IR Library program, like Novara DCS or IREdit For details on using the IRIS, refer to the IRIS Operation/Reference Guide (available at www.amx.com).

To create new libraries using a manufacturers handset and an AMX IRIS Unit (FIG. 77):



FIG. 77 AMX IRIS IR Capture Unit

- In the AMX IR Libraries dialog, select **File > New**.
- In the Save As dialog, enter a name for the Library File and click **Save**.
- In the AMX IR Libraries dialog, click **Add New Device** to invoke the *Add New Device* fields (FIG. 30):



FIG. 78 AMX IR Library dialog - Add New Device fields

- Enter the *Device Make* (model) and *Description*, and click **Save Device**.
- Click on **Learn new function** to invoke the *Learn Function* fields (FIG. 79):

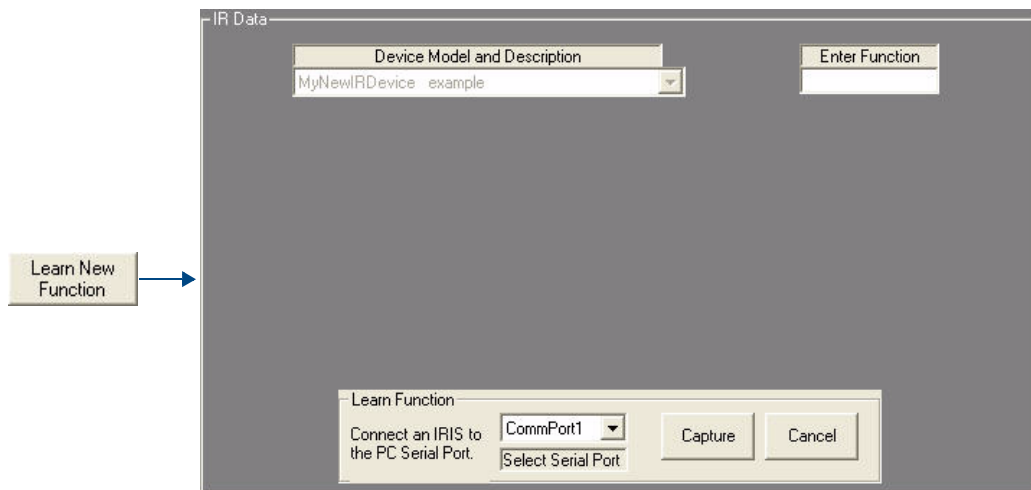


FIG. 79 AMX IR Library dialog - Learn New Functions fields

6. Connect the IRIS to your PC:
 - a. Connect an RS-232 cable to the DB-9 connector on the IRIS unit and an RS-232 port on your PC.
 - b. Set the baud rate in the IRIS unit to match the PC baud rate.
 - c. Then, connect the 12 VDC or 12 VAC power supply to the 12 VDC connector on the IRIS unit.
 - d. The READY LED lights and 01 appears in the display.
7. Enter a function name in the **Enter Function** text field.
8. Learn the code from the remote controller:
 - a. Hold the remote approximately 3-inches away from the IR capture window. Press and hold the first key on the HC to capture the first function. The SIGNAL LED will start blinking. Release the HC key as soon as the READY LED goes off.
 - b. The [] briefly appears in the display to indicate the HC function is captured. Then, 01 appears and the READY and VERIFY LEDs light. The LED will not light if P4 mode is active.
 - c. Hold the HC device approximately 3-inches away from the IR capture window. Press and hold the same key on the HC device again to verify the IR function was captured correctly by the IRIS unit. If the HC function is captured correctly, a pair of [] (brackets) will briefly flash in the display. The VERIFY LED goes off, 01 appears in the display, and the SEND pushbutton's LED lights. If an Er message appears in the display, repeat steps 3 and 5. Otherwise, go to step 6.
 - d. Press the SEND pushbutton to send the captured HC function to the PC running the IREdit software program.
 - e. Repeat steps C through E to capture all the HC functions on your list.
9. Click on Capture then press the Send button on the front panel of the IRIS. The function will be added to the current device library.

Refer to the *IREdit* instruction manual for information on to storing captured HC functions.

Importing IR HEX File Codes

Alternatively, IR Libraries can be created by importing IR HEX file codes.

NOTE: AMX does not provide HEX codes, and therefore, cannot give any assurance that data provided by others is accurate or functional. There are a number of web sites that make IR HEX codes freely available. One such site is Remote Central, where you can search for your specific device and look for downloads with "text files with HEX codes".

1. In the Edit Options window of the AMX Library Files dialog, click **Import Hex File** to access the Hex data import and conversion options (FIG. 80).

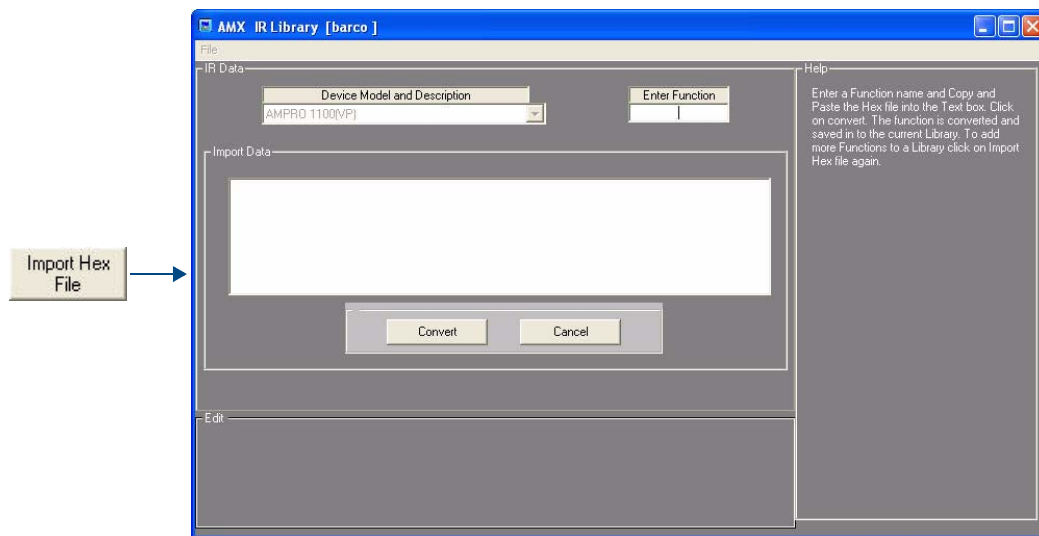


FIG. 80 AMX Library Files dialog - Hex data import and conversion options

2. Enter the name of the function that you want to import, in the *Enter Function* text field.
3. Copy and paste the appropriate Hex code for this function in the *Import Data* text field (FIG. 81).

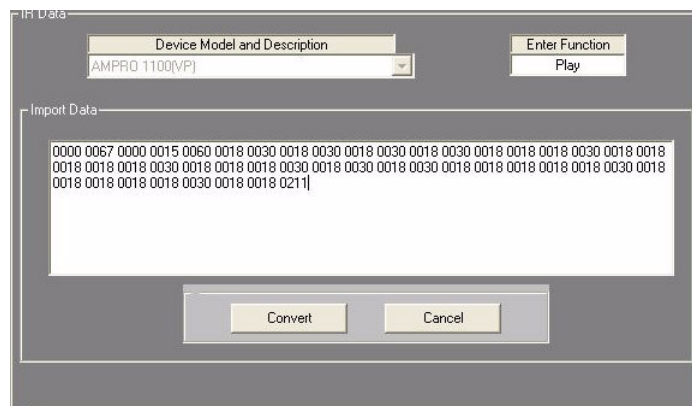


FIG. 81 AMX Library Files dialog - Hex data entered

- The data should be entered without any extra symbols.
 - No "double quotes" or <\$>, <0x>, or <0h> symbols are used to indicate HEX formatting.
4. Click the **Convert** button to convert the Hex code and add it to the selected IR Library.

It is recommended that all IR functions are tested before being written into program scripts (see the *Testing IR Functions* section on page 50).

Using IR HEX Codes To Create New IR Libraries

1. In the AMX IR Libraries dialog, select **File > New**.
2. In the Save As dialog, enter a name for the Library File and click **Save**.
3. In the AMX IR Libraries dialog, click the **Add New Device** button to invoke the *Add New Device* fields (FIG. 82):



FIG. 82 AMX Library Files dialog - Add New Device fields

4. Enter the Device model (*Make*) and *Description*, and click **Save Device**.
5. In the Edit Options window of the AMX Library Files dialog, click **Import Hex File** to access the Hex data import and conversion options (FIG. 80).

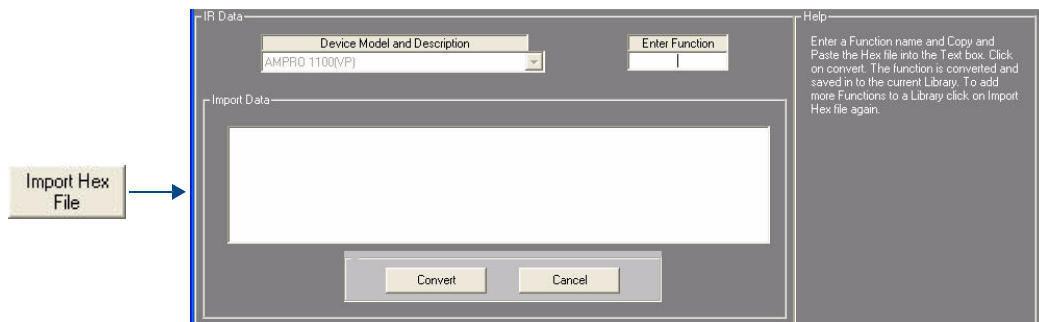


FIG. 83 AMX Library Files dialog - Hex data import and conversion options

6. Enter the name of the function that you want to import, in the *Enter Function* text field.
7. Copy and paste the appropriate Hex code for this function in the *Import Data* text field (see the *Importing IR HEX File Codes* section on page 48).
8. Click the **Convert** button to convert the Hex code and add it to the selected IR Library.

Testing IR Functions

It is recommended that all IR functions are tested before being written into program scripts:

1. In the AMX IR Libraries dialog, select the function to test from the *Function* drop-down menu (FIG. 84).

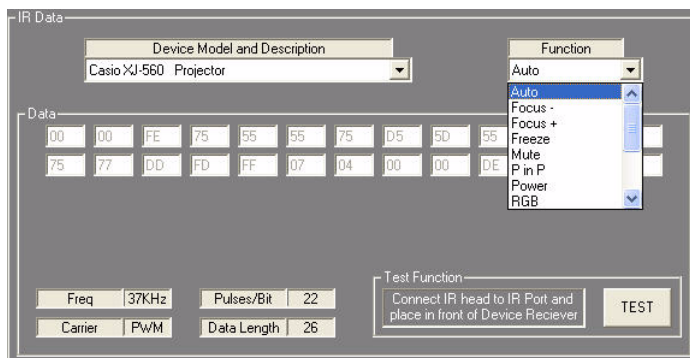


FIG. 84 AMX Library Files dialog - Selecting a Function for testing

2. Connect an IR Transmitter to the ControlPad's IR Port, and place the IR Emitter directly in front of the device's IR receiver.
3. Click the **TEST** button, and verify that the device responded appropriately.

If the device does not respond correctly, click the **Edit Data** button (in the Edit Options window) to access the IR Data for the selected function, to view and edit (FIG. 85):

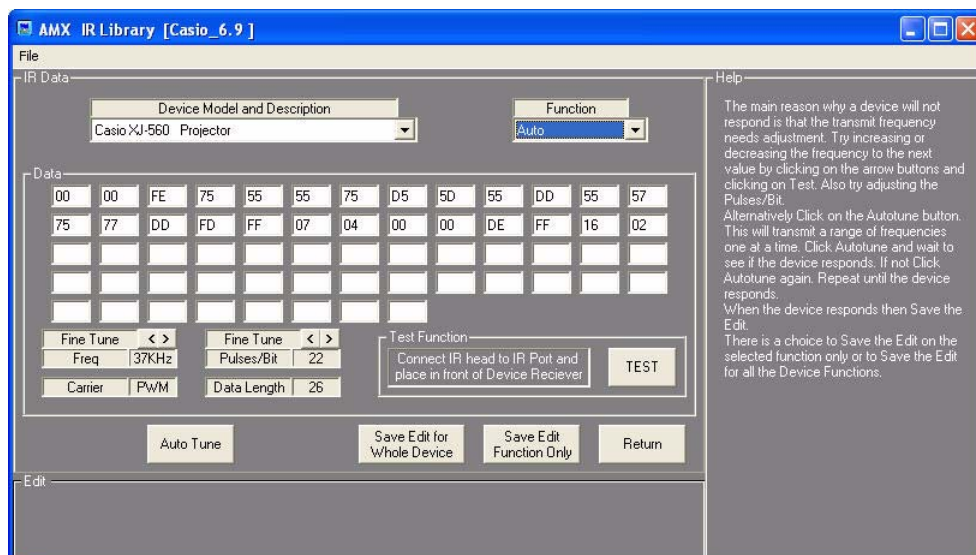


FIG. 85 AMX Library Files dialog - Edit IR Data

The main reason that a device will not respond is that the transmit frequency needs adjustment.

- Try increasing or decreasing the frequency to the next value by clicking on the **Fine Tune** arrow buttons. Also, try adjusting the Pulses/Bit value. Click on **TEST** to re-test the function (FIG. 86).

 


FIG. 86 AMX Library Files dialog - decreasing Frequency and Pulses/Bit values

Alternatively, use the *Auto Tune* feature to transmit a range of frequencies one at a time: Click **Auto Tune** and wait to see if the device responds. If not, click **Auto Tune** again. Repeat until the device responds. When the device responds, then Save the edit:

- Click **Save Edit For Whole Device** to save the edit for all of the Device Functions.
- Click **Save Edit Function Only** to save the edit on the selected function only.

Input Port Scripts

A script can be executed when a *High to Low* or *Low to High* state is detected on the Input Port. This is useful for external detection of a switch or PIR.

To write a script for the Input Port:

1. Click on either of the **Input Port** buttons in the System window (FIG. 87).



FIG. 87 Input Port buttons

2. Write a script as normal.

When the configured Input Port state is detected, the script will execute.

- If the ControlPad is busy when the state change occurs, the script will execute when the ControlPad is free.
- To return to the button list, select **Button > Press** from the menu bar.

Changing a Button Action

Button action can be changed via options in the **Button** menu (in the menu bar). Four options are available:

Press

A script is programmed for a button press.

Release

A script is programmed when a button is pressed then released.

Toggle

Up to four different scripts can be written for a button, using the *Toggle* option in the Button menu:

1. Choose a button to configure and select **Button > Toggle**. This invokes the *Toggle* window (FIG. 88):



FIG. 88 Toggle window

2. Click on the **Enable** checkbox.
3. Select the number of toggle presses required for the button (2, 3, or 4).
4. Note that initially the Toggle window is set to configure the first press of the button. Program the script as normal for the first button press.
5. Next select **Program 2nd Press** from the drop-down menu.
6. Program the script for the second press.
7. Continue for each required button press.

When the panel is configured, the button will toggle on each button press, then loop to 1st press.

Bank Assign

A button can be assigned to one of three banks X, Y, or Z. Each bank can have up to four different functions. This is useful if you have a common set of functions. For example. You could have a single 'Play' button controlling up to four different devices (e.g. DVD, VCR, CD, MP3 player, etc). To achieve this the button must be Bank Assigned.

1. Choose **Button 1** to configure (in the *System window*), and select **Button> Bank Assign**. This invokes the *Assign to Bank* window (FIG. 89):

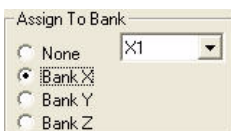


FIG. 89 Assign to Bank window

2. Select **Bank X**. Bank **X1** appears as default.
3. Write a script for Bank **X1** (e.g. DVD play - FIG. 90).

The screenshot shows the 'Assign To Bank' dialog box with 'X1' selected in the dropdown menu. The 'Program Button (BANK)' section shows 'Event Script' set to '1'. The script area contains the following text:

```
EVENT 1 : Button 1 Feedback : On / Group Off
EVENT 2 : Sony (1) DVD Player : Play : Send IR Pulse 4 Times : Carrier On
```

FIG. 90 Script for Bank X1 (DVD Play)

4. Select **X2** from the *Assign To Bank* drop-down menu and write a script (e.g. VCR play - FIG. 91).

The screenshot shows the 'Assign To Bank' dialog box with 'X2' selected in the dropdown menu. The 'Program Button (BANK)' section shows 'Event Script' set to '1'. The script area contains the following text:

```
EVENT 1 : Button 1 Feedback : On / Group Off
EVENT 2 : Sony (1) VCR : Play : Send IR Pulse 4 Times : Carrier On
```

FIG. 91 Script for Bank X2 (VCR Play)

5. Select **X3** from the *Assign To Bank* drop-down menu and write a script for a CD player (FIG. 92).

The screenshot shows the 'Assign To Bank' dialog box with 'X3' selected in the dropdown menu. The 'Program Button (BANK)' section shows 'Event Script' set to '1'. The script area contains the following text:

```
EVENT 1 : Button 1 Feedback : On / Group Off
EVENT 2 : Sony CD (2) CD Player : Play : Send IR Pulse 4 Times : Carrier On
```

FIG. 92 Script for Bank X3 (CD Play)

6. Select **X4** from the *Assign To Bank* drop-down menu and write a script for a tuner (FIG. 93).

The screenshot shows the 'Assign To Bank' dialog box with 'X4' selected in the dropdown menu. The 'Program Button (BANK)' section shows 'Event Script' set to '1'. The script area contains the following text:

```
EVENT 1 : Button 1 Feedback : On / Group Off
EVENT 2 : Vision AV-2600 Amplifier : Tuner : Send IR Pulse 4 Times : Carrier On
```

FIG. 93 Script for Bank X4 (Tuner On)

7. Select Button 2 (in the *System window*), and follow the above procedures writing 'Stop' scripts for bank levels X1 to X3 and a Tuner Off command for Bank X4.

To activate the Bank Levels the 'Bank Enable' function must be used (see below).

Bank Enable

This function is used to activate Bank levels on buttons that have been Bank Assigned.

Following the preceding Bank Assign example:

1. Select Button 5 (in the *System window*) to program. This would be the DVD select button.
2. Click the **Enable a Bank** command button to display the *Bank Enable* options (FIG. 94):

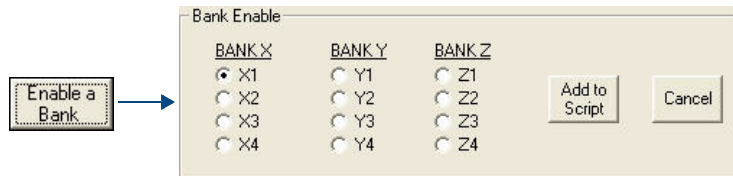


FIG. 94 Displaying the Bank Enable options

3. Write a script for Button 5 and include Bank Enable X1 (FIG. 95).

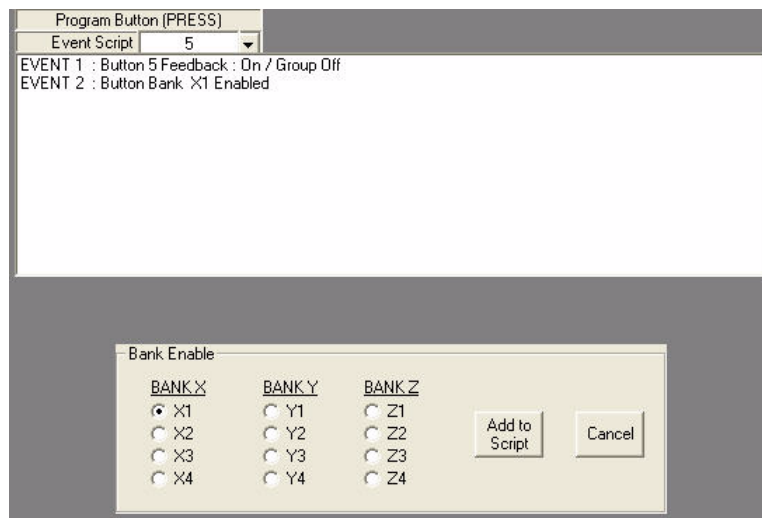


FIG. 95 Button 5 script, with Enable X1 Bank selected

4. Select Button 6 (in the *System window*) to program. This would be the VCR select button.
5. Write a Script for Button 6 and include Enable Bank X2 (FIG. 96).

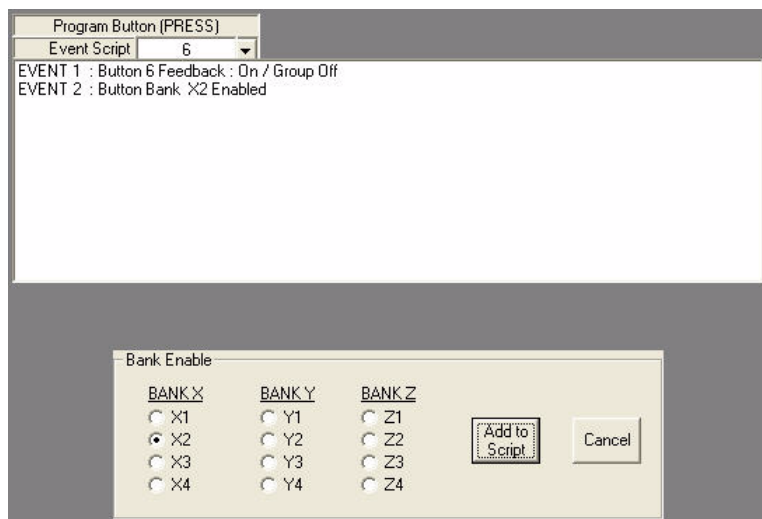


FIG. 96 Button 6 script, with Enable X2 Bank selected

6. Select button 7 which would be the CD select button.
7. Write a script and include Enable Bank X3 (FIG. 97).

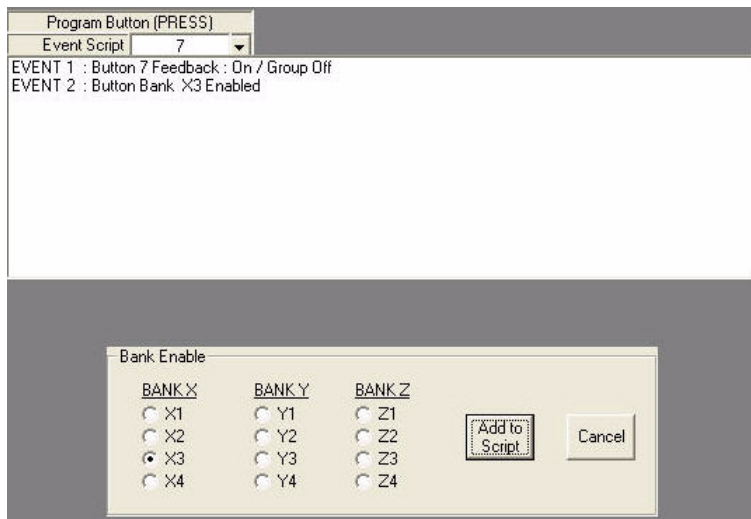


FIG. 97 Button 7 script, with Enable X3 Bank selected

8. Select button 8 (in the *System window*) to program.
9. Write a script for the Tuner select button including enable Bank X4 in the script (FIG. 98).

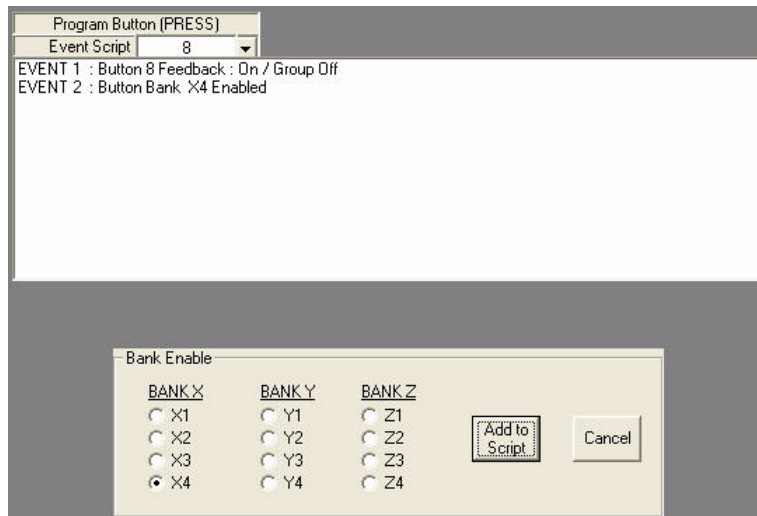


FIG. 98 Button 8 script, with Enable X4 Bank selected

The controlpad will now act in the following way.

- When Button 5 is pressed this will activate Bank X1. This means that whenever any button is pressed that is Bank X assigned the X1 script will run. So for our example, if button 1 is pressed, the DVD Play script will run. If button 2 is pressed, the DVD Stop script will run.
- Now if Button 6 is pressed, Bank X2 will activate, so now if button 1 or 2 is pressed the VCR Play\Stop scripts will run.
- Button 7 will activate Bank X3 and Button 8 will activate Bank X4, hence allowing control of a CD Player or Tuner.
- There are 3 Banks X,Y or Z, so for example, Bank X could be used for a group of buttons with common Transport functions, Bank Y used for Common Menu functions, etc.

Using Bank Assign to Control Two Projectors - Example

The following example illustrates using Bank Assign to control two Sony projectors using Volume Up/Down buttons:

1. Select **Button 1** to configure (FIG. 99):



FIG. 99 Button 1 - selected to configure

- In the menu bar, select **Button > Bank assign**. This invokes the *Bank Assign* options (FIG. 100):

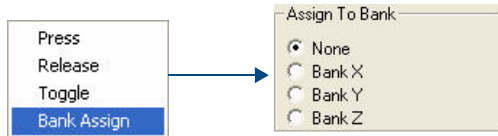


FIG. 100 Button > Bank assign

- Select **Bank X** to enable the button press drop-down menu.
- Select **X1** from the Button Press drop-down menu (FIG. 101):

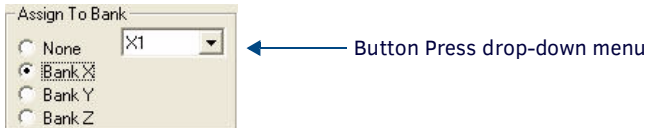


FIG. 101 Assign to Bank X, X1 selected

- Click the **Add IR Function** button in the Command Bar.
- Select the appropriate IR Library for the device manufacturer (via the **Change Library** button), and select the desired device (from the *Select Device* drop-down menu). In this example, we'll select the Sony PX32 Projector.
- Choose the "Volume Down" command (in the *Select Function* drop-down menu) and click **Add To Script** to add it to the Event Script (FIG. 102):

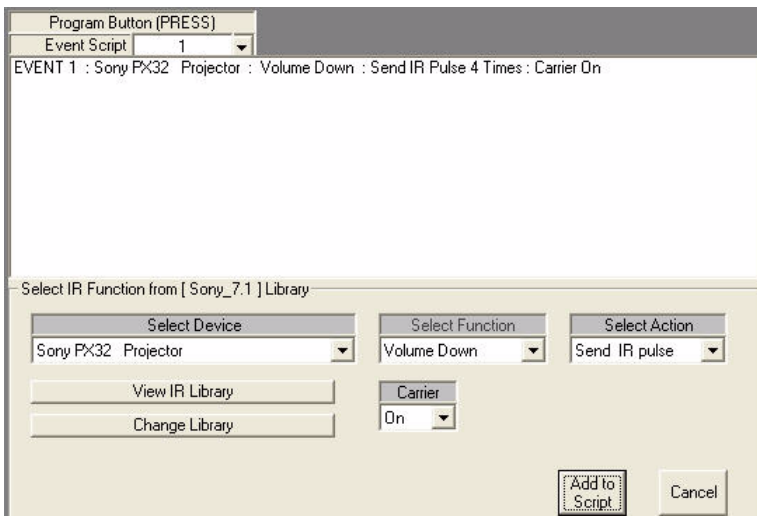


FIG. 102 Button 1 - Add Sony PX32 Projector "Volume Down" Command to Script

- Select **X2** from the drop-down menu in the *Assign to Bank* window.
- Click **Add RS232 Function** in the Command Bar.
- Select the appropriate RS232 Library for the device manufacturer (via the **Change Library** button), and select the desired device (from the *Select Device* drop-down menu). In this example, we'll select the Sony VPL PX11 LCD Projector.
- Choose the "Volume Down" command (in the *Select Function* drop-down menu) and click **Add To Script** to add it to the Event Script (FIG. 103):

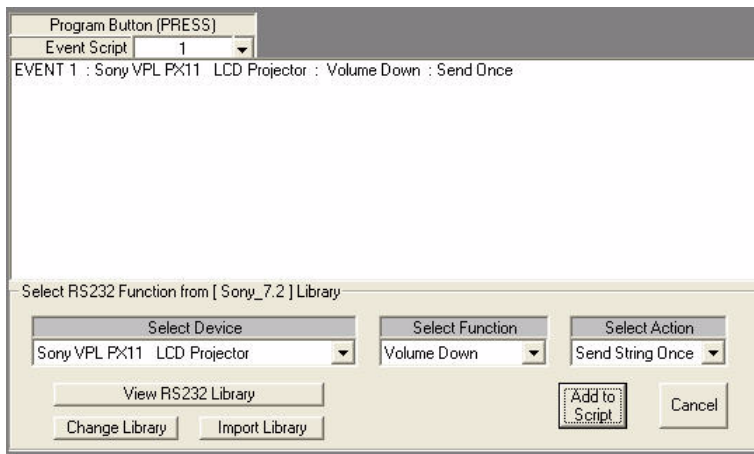


FIG. 103 Button 1 - Add Sony VPL PX11 LCD Projector "Volume Down" Command to Script

12. Select **Button 2** to configure. Repeat as above using Sony PX32 Projector and Sony VPL PX11 LCD Projector *Volume Up* commands.
13. Select **Button 3** to configure (FIG. 104).



FIG. 104 Button 3 selected to configure

14. Click **Enable a Bank** in the Command Bar; select **X1** and **Add to Script** (FIG. 105).

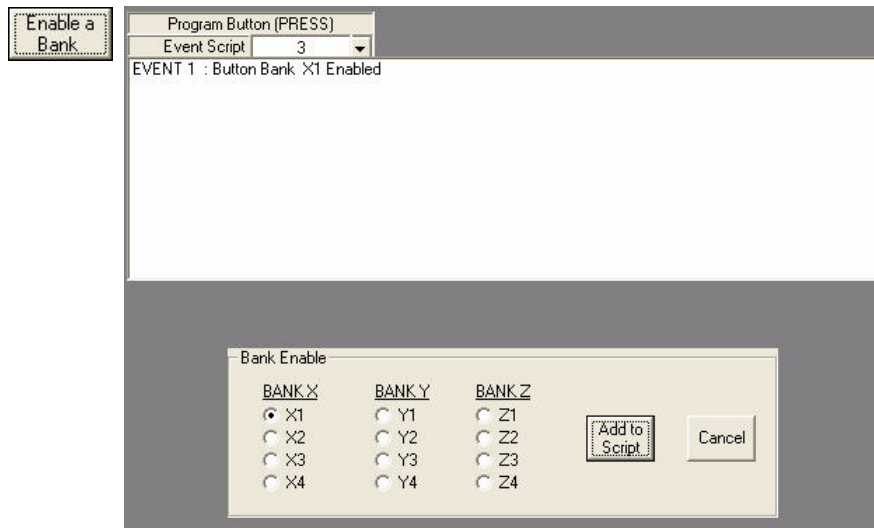


FIG. 105 Button 3 - Button Bank X1 Enabled

15. Select **Button 4** to configure (FIG. 106):



FIG. 106 Button 4 selected to configure

16. Click on **Enable a Bank** in the Command Bar; select **X2** and **Add to Script** (FIG. 107).

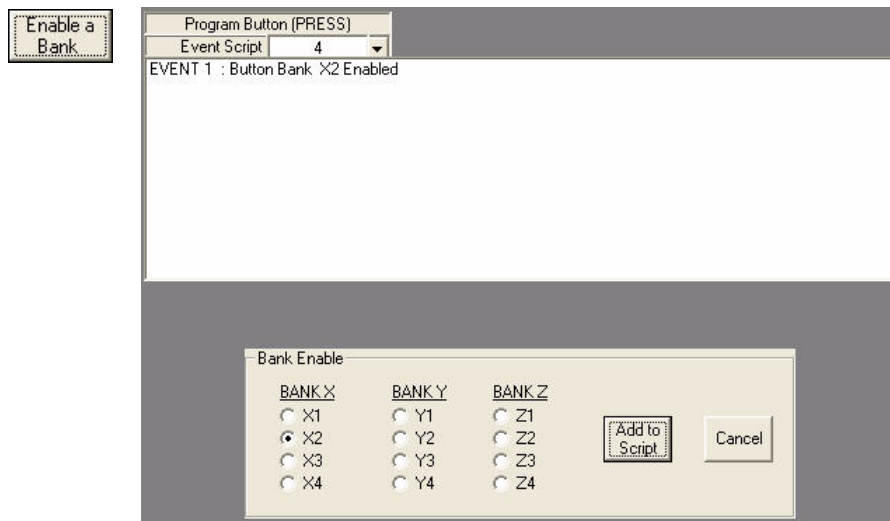


FIG. 107 Button 4 - Button Bank X2 Enabled

17. Download the program to the ControlPad (via the **Program** menu bar item).

- When Button 3 is pressed Buttons 1 and 2 will operate Volume Up/Down on the Sony PX32 Projector.
- When Button 4 is pressed Buttons 1 and 2 will operate Volume Up/Down on the Sony VPL PX11 LCD Projector.

Advance Toggle

The **Advance Toggle** feature allows a button to skip toggles.

For example, a button is configured to toggle a Device on and off, and the first press turns the Device on.

If the Device is also turned off by a Time Out function, then pressing the button a 2nd time will have no effect as the Device is already off.

- By programming an *Advance to Press 1* in the Time Out script, the Toggle button will then be set to switch the Device on again on the next press.

1. Click the **Advance Toggle** button in the Command Bar to open the *Advance Toggle* window (FIG. 108).

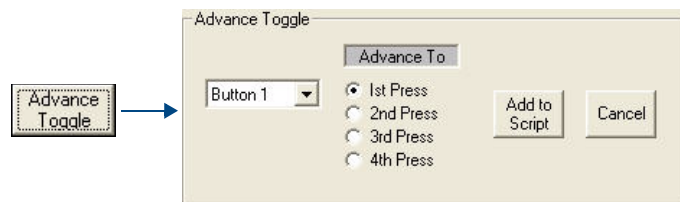


FIG. 108 Advance Toggle window

2. Select the Toggle button from the drop-down menu, and click on the Press number to advance to (*1st, 2nd, 3rd or 4th press*).

Copy and Paste

To Copy and Paste a Script:

1. Click on the **Copy Script** button in the Command Bar to invoke the *Copy and Paste* window, displaying the current button script (FIG. 109):

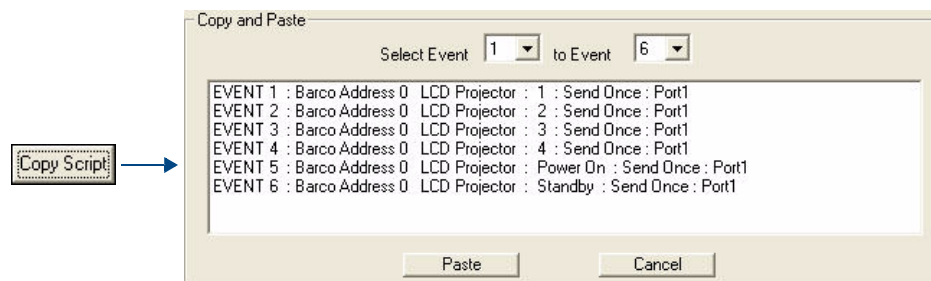


FIG. 109 Copy and Paste window

NOTE: *The Script can be trimmed using the Select Event controls.*

- In the *System* window, select the button to copy to, and click **Paste**.
 - The copied events will be added to the new button script.
 - The paste window can be used to copy scripts to New and existing programs.

Start Up

A script can be written for button events to execute when the ControlPad is powered up:

1. From the *Ancillary* options (in the *System* window), select **Start Up** (FIG. 110):



FIG. 110 Ancillary options - Start Up

2. This invokes the *Program Start Up Events (Event Script)* window (FIG. 111):

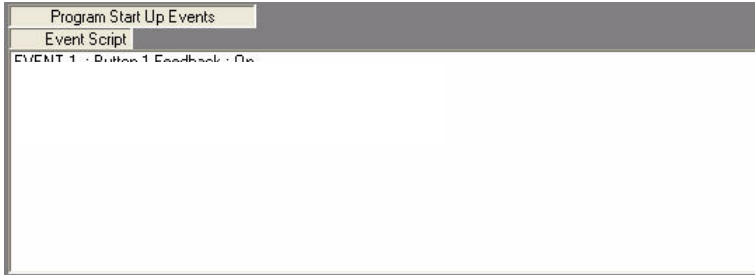


FIG. 111 Program Start Up Events (Event Script) window

3. Add commands to the Event Script to define the functions that you want the ControlPad to perform on startup (FIG. 113).
 - a. Select a button action from the *Select Action* drop-down menu (FIG. 112):

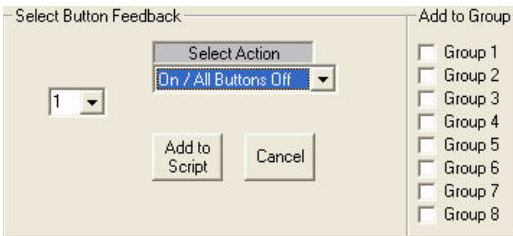


FIG. 112 Select Button Feedback - Select Action

- b. Click **Add To Script** to add the selected button action to the Start Up (Event) script.
- c. Add other button actions as desired to the Start Up (Event) script (FIG. 113).



FIG. 113 Program Start Up Event Script

Time Out

A Script can be written to execute if a button press is not detected within a set time period. For example, switching equipment off that may have been left running overnight. Three time periods can be set:

1. From the *Ancillary* options (in the *System* window), select **Time Out** (FIG. 114):

 


FIG. 114 Ancillary options - Time Out

2. This invokes the *Time Out* window (FIG. 115):

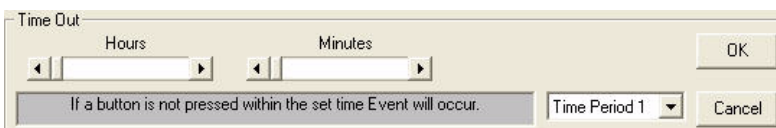


FIG. 115 Time Out window

3. Use the arrows on the *Hours* and *Minutes* fields to set a time for **Time Period 1**.
4. Write a script, as usual.

When the panel is configured and a button press is not detected within the time period then the script will execute.

- A 2nd period can be set to occur after the 1st period has elapsed. Again if a button press has still not occurred within that time then the 2nd period script will execute.
- A 3rd period can be set to occur after the 2nd period has elapsed. If a button press is detected at any time then the internal clock will be reset back to detect for a button press during the 1st period.

File Menu

The file menu gives the option to Save and Open program files.

- To clear the program for writing new programs click on '**New**'
- Clicking on '**Print Script**' will print out a hard copy of the Script.

Run Mode

There are two modes of operation, selectable via the **Run Mode** menu item:

- **Manual Mode** – normal configuration mode.
- **Auto-Run** – events in a script will start running 5 seconds after switch on.
Up to 1330 events can be programmed in a script and can be continually looped.
From the Run Mode menu select **Auto-Run** then **Continue**.
Write the script then click on **Loop** if you want the script to continually run.

NOTE: *Changing Run Mode will erase all Manual Run events.*

Downloading the Program

When a program has been written it can then be downloaded to the ControlPad:

1. Select **Program > Download** from the menu bar.
2. The application will prompt you to connect the USB Programming Cable to a USB port on your PC and the ControlPad's Program port (FIG. 116):

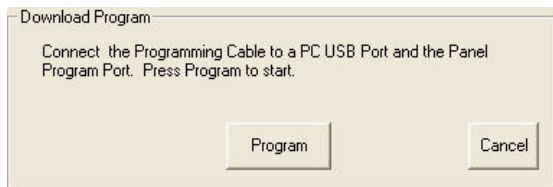


FIG. 116 Download Program window

3. Click **Program**. The programming window will appear.
 - All the buttons on the Panel will illuminate and the program will download.
 - When the download has completed the buttons will dim and a message will appear 'Download Complete'.

If an error occurs check the following:

- Cable is correctly connected
- Shut down any other programs running on the PC.
- If problem persists power down the Panel, hold in buttons 2 and 6 and re-power. Buttons 1 to 8 will illuminate. Release buttons 2 and 6 and download program.

Downloading To an Auto-running panel

To configure a panel that is currently Auto-running, the panel must be powered down and the program Downloaded within the first five seconds of power up before the panel starts auto-running again.

Adding a Relay Unit

1. Connect the relay unit to the Relay port on the ControlPad (see the *Relay 1 / Relay 2 Connectors* section on page 14).
2. Click the **Add Relay** button in the Command Bar to invoke the *Select Relay* window (FIG. 117).

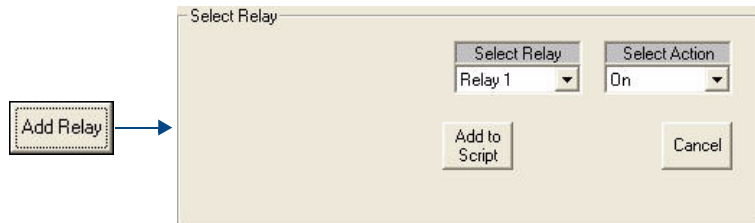


FIG. 117 Select Relay window

3. Select the relay to control from the *Select Relay* drop-down menu (*Relay 1* or *Relay 2*).
4. Select the relay action type from the *Select Action* drop-down menu.
 - **On** will latch the relay on,
 - **Off** will latch the relay off.
5. When the parameters have been set click on **Add to Script**.

Control Strings for AxLink

Available Control Strings

NOTE: The Novara AxLink keypads require the Control Commands to be sent as `SEND_STRING`.

Available Control Strings	
Command	Function
BL=xx	Set Backlight level <ul style="list-style-type: none"> xx = 00-99 NOTE: Numbers must be listed in format given, with single numbers prefaced with "0".
MB=xx	Set Max Brightness <ul style="list-style-type: none"> xx = 00-99 NOTE: Numbers must be listed in format given, with single numbers prefaced with "0".
FR=xx	Set Flash Rate <ul style="list-style-type: none"> xx = 00-99 NOTE: Numbers must be listed in format given, with single numbers prefaced with "0".
PR=xx	Set Pulse Rate <ul style="list-style-type: none"> xx = 00-99 Adjusting the pulse rate sets the rise and fall time within the flash rate, to be effective, both may need to be adjusted. AMX recommends leaving as default values. NOTE: Numbers must be listed in format given, with single numbers prefaced with "0".
SLnn=a	Set LED State <ul style="list-style-type: none"> nn = Button number (01-32), 00 = All a = LED state (1 – Low, 2 – High, 3 – Flash, 4 – Off, 5 – Pulse)
SLGbbbb=a	Set LED Group <ul style="list-style-type: none"> bbbb = 32 bits, 1 bit per LED (1 change, 0 leave) a = LED state (1 – Low, 2 – High, 3 – Flash, 4 – Off, 5 – Pulse)
SRQ	Request Status <ul style="list-style-type: none"> Returns 32 bytes of LED button status (byte 1 = LED 1 etc)
IRQ	Request Setup Info <ul style="list-style-type: none"> Returns 7 bytes (Byte 1 = Backlight level, 2 = Max brightness level, 3 = Flash rate, 4 = Pulse rate, 5 = orientation, 0=Vertical, 1=Horizontal) Bytes 6&7 are the firmware version installed where values of 1 and 0 mean firmware version 1.0
SETHZ	Set Horizontal Layout
SETVT	Set Vertical Layout



© 2016 Harman. All rights reserved. Novara, NetLinx, AMX, AV FOR AN IT WORLD, HARMAN, and their respective logos are registered trademarks of HARMAN. Oracle, Java and any other company or brand name referenced may be trademarks/registered trademarks of their respective companies. AMX does not assume responsibility for errors or omissions. AMX also reserves the right to alter specifications without prior notice at any time. The AMX Warranty and Return Policy and related documents can be viewed/downloaded at www.amx.com.
3000 RESEARCH DRIVE, RICHARDSON, TX 75082 AMX.com | 800.222.0193 | 469.624.8000 | +1.469.624.7400 | fax 469.624.7153
AMX (UK) LTD, AMX by HARMAN - Unit C, Auster Road, Clifton Moor, York, YO30 4GD United Kingdom • +44 1904-343-100 • www.amx.com/eu/

Last Revised:
1/29/2016