



Instruction Manual





DGX Transmitters & Receivers

AVB-TX-DGX-HD15-SC Fiber

AVB-TX-DGX-DVI-SC Fiber

AVB-RX-DGX-SC Fiber-HD15

AVB-RX-DGX-SC Fiber-DVI

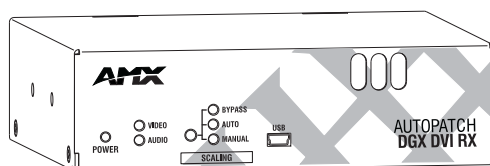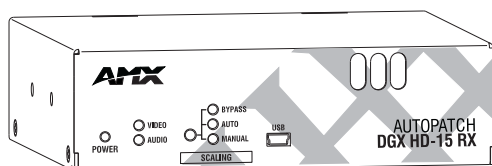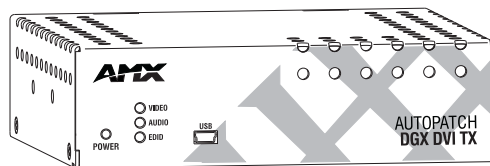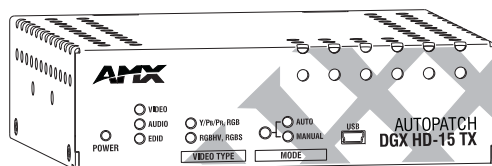

AMX Domestic Channel Partner Limited Warranty, Disclaimer and License

(Excerpt from CHANNEL PARTNER TERMS AND CONDITIONS Versions 11.17.2011 with updates for previous version 8.25.2010 [sections 6.1 (a), (b) and (f)])

6. LIMITED WARRANTY; RETURN, REPAIR AND REPLACEMENT

6.1 AMX warrants the Products to be free of material defects in materials and workmanship under normal use for three (3) years from the Shipping Date (or such other period as may be specified below), subject to the following limitations and exceptions ("Limited Warranty"). For any Product, "Warranty Period" means the period during which the Limited Warranty is in effect, as set forth herein.

- (a) LCD and LED panels are warranted for three (3) years from the Shipping Date, except for the display and touch overlay components, which are warranted for a period of one (1) year from the Shipping Date.
- (b) Disk drive mechanisms, pan/tilt heads and external power supplies are warranted for a period of one (1) year from the Shipping Date.
- (c) AMX lighting Products are warranted to switch on and off any load that is properly connected to our lighting Products, as long as the AMX lighting Products are under warranty. AMX also warrants the control of dimmable loads that are properly connected to our lighting Products. The dimming performance or quality thereof is not warranted, due to the random combinations of dimmers, lamps and ballasts or transformers.
- (d) AMX software and firmware included in the Products is warranted for a period of ninety (90) days from the Shipping Date.
- (e) Batteries and incandescent lamps are not covered under the Limited Warranty.
- (f) The Warranty Period for AMX AutoPatch EPICA, Enova DGX, Modula, Modula Series 4, Modula Cat Pro Series and 8Y-3000 Product models will continue for the original installation until five (5) years after the issuance of a PDN with respect to termination of the applicable Product model. However, if the Product is moved from its original installation to a different installation, the Warranty Period will automatically become three (3) years from the Shipping Date and, if more than three (3) years have elapsed since the Shipping Date, the Warranty Period will automatically expire.

Version Date: 11-17-11

Note: *The complete Warranty is at www.amx.com.*

Contents

ESD Warning	1
Important Safety Information and Instructions	2
Information et directives de sécurité importantes.....	3
Notices	4
Overview and Specifications	7
Applicability Notice	7
Product Notes	7
Common Applications	9
AVB-TX-DGX-HD15-SC Fiber	10
AVB-TX-DGX-DVI-SC Fiber	12
AVB-RX-DGX-SC Fiber-HD15	14
AVB-RX-DGX-SC Fiber-DVI	16
DGX TX and DGX RX Specifications	18
Installation and Setup	23
UL Safety Certifications, Notices, and Recommendations for Laser Products	23
Site Recommendations	24
General Hazard Precautions	24
Setup Options	25
Basic Installation	29
Addressing Special Installation Requirements	35
Scaling Options	37
Auto Option (SmartScale®)	38
Bypass Option	38
Manual Option and the Scaler Override Utility	38
Adjusting Video with BoardConfig Software.....	45
System Requirements	46
Determining Resolution and Refresh Rate for Source PC	47
Adjusting the Video Image with the DGX-HD15 Wizard	47
EDID Programmer	51
EDID Overview	51
Determining the Need for EDID Programming	52
Installing the EDID Programmer	53
Reading and Saving EDID Data from the Destination Device	53
Writing EDID Data to the TX	55

Troubleshooting 57

 DGX TX and DGX RX Troubleshooting..... 57

 Error Code Reporting (Power LED is Solid Amber)..... 62

 Live Status Update Messages 63

 Non-DGX Matrix Switcher Routing Behavior 64

 Technical Support 64

Appendix A – Creating a Virtual COM Port..... 67

 Establishing a Virtual COM Port 67

Appendix B – Restoring Default Settings 71

Appendix C – Upgrading the Firmware 73

ESD Warning



To avoid ESD (Electrostatic Discharge) damage to sensitive components, make sure you are properly grounded before touching any internal materials.

When working with any equipment manufactured with electronic devices, proper ESD grounding procedures must be followed to make sure people, products, and tools are as free of static charges as possible. Grounding straps, conductive smocks, and conductive work mats are specifically designed for this purpose.

Anyone performing field maintenance on AMX equipment should use an appropriate ESD field service kit complete with at least a dissipative work mat with a ground cord and a UL listed adjustable wrist strap with another ground cord. These items should not be manufactured locally, since they are generally composed of highly resistive conductive materials to safely drain static charges, without increasing an electrocution risk in the event of an accident. ESD protective equipment can be obtained from 3M™, Desco®, Richmond Technology®, Plastic Systems®, and other such vendors.

Important Safety Information and Instructions

When using and installing your AMX product, adhere to the following basic safety precautions. For more information about operating, installing, or servicing your AMX product, see your product documentation.

- Read and understand all instructions before using and installing AMX products.
- Use the correct voltage range for your AMX product.
- There are no user serviceable parts inside an AMX product; service should only be done by qualified personnel.
- If you see smoke or smell a strange odor coming from your AMX product, turn it off immediately and call technical support.
- For products with multiple power supplies in each unit, make sure all power supplies are turned on simultaneously.
- Use surge protectors and/or AC line conditioners when powering AMX products.
- Only use a fuse(s) with the correct fuse rating in your enclosure.
- Make sure the power outlet is close to the product and easily accessible.
- Make sure the product is on or attached to a stable surface.
- Turn off equipment before linking pieces together, unless otherwise specified in that product's documentation.
- For safety and signal integrity, use a grounded external power source and a grounded power connector.
- To avoid shock or potential ESD (Electrostatic Discharge) damage to equipment, make sure you are properly grounded before touching components inside an AMX product.

Information et directives de sécurité importantes

Veillez vous conformer aux directives de sécurité ci-dessous lorsque vous installez et utilisez votre appareil AMX. Pour de plus amples renseignements au sujet de l'installation, du fonctionnement ou de la réparation de votre appareil AMX, veuillez consulter la documentation accompagnant l'appareil.

- Lisez attentivement toutes les directives avant d'installer et d'utiliser les appareils AMX.
- Le voltage doit être approprié à l'appareil AMX.
- Les appareils AMX ne contiennent aucune pièce réparable par l'utilisateur; la réparation ne doit être effectuée que par du personnel qualifié.
- Si de la fumée ou une odeur étrange se dégagent d'un appareil AMX, fermez-le immédiatement et appelez le Service de soutien technique.
- Veillez à ce que tous les blocs d'alimentation des appareils dotés de blocs d'alimentation multiples dans chaque unité soient allumés simultanément.
- Servez-vous de protecteurs de surtension ou de conditionneurs de lignes à courant alternatif lorsque vous mettez les appareils AMX sous tension.
- Placez uniquement des fusibles de calibre exact dans les boîtiers.
- Veillez à ce que la prise de courant soit proche de l'appareil et facile d'accès.
- Veillez à ce que votre appareil AMX soit installé sur une surface stable ou qu'il y soit fermement maintenu.
- Fermez toutes les composantes de l'équipement avant de relier des pièces, à moins d'indication contraire fournie dans la documentation de l'appareil.
- Par mesure de sécurité et pour la qualité des signaux, servez-vous d'une source d'alimentation externe mise à la terre et d'un connect d'alimentation mis à la terre.
- Pour éviter les chocs ou les dommages éventuels causés à l'équipement par une décharge électrostatique, veillez à ce le dispositif soit bien relié à la terre avant de toucher les composantes se trouvant à l'intérieur d'un appareil AMX.

Notices

Copyright Notice

AMX® 2013 (Rev D), all rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of AMX. Copyright protection claimed extends to AMX hardware and software and includes all forms and matters copyrightable material and information now allowed by statutory or judicial law or herein after granted, including without limitation, material generated from the software programs which are displayed on the screen such as icons, screen display looks, etc. Reproduction or disassembly of embodied computer programs or algorithms is expressly prohibited.

Liability Notice

No patent liability is assumed with respect to the use of information contained herein.

While every precaution has been taken in the preparation of this publication, AMX assumes no responsibility for error or omissions. No liability is assumed for damages resulting from the use of the information contained herein.

Further, this publication and features described herein are subject to change without notice.

US FCC Notice

The United States Federal Communications Commission (in 47CFR 15.838) has specified that the following notice be brought to the attention of the users of this product.

Federal Communication Commission Radio Frequency Interference Statement:

"This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the booklet, How to Identify and Resolve Radio-TV Interference Problems, prepared by the Federal Communications Commission to be helpful."

This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402, Stock N. 004-000-00345-4.

Use shielded cables. To comply with FCC Class A requirement, all external data interface cables and adapters must be shielded.

Lithium Batteries Notice

Switzerland requires the following notice for products equipped with lithium batteries. This notice is not applicable for all AMX equipment.

Upon shipment of the products to Switzerland, the requirements of the most up-to-date Swiss Ordinance Annex 2.15 of SR 814.81 will be met including provision of the necessary markings, documents, and annual reports relative to the disposal of the batteries to the Swiss Authorities.

Trademark Notices

AMX[®], AutoPatch[®], NetLinx[®], and SmartScale[®] are trademarks of AMX.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

TeraTerm is a copyright product of T. Teranishi and TeraTerm Project.

PuTTY is a copyright product of Simon Tatham.

HyperTerminal[®] is a copyright product of Hilgraeve Inc.

3M[™], Desco[®], Richmond Technology[®], and Plastic Systems[®] are registered trademarks.

Ethernet[®] is a registered trademark of the Xerox Corporation.

ENERGY STAR[®] is a registered trademark of the U.S. Department of Energy and the U.S. Environmental Protection Agency

Other products mentioned herein may be the trademarks of their respective owners.

Warnings and Cautions

This manual uses the following conventions and icons to draw attention to actions or conditions that could potentially cause problems with equipment or lead to personal risk.



ESD Warning: *The icon to the left indicates text regarding potential danger associated with the discharge of static electricity from an outside source (such as human hands) into an integrated circuit, often resulting in damage to the circuit.*



Warning: *The icon to the left indicates text that warns readers against actions or conditions that could cause potential injury to themselves.*



Caution: *The icon to the left indicates text that cautions readers against actions that could cause potential injury to the product or the possibility of serious inconvenience.*

Overview and Specifications

Applicability Notice

The information in this manual applies to the four DGX Transmitter (TX) and Receiver (RX) modules listed in the table below.

Important: *These modules are compatible only with each other and with other AMX DGX Signal Management products.*

DGX TX and DGX RX Modules

FG #	Type	Model	Description
FG1010-200-01	TX	AVB-TX-DGHD15-SC Fiber	Analog video* + analog or digital audio over SC fiber
FG1010-210-01	TX	AVB-TX-DGX-DVI-SC Fiber	DVI video + analog or digital audio over SC fiber
FG1010-400-01	RX	AVB-RX-DGX-SC Fiber-HD15	SC fiber to RGBHV video + analog and digital audio
FG1010-410-01	RX	AVB-RX-DGX-SC Fiber-DVI	SC fiber to DVI video + analog and digital audio

* The supported analog video formats for this model TX are RGBHV, RGBS, RGsB, and Y/Pb/Pr video (Y/Pb/Pr up to 1080p).

Product Notes

Either of the DGX Fiber TX modules listed can be paired with either of the DGX Fiber RX modules as an end-to-end solution for transmission over single fiber or any of the modules can be used as an integrated part of an AMX DGX matrix switcher that supports single fiber transmission. This manual contains complete information for stand-alone use. For use in a system with a distribution matrix, see page 25 in this manual and the distribution matrix's *Instruction Manual* at www.amx.com.

The following descriptions explain how the modules work as an end-to-end solution. The TX and RX work in the same way when used in conjunction with DGX Fiber boards in a DGX matrix switcher.

DGX Fiber TX Modules — two types of transmitter modules are available, one model is for analog signals and the other model is for a DVI signal. The analog module receives RGBHV, RGBS, RGsB, or Y/Pb/Pr video signals, and the DVI Fiber module receives a DVI video signal from the source device. The modules also receive either a digital audio signal or an analog stereo audio signal from the source device (digital takes precedence if both are connected). Both the video and audio signals are transmitted over an SC terminated fiber cable to a DGX RX module. The RS-232 port on each TX supplies unidirectional RS-232 serial data over the SC terminated fiber cable with the data flow in the same direction as the video signal. In addition to supporting transmission of incoming signals, the DGX TX modules also include a local video output connector for sending the video signal directly from the source to a local destination device.

DGX Fiber RX Modules — two types of receiver modules are available to accept the signal from a TX module's SC terminated fiber cable. The DGX HD-15 RX converts the video signal to RGBHV for the destination device, and the DGX DVI RX converts the video signal to DVI for the destination device. Both modules feature SmartScale[®] (integrated EDID output scaling) to make sure the output resolution is appropriate regardless of the type of incoming video. They also support a Manual (override) option for setting up custom resolutions and a Bypass option. The audio on the RX is output on both the digital audio port and the analog stereo audio port. The RS-232 port on each RX accepts any unidirectional RS-232 serial data over the SC fiber from the TX.

DGX TX and DGX RX Module Features

- Designed for use with single strand multimode fiber cable with SC connectors.
- DGX technology provides a common signal transport and matrix switching layer that transcodes between analog and digital signals; this allows compatibility among all the AMX DGX Fiber modules and with other AMX DGX Signal Management products.
- Provides secure transmission of uncompressed DVI or RGBHV up to 3,000 feet (914 m) at resolutions up to 1920x1200 @ 60 Hz, including 1080p. This distance applies to both ends when modules are used in a system with a DGX Matrix Switcher's Fiber boards.
- Auto-Detect on the transmitters and SmartScale® on the receivers work to automatically recognize any device's supported resolution and signal style parameters, allowing switching out source devices and destination devices without manual setup.
- SmartScale® is the ability to configure the scaling output by automatically selecting destination defined resolutions; the product also has the ability to control detailed timing parameters for customized video output formats.
- EDID support and integrated EDID output scaling, which scales any incoming signal to the EDID declared preferred resolution of the attached destination (this feature can be overridden or bypassed).
- Custom EDID settings can be loaded on each input with the use of the included EDID Programmer.
- DGX HD-15 TX has the ability to detect an incoming analog signal (video or audio) and automatically convert it to a digital signal (this feature can be overridden).
- DGX HD-15 TX supports RGBHV, RGBS, RGsB, and Y/Pb/Pr (Y/Pb/Pr up to 1080p) video formats.
- DGX HD-15 RX supports an RGBHV video format.
- DGX DVI TX and DGX DVI RX support a DVI video format.
- Both TX modules accept analog stereo audio signals (unbalanced stereo) or digital audio signals (PCM over S/PDIF @ 32 kHz, 44.1 kHz, 48 kHz). Analog stereo audio signals are automatically converted to a digital signal.
- Both RX modules send analog and digital audio signals.
- Compare auto and manual video settings on the DGX HD-15 TX with the press of a button.
- Supports progressive scanning (for optimal results) and interlaced scanning (for supported resolutions, see page 20).
- All modules support RS-232 port (3-position terminal block) unidirectional serial data from source to destination.
- Standard USB (mini-B) port can be used as a virtual COM port for serial communication with a PC for overriding the AutoAD settings, adjusting the video signal with BoardConfig software if necessary, making field upgrades (through an Upgrade Tool), and reporting errors.
- BoardConfig software for the DGX HD-15 TX is available for user adjustable contrast, brightness, and position.
- Desktop power supply (ENERGY STAR® qualified) provided per module.
- HD-15 to BNC breakout cable and HD-15 to RCA breakout cable are available.
- Compatible with all V Style versatile mounting options including rack, surface, or pole.
- Backed by AMX 3 year warranty (see www.amx.com).
- 24-hour technical support.

Note: Features and specifications described in this document are subject to change without notice.

Common Applications

AMX DGX Fiber Transmitters and Receivers pass digital or analog audio and video over fiber optic cable from the source to display device. Fiber uses light, rather than electrical signals, to send data, which is especially suitable for government and military facilities as it is not susceptible to non-intrusive physical wire tapping. AMX DGX Fiber Transmitters and Receivers provide secure signal transport up to 3,000 feet (914.4 m) without losing signal clarity making it ideal for use throughout classrooms, auditoriums, conference rooms, hospitals, and campuses. With SmartScale® technology and simple installation and termination of fiber cable, AMX DGX Fiber Transmitters and Receivers are the perfect solution for commercial and residential installations.

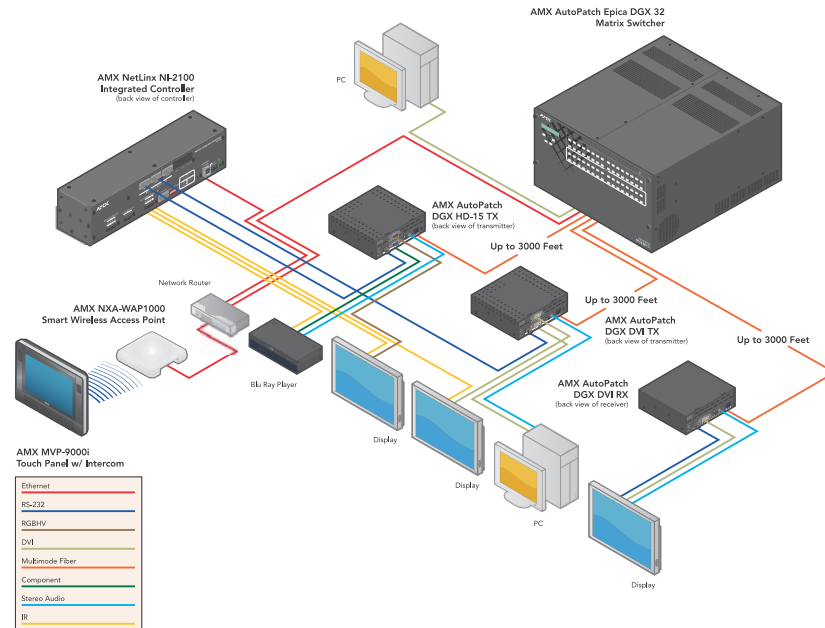


FIG. 1 AMX DGX Fiber Transmitters and Receivers in single building setup

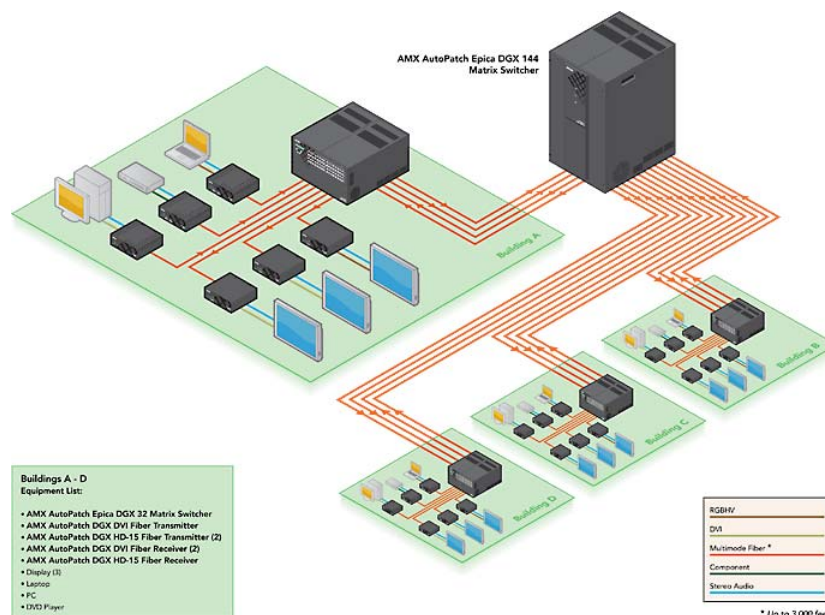


FIG. 2 AMX DGX Fiber Transmitters and Receivers in multiple building setup

AVB-TX-DGX-HD15-SC Fiber

DGX HD-15 TX Front View

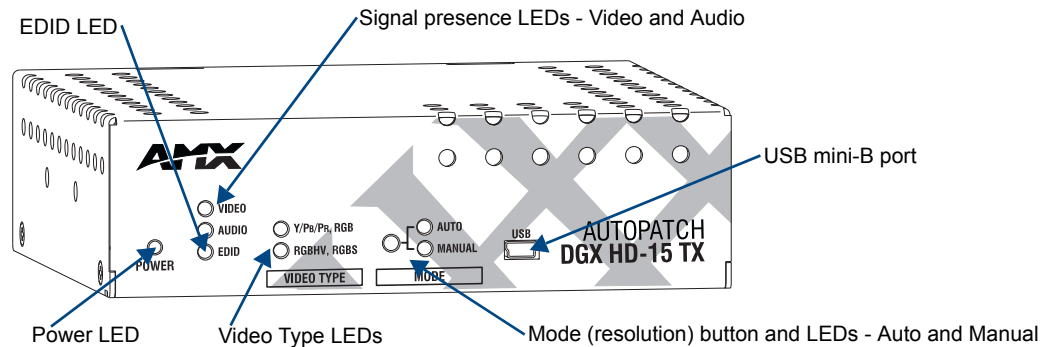


FIG. 3 DGX HD-15 TX front view

The following components are located on the front of the DGX HD-15 TX (left to right):

- Power LED — indicates whether or not the module is powered on.
- Video and Audio LEDs — indicate the presence of video and audio signals through the module.
- EDID LED — when the module is in Write-Protect mode, the LED is off (default state); when the module is in Write-Enable mode, the LED is green. The EDID switch is on the rear.
- Video Type LEDs — indicate type of signal present: “Y/Pb/Pr, RGB” or “RGBHV, RGBS.”
- Mode (resolution) button and Auto and Manual LEDs — use the Mode button to toggle between Auto mode (the default mode) and Manual mode to view the difference on the display when adjusting settings with BoardConfig.
- USB mini-B port — connect to a control PC and use for overriding the automatic conversion settings, signal adjustment, firmware upgrades through an Upgrade Tool, live status updates, and error code reporting.

Important: If the indicator LEDs do not respond with a normal display as stated in the table below, check all power connections before contacting technical support (see page 57).

TX Indicator LEDs		
LED	Normal Display	Indicates
Power*	Constant green	Power is applied to module (initially red at start up).
Video	Constant green	A video signal is present through module.
Audio	Constant green	An audio signal is present through module.
EDID	Off	EDID is in Write-Protect mode (EDID switch on rear flipped down).
Y/Pb/Pr, RGB	Constant green	A Y/Pb/Pr or RGsB signal is present through module.
RGBHV, RGBS	Constant green	An RGBHV or RGBS signal is present through module.
Auto Manual	One is constant green; the other is off	Module is in Auto mode (default). Module is in Manual mode** (the mode for adjusting settings when using BoardConfig).

* When a USB cable is connected, the Power LED blinks red while communication is being established with the PC (see page 67).

** Other than when adjusting settings in BoardConfig, an illuminated Manual LED has no special significance as the Auto and Manual settings are identical by nature once changes are saved.

DGX HD-15 TX Rear View

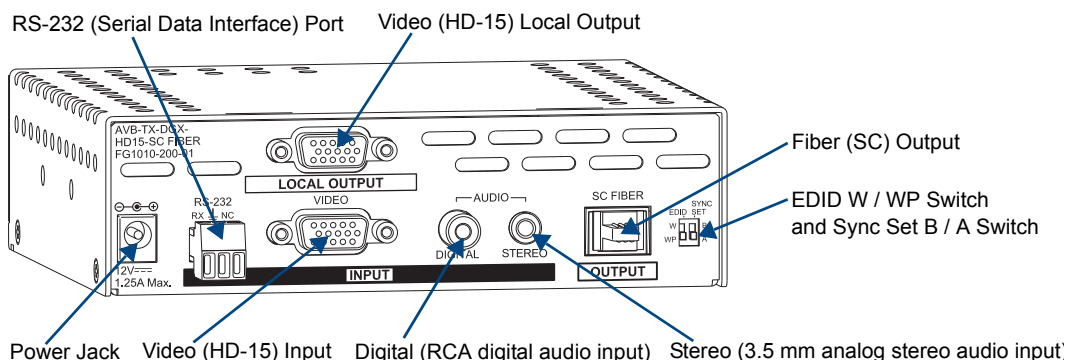


FIG. 4 DGX HD-15 TX rear view

The following components are located on the rear of the DGX HD-15 TX (from left to right):

- Power receptacle – a 2.1 mm DC jack for connecting power (an ENERGY STAR[®] qualified desktop power supply is provided).
- RS-232 (serial data interface) port – 3-position screw terminal block for unidirectional data transfer from the source device to the destination device.
- Video Input – HD-15 connector for an RGBHV video input signal.
- Video Local Output – HD-15 connector for sending the video signal from the video input connector to a local destination device.
- Digital Audio – RCA jack for a digital audio input signal.
- Stereo Audio – 3.5 mm jack for an analog stereo audio signal.
- SC Fiber Output – accepts a standard 2.5 mm SC fiber connector (standardized in TIA-568A) that snaps into place.
- EDID switch – the default is set to WP (write protect), so source and destination can share information; set to W for write enable. The EDID LED is on the front.
- Sync Set switch – *must* be set to match the video format of the source signal (see page 32).

Special Product Information

If a video signal is not present on the TX, the lasers are disabled and will not transmit any video, audio, or serial data to the RX.

A short lapse/drop of the serial data is to be expected under certain instances, e.g., when the digital audio is unplugged or plugged or when the sample rate frequency of the digital audio changes.

AVB-TX-DGX-DVI-SC Fiber

DGX DVI TX Front View

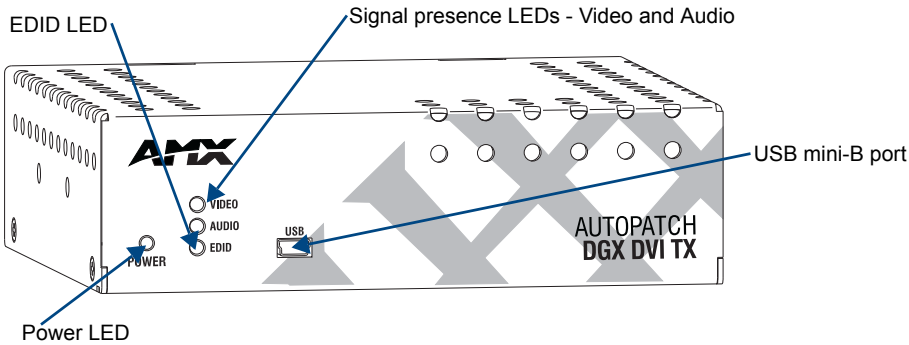


FIG. 5 DGX DVI TX front view

The following components are located on the front of the DGX DVI TX (left to right):

- Power LED – indicates whether or not the module is powered on.
- Video and Audio LEDs – indicate the presence of video and audio signals through the module.
- EDID LED – when the module is in Write-Protect mode, the LED is off (default state); when the module is in Write-Enable mode, the LED is green. The EDID switch is on the rear.
- USB mini-B port – connect to a control PC and use for overriding the automatic conversion settings, signal adjustment, firmware upgrades through an Upgrade Tool, live status updates, and error code reporting.

Important: If the indicator LEDs do not respond with a normal display as stated in the table below, see “Troubleshooting” on page 57.

TX Indicator LEDs		
LED	Normal Display	Indicates
Power*	Constant green	Power is applied to module (initially red at start up).
Video	Constant green	A video signal is present through module.
Audio	Constant green	An audio signal is present through module.
EDID	Off	EDID is in Write-Protect mode (EDID switch on rear flipped down).

* When a USB cable is connected, the Power LED blinks red while communication is being established with the PC (see page 67).

DGX DVI TX Rear View

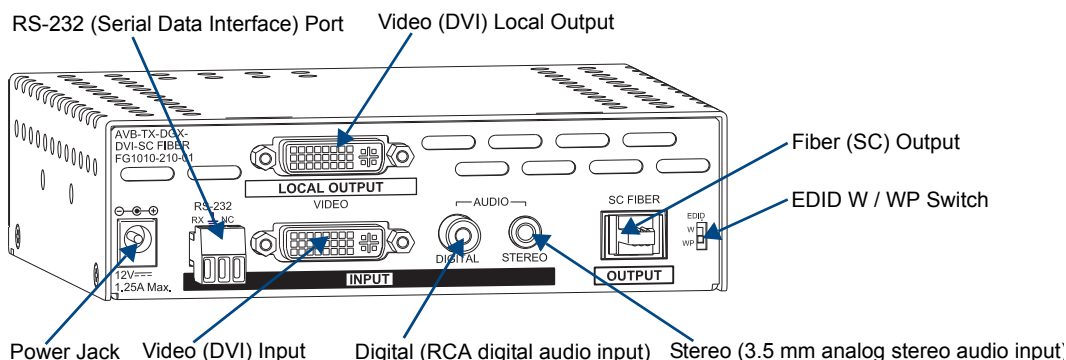


FIG. 6 DGX DVI TX rear view

The following components are located on the rear of the DGX DVI TX (left to right):

- Power receptacle – a 2.1 mm DC jack for connecting power (an ENERGY STAR[®] qualified desktop power supply is provided).
- RS-232 (serial data interface) port – 3-position screw terminal block for unidirectional data transfer from the source device to the destination device.
- Video Input – DVI-I connector for a DVI video input signal.*
- Video Local Output – DVI-I connector for sending a DVI video signal to a local destination device.*
- Digital Audio – RCA jack for a digital audio input signal.
- Stereo Audio – 3.5 mm jack for an analog stereo audio signal.
- SC Fiber Output – accepts a standard 2.5 mm SC fiber connector (standardized in TIA-568A) that snaps into place.
- EDID switch – the default is set to WP (write protect), so source and destination can share information; set to W for write enable. The EDID LED is on the front.

* DGX DVI Modules only support digital, single link (DVI-D) signals. The connectors on the module are DVI-I connectors, which allow use of a cable with either a DVI-D or a DVI-I connector (for DVI-I, the analog pins are not used; see the DVI-I connector pinout information on page 28). This also holds true for DGX DVI Boards in DGX Matrix Switchers.

Special Product Information

If a video signal is not present on the TX, the lasers are disabled and will not transmit any video, audio, or serial data to the RX.

A short lapse/drop of the serial data is to be expected under certain instances, e.g., when the digital audio is unplugged or plugged or when the sample rate frequency of the digital audio changes.

AVB-RX-DGX-SC Fiber-HD15

DGX HD-15 RX Front View

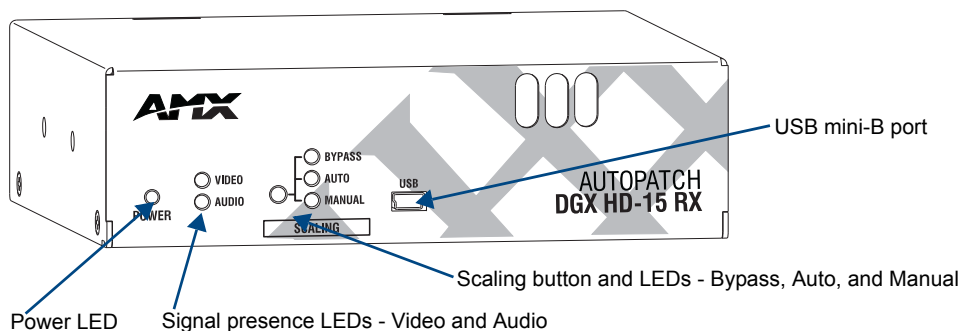


FIG. 7 DGX HD-15 RX front view

The following components are located on the front of the DGX HD-15 RX (left to right):

- Power LED – indicates whether or not the module is powered on.
- Video and Audio LEDs – indicate the presence of video and audio signals through the module.
- Scaling button and LEDs – use Scaling button to select one of the 3 Scaling options: Bypass, Auto, or Manual.
- USB port (mini-B) – connect to a control PC and use for overriding automatic conversion settings, signal adjustment, if necessary, firmware upgrades through an Upgrade Tool, live status updates, and error code reporting.

Important: If the indicator LEDs do not respond with a normal display as stated in the table below, see “Troubleshooting” on page 57.

RX Indicator LEDs		
LED	Normal Display	Indicates
Power*	Constant green	Power is applied to module.
Video	Constant green	A video signal is present through module.
Audio	Constant green	An audio signal is present through module.
Scaling – Bypass – Auto (default) – Manual	One is constant green; the other two are off	Module is in one of the three modes for scaling. At initial power up, the RX defaults to the Auto Scaling option.** Press Scaling button to turn on the Bypass option or Manual option.

* When a USB cable is connected, the Power LED blinks red while communication is being established with the PC (see page 67).

** If the output cable is disconnected from the RX or if no EDID can be found on the destination device, the Bypass LED will be constant green and the Auto LED will blink. This indicates that the RX has switched to the Bypass Scaling option and is waiting for EDID information. As soon as a valid EDID is found, the RX will revert to the Auto Scaling option.

DGX HD-15 RX Rear View

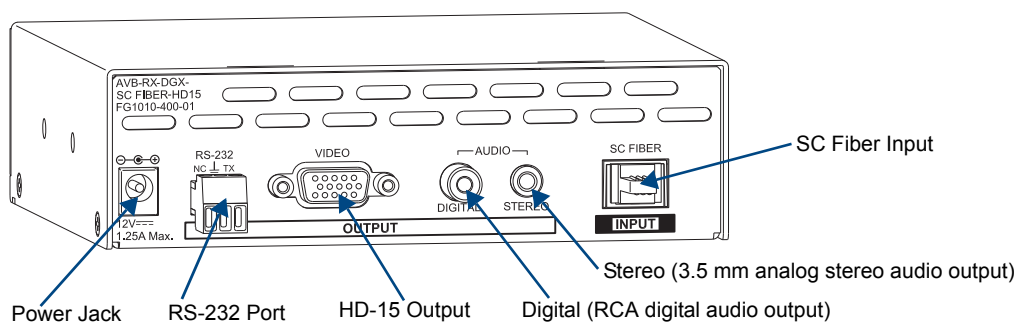


FIG. 8 DGX HD-15 RX rear view

The following components are located on the rear of the DGX HD-15 RX (left to right):

- Power receptacle – a 2.1 mm DC jack for connecting power (an ENERGY STAR[®] qualified desktop power supply is provided).
- RS-232 (serial data interface) port – 3-position screw terminal block accepts unidirectional data transfer from the TX (source device to destination device).
- Video Output – HD-15 connector for an RGBHV video output signal.
- Digital Output – RCA jack for a digital audio output signal.
- Stereo Output – standard 3.5 mm jack for an analog stereo audio output signal.
- SC Fiber Input – accepts a standard 2.5 mm SC fiber connector (standardized in TIA-568A) that snaps in.



Warning: Do not use the Stereo output connector as a headphone jack. The Stereo output is set at unity gain (line-level) and is not intended for headphones.

Special Product Information

If a video signal is not present on the TX, the lasers are disabled and will not transmit any video, audio, or serial data to the RX.

A short lapse/drop of the serial data is to be expected under certain instances, e.g., when the digital audio is unplugged or plugged or when the sample rate frequency of the digital audio changes.

AVB-RX-DGX-SC Fiber-DVI

DGX DVI RX Front View

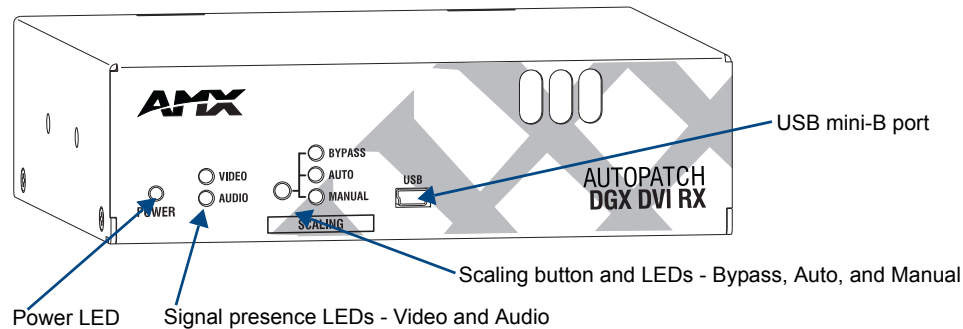


FIG. 9 DGX DVI RX front view

The following components are located on the front of the DGX DVI RX (left to right):

- Power LED – indicates whether or not the module is powered on.
- Video and Audio LEDs – indicate the presence of video and audio signals through the module.
- Scaling button and LEDs – use Scaling button to select one of the 3 Scaling options: Bypass, Auto, or Manual.
- USB port (mini-B) – connect to a control PC and use for overriding automatic conversion settings, signal adjustment, if necessary, firmware upgrades through an Upgrade Tool, live status updates, and error code reporting.

Important: If the indicator LEDs do not respond with a normal display as stated in the table below, see “Troubleshooting” on page 57.

RX Indicator LEDs		
LED	Normal Display	Indicates
Power*	Constant green	Power is applied to module.
Video	Constant green	A video signal is present through module.
Audio	Constant green	An audio signal is present through module.
Scaling – Bypass – Auto (default) – Manual	One is constant green; the other two are off	Module is in one of the three modes for scaling. At initial power up, the RX defaults to the Auto Scaling option.** Press Scaling button to turn on the Bypass option or Manual option.

* When a USB cable is connected, the Power LED blinks red while communication is being established with the PC (see page 67).

** If the output cable is disconnected from the RX or if no EDID can be found on the destination device, the Bypass LED will be constant green and the Auto LED will blink. This indicates that the RX has switched to the Bypass Scaling option and is waiting for EDID information. As soon as a valid EDID is found, the RX will revert to the Auto Scaling option.

DGX DVI RX Rear View

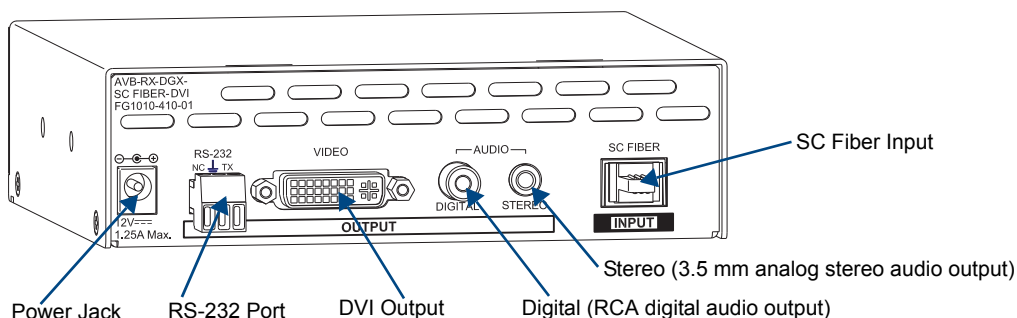


FIG. 10 DGX DVI RX rear view

The following components are located on the rear of the DGX DVI RX (left to right):

- Power receptacle – a 2.1 mm DC jack for connecting power (an ENERGY STAR[®] qualified desktop power supply is provided).
- RS-232 (serial data interface) port – 3-position screw terminal block accepts unidirectional data transfer from the TX (source device to destination device).
- Video Output – DVI-I connector for a DVI video output signal.*
- Digital Output – RCA jack for a digital audio output signal.
- Stereo Output – standard 3.5 mm jack for an analog stereo audio output signal.*
- SC Fiber Input – accepts a standard 2.5 mm SC fiber connector (standardized in TIA-568A) that snaps in.

* DGX DVI Modules only support digital, single link (DVI-D) signals. The connector on the module is a DVI-I connector, which allows use of a cable with either a DVI-D or a DVI-I connector (for DVI-I, the analog pins are not used; see the DVI-I connector pinout information on page 28). This also holds true for DGX DVI Boards in DGX Matrix Switchers.



Warning: Do not use the Stereo output connector as a headphone jack. The Stereo output is set at unity gain (line-level) and is not intended for headphones.

Special Product Information

If a video signal is not present on the TX, the lasers are disabled and will not transmit any video, audio, or serial data to the RX.

A short lapse/drop of the serial data is to be expected under certain instances, e.g., when the digital audio is unplugged or plugged or when the sample rate frequency of the digital audio changes.

DGX TX and DGX RX Specifications

General Specifications	
Parameter	Value
Approvals	CE, UL, cUL, FCC Class A, RoHS
AC Power	100 VAC to 240 VAC single phase, 50 Hz to 60 Hz 0.6 A @ 115 VAC max.
Power Consumption (max.)	12 V (+/-10%), 1.25 A (15 W)
Power Consumption (typ.) DGX HD-15	TX: 12 V (+/-10%), 0.5 A (6 W); RX: 12 V (+/-10%), 1 A (12 W)
Power Consumption (typ.) DGX DVI	TX: 12 V (+/-10%), 0.4 A (5 W); RX: 12 V (+/-10%), 0.8 A (10 W)
Thermal Dissipation (max.)	51 BTU/hr.
Thermal Dissipation (typ.) DGX HD-15	TX: 21 BTU/hr; RX: 41 BTU/hr
Thermal Dissipation (typ.) DGX DVI	TX: 17 BTU/hr; RX: 34 BTU/hr
Power Connector*	2.1 mm DC
Operational Temperature	32° F to 113° F (0° C to 45° C)
Storage Temperature	-22° F to 158° F (-30° C to 70° C)
Humidity	0 to 90% non-condensing
Dimensions	
Depth	5.15 in. (13.08 cm)
Width	5.80 in. (14.73 cm)
Height	1.66 in. (4.22 cm), 1 RU
Weight	Approximately 1.75 lb. (0.8 kg) per module
Shipping Weight	Approximately 2.75 lb. (1.25 kg)
MTBF	92,000 hrs.
Safety Certifications (DGX DVI TX and DGX HD-15 TX)	Class 1 Laser Product (Class 3R Laser Product when fiber is disconnected from the unit) IEC 60825-1, 2001

* A desktop power supply (ENERGY STAR® qualified) is provided with each module.

Product Information Specifications	
Parameter	Value
Compatible AMX Products	DGX HD-15 TX and RX, DGX DVI TX and RX, Other DGX SC Fiber Signal Management products
Resolution Support	640x480 @ 60 Hz up to 1920x1200 @ 60 Hz
Video Data Rate (max.)	4.95 Gbps
Video Pixel Clock	25 MHz to 165 MHz
Video Digital Processing	24 bit, 165 MHz
Input Interlaced Video Support	1080i 60, 59.94, 50 (fields/second); 576i 100 (fields/second) Analog video only 576i 50 (fields/second); 480i 60 (fields/second) Interlace and progressive video supported into the TX Progressive only supported out of the RX
Advanced Configuration Interface	USB Mini-B
Fiber Cable Type	Multimode Simplex (with SC termination) 50/125 µm (preferred) or 62.5/125 µm
Fiber Cable Length	Up to 3000 ft. (914.4 m) with 50 µm cable** Up to 1500 ft. (457.2 m) with 62.5 µm cable

** 3,000 foot (914.4 m) cable requires 50/125 µm OM2 class low loss fiber cable. Transmission distance will vary (more or less) depending on the type/quality of fiber used, fiber bandwidth, cable bend radius/kinks, splicing quality and quantity, and chromatic or modal dispersion.

AMX reserves the right to modify its products and their specifications without notice.

Product Information Specifications (continued)	
SC Cable Bend Radius (max.)	2 in. (5 cm)
Optical Budget	9.75 dBm (typical) between DGX TX and DGX RX Optical Modulation Amplitude (OMA): -6.25 dBm (typical) Optical Modulation Amplitude (OMA) Sensitivity: -16.0 dBm (typical)
Power Output of Laser Radiation (max.) (DGX DVI TX and DGX HD-15 TX only)	4.08 mW
Fiber Connector	SC Optical

Compatibility Note: These modules are compatible *only* with each other (either TX to either RX) and with other AMX DGX Signal Management products. DGX Fiber modules are *not* compatible with third-party optical distribution amplifiers or multimode to single-mode converters.

Analog Video Specifications	
TX	
Input Signal Types	RGBHV, RGBS, RGsB, Y/Pb/Pr
Auto-Adjust Input	Yes
DDC/EDID Support	EDID provided by DGX TX EDID is user re-programmable
RGB Input Signal Level Range	0 to 700 mVpp (0 to 750 mVpp max.)
RGB Input Impedance	75 ohm
HV Sync Input Signal Level Range	0 to +5 V
HV Sync Input Impedance	510 ohm
HV Sync Input Trigger Voltage	+1.75 V
Y/Pb/Pr Input Signal Level Range	1.0 Vpp for Y 700 mVpp for Pb Pr
Y/Pb/Pr Input Impedance	75 ohm
Input Connector	HD-15 (RGBHV and Y/Pb/Pr)
RGB Local Out Signal Level Range	0 to 700 mVpp (0 to 750 mVpp max.)
RGB Local Out Impedance	75 ohm
HV Sync Local Out Signal Level Range	0 to +5 V
HV Sync Local Out Impedance	50 ohm
Y/Pb/Pr Local Out Signal Level Range	1.0 Vpp for Y 700 mVpp for Pb Pr
Y/Pb/Pr Local Out Impedance	75 ohm
Local Output Connector	HD-15 (RGBHV and Y/Pb/Pr)
Propagation Delay	2 μ s
RX	
Output Signal Type	RGBHV
Output Scaling	SmartScale [®] , Presets, Manual Configuration
RGB Output Signal Level Range	0 to 700 mVpp (0 to 750 mVpp max.)
RGB Output Impedance	75 ohm
HV Sync Output Signal Level Range	0 to +5 V
HV Sync Output Impedance	50 ohm
Output Connector	HD-15 (RGBHV)
Propagation Delay (typical)	24 ms for progressive; 48 ms for interlace

AMX reserves the right to modify its products and their specifications without notice.

DVI Video Specifications	
TX	
Input Signal Type	DVI-D (single link)
DDC/EDID Support	EDID provided by DGX TX EDID is user re-programmable
HDCP Support	No
Input Voltage (nominal)	1.0 Vpp differential
Input Connector	DVI-I (DVI-D single link is the supported signal type)
DVI Local Out Nominal Voltage	1.0 Vpp differential
DVI Local Out Re-clocking (CDR)	Yes
DVI Local Out +5 V DDC Pin	50 mA
DVI Local Out Rise Time / Fall Time	75 ps min. to 240 ps max. (20% to 80%) 0.12 UI min. to 0.4 UI max. (@ 1.65 Gbps, 20% to 80%)
DVI Local Output Connector	DVI-I (DVI-D single link is the supported signal type)
Input Cable Length	Meets DVI spec of 5 m (16.4 ft.)
Propagation Delay (typical)	2 μ s
RX	
Output Signal Type	DVI-D (single link)
Output Scaling	SmartScale [®] , Presets, Manual Configuration
Output Nominal Voltage	1.0 Vpp differential
Output Re-clocking (CDR)	Yes
Output +5 V DDC Pin	50 mA
Output Rise Time / Fall Time	75 ps min. to 240 ps max. (20% to 80%) 0.12 UI min. to 0.4 UI max. (@ 1.65 Gbps, 20% to 80%)
Output Connector	DVI-I (DVI-D single link is the supported signal type)
Propagation Delay (typical)	24 ms for progressive, 48 ms for interlace

EDID Specifications	
TX Standard Timing Identification	
ID 1	1920x1200 @ 60 Hz*
ID 2	1920x1080 @ 60 Hz
ID 3	1680x1050 @ 60 Hz
ID 4	1600x1200 @ 60 Hz
ID 5	1280x800 @ 60 Hz
ID 6	1280x720 @ 60 Hz
ID 7	1280x1024 @ 60 Hz
ID 8	640x480 @ 120 Hz
TX Established Timing	
	640x480 @ 60 Hz, 72 Hz, 75 Hz
	800x600 @ 56 Hz, 60 Hz, 72 Hz, 75 Hz
	1024x768 @ 60 Hz, 70 Hz, 75 Hz, 87 Hz
	1280x1024 @ 75 Hz

* This is the preferred timing identified in the EDID.

AMX reserves the right to modify its products and their specifications without notice.

Audio Specifications (Digital and Analog)	
TX	
Input Signal Types	Stereo analog, S/PDIF (2 Channel L-PCM) Video signal must be present to pass audio
Analog Input Level (max.)	+8 dBu, unbalanced
Analog Input Impedance	2 kohms
S/PDIF Resolution	16 bit to 24 bit
S/PDIF Sample Rate	32 kHz, 44.1 kHz, 48 kHz, 96 kHz*
S/PDIF Input Signal Level Range	200 mVpp to 2.5 Vpp terminated
S/PDIF Input Impedance	75 ohm
Analog to Digital Reference Level	+8 dBu = 0 dBfs
Optimal Analog Audio Operating Range	-30 dBu to +8 dBu
Optimal Digital Audio Operating Range	-38 dBfs to 0 dBfs
Input Connectors	3.5 mm mini-stereo jack (analog stereo) RCA jack (S/PDIF)
RX	
Output Signal Types	Stereo analog, S/PDIF (2 Channel L-PCM)
Analog Output Level (max.)	+8 dBu, unbalanced
Analog Output Impedance	<5 ohm
Analog Output Frequency Response	<+/-0.3 dB, 20 Hz to 20 kHz
Analog Audio Output THD+N	<0.04%, 1 kHz, -10 dBu to +8 dBu
Analog Audio Out SNR	>92 dB, 20 Hz to 20 kHz, Vin = +8 dBu
S/PDIF Output Signal Amplitude	0.4 Vpp to 1.0 Vpp terminated into 75 ohm
S/PDIF Output Resolution	16 bit to 24 bit
S/PDIF Output Sample Rate	32 kHz, 44.1 kHz, 48 kHz, 96 kHz*
Digital to Analog Reference Level	0 dBfs = +8 dBu
Optimal Analog Audio Operating Range	-30 dBu to +8 dBu
Optimal Digital Audio Operating Range	-38 dBfs to 0 dBfs
Audio Synchronization	Progressive and interlace video formats @ 60 Hz frame rate; audio is actively delayed to match video within 8 ms leading or lagging
Output Connectors	3.5 mm mini-stereo jack (analog stereo) RCA jack (S/PDIF)

* 96 kHz audio is only available when the source video resolution is 800x600 @ 60 Hz (40 MHz pixel clock) or greater. Otherwise, the maximum is 48 kHz.

AMX reserves the right to modify its products and their specifications without notice.

Serial Data Specifications	
TX	
Input Signal Type	Unidirectional RS-232: the control signal is transmitted in the same direction as video/audio Video signal must be present to pass serial data
Input Signal Level (max.)	+/-15 V
Baud Rate (max.)	115.2 k baud, 25 ft. (7.6 m) copper cable
Baud Rate (typical)	57.6 k baud, 150 ft. (45.7 m) copper cable
Input Connector	Pluggable 3.5 mm terminal block
RX	
Output Signal Type	Unidirectional RS-232: the control signal is transmitted in the same direction as video/audio
Output Signal Level (max.)	+/-5 V
Baud Rate (max.)	115.2 k baud, 25 ft. (7.6 m) copper cable
Baud Rate (typical)	57.6 k baud, 150 ft. (45.7 m) copper cable
Output Connector	Pluggable 3.5 mm terminal block

AMX reserves the right to modify its products and their specifications without notice.

Installation and Setup

UL Safety Certifications, Notices, and Recommendations for Laser Products

Per UL requirements, make note of the following:

- The DGX TX Fiber modules comply with IEC Standard: IEC 60825-1, 2001.
- The modules also comply with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.
- The DGX TX Fiber modules are CLASS 1 LASER PRODUCTS.
- The maximum output power of the laser radiation is 4.08 mW.

Since the class of radiation emitted from the fiber port can be Class 3R when the fiber cable or dust plug is removed, a yellow and black label with the following caution is located on the top of each DGX TX Fiber Module:

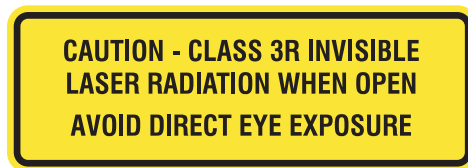


FIG. 11 Caution label for Class 3R laser products

Safety Recommendations for Laser Products

Important: *There are no user serviceable parts inside AMX DGX SC Fiber products; service should only be done by qualified personnel.*



Caution: *Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.*

Exercise caution when installing DGX products to avoid direct eye exposure to invisible laser radiation. Follow the recommendations below whenever installing or working with DGX products.

- ☐ Be sure to apply the power last, so that the fiber connector is *not* exposed when power is applied.
- ☐ Do *not* remove dust plugs from SC fiber connectors or the dust caps from the fiber cables until establishing connections; avoid direct eye exposure.
- ☐ Make sure all cables, including fiber cables, are correctly connected and/or terminated.
- ☐ If you need to unplug the fiber cable, be sure to unplug the power on the TX first.

Site Recommendations

When placing the modules, follow the recommendations and precautions in this section to reduce potential installation and operation hazards.

Environment

- ☐ Choose a clean, dust free, (preferably) air-conditioned location.
- ☐ Avoid areas with direct sunlight, heat sources, or high levels of EMI (Electromagnetic Interference).

Module Accessibility

Make sure the front of each module is accessible, so that you can monitor the LED indicators. Leaving adequate clearance at the rear will also allow for easier cabling and service.

Power

The source's electrical outlet should be installed near the modules, easily accessible, and properly grounded. Power should come from a building branch circuit. To avoid an overload, note the power consumption rating of all the equipment connected to the circuit breaker before applying power.

General Hazard Precautions

These recommendations address potential hazards that are common to all installations:

Elevated Operating Temperature

The maximum rated ambient temperature for DGX Fiber modules is 113° F (45° C).

All equipment should be installed in an environment compatible with the manufacturer's maximum rated ambient temperature. In a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than the ambient room temperature.



Caution: *To protect the equipment from overheating, do not operate in an area that exceeds 113° F (45° C) and follow the clearance recommendation below for adequate airflow.*

Airflow Restriction

The modules are designed to adequately dissipate the heat they produce under normal operating conditions; however, this design is defeated when high heat producing equipment is placed directly above or below a module.



Caution: *To prevent overheating, avoid placing high heat producing equipment directly above or below the modules. We recommend allowing one empty rack unit of clearance above the vent holes on top of the modules.*

Reliable Earthing (Grounding)

Reliable earthing of rack-mounted equipment should be maintained. If not using a direct connection to the branch circuit (e.g., plugging into a power strip), pay particular attention to supply connections.

Unpacking Tips

- ☐ Before fully unpacking the module(s), *inspect the shipping box(es) for any signs of damage.* If a box is partially crushed or any sides have been broken open, notify the shipping agency immediately and contact your AMX representative (see the warranty at www.amx.com).
- ☐ Once unpacking is complete, closely check the physical condition of the module(s).
- ☐ Collect all documentation.

Note: Please save the original shipping container and packing materials. AMX is not responsible for damage caused by insufficient packing during return shipment to the factory. Shipping boxes are available; contact your AMX representative for details.

Setup Options

This section covers options for system setup, mounting, and HD-15 cables (along with pinouts for the HD-15 and DVI-I connectors on the modules).

DGX Fiber Modules with DGX Matrix Switcher System Setup Options

The following table contains four system setup options for using DGX Fiber modules in a standalone, end-to-end solution and eight options for using them in conjunction with DGX Fiber boards in an AMX DGX matrix switcher with DGX Fiber input and output boards.

System Setup Options – AMX Equipment between Source and Destination				
	DGX TX	DGX Matrix Switcher Input Board	DGX Matrix Switcher Output Board	DGX RX
Four Options DGX Fiber modules as a standalone, end-to-end solution	HD-15 →	–	–	HD-15
	HD-15 →	–	–	DVI
	DVI →	–	–	HD-15
	DVI →	–	–	DVI
Eight Options DGX Fiber modules in conjunction with an AMX DGX matrix switcher	HD-15 →	Fiber →	Unspecified* →	Not Applicable
	DVI →	Fiber →	Unspecified* →	Not Applicable
	Not Applicable	Unspecified* →	Fiber →	HD-15
	Not Applicable	Unspecified* →	Fiber →	DVI
	HD-15 →	Fiber →	Fiber →	HD-15
	HD-15 →	Fiber →	Fiber →	DVI
	DVI →	Fiber →	Fiber →	HD-15
	DVI →	Fiber →	Fiber →	DVI

* To determine what types of input and output boards are compatible with DGX Fiber boards, see the matrix switcher's *Instruction Manual*.

Two system setups with DGX Fiber modules and a DGX Matrix Switcher are shown on the next page:

- FIG. 10 shows a DGX TX and a DGX RX in an end-to-end solution.
- FIG. 11 shows a DGX TX and a DGX RX used in conjunction with DGX Fiber boards in a DGX matrix switcher.

The DGX HD-15 TX and the DGX DVI TX modules can be installed interchangeably. The DGX HD-15 RX and the DGX DVI RX modules are interchangeable as well, providing for an extremely flexible system. For example, in the same system, the source device can send a DVI signal and the destination device can receive an RGBHV signal.

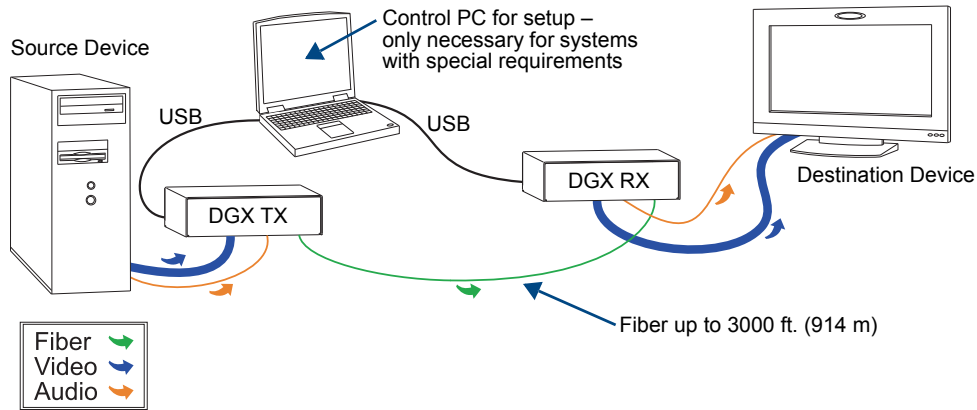


FIG. 12 DGX TX and DGX RX modules in point-to-point solution

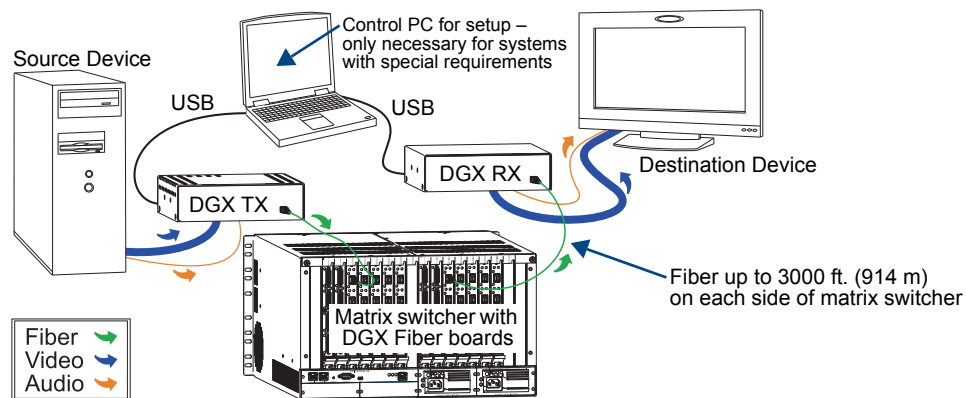


FIG. 13 DGX TX and DGX RX modules in module-to-DGX Switcher-to-module solution

Note: When the system has special requirements, the DGX TX and the DGX RX can be connected via the USB port to the Control PC for either setup scenario above.

DGX Fiber Modules with Non-DGX Matrix Switcher System Setup Options

A pair of DGX Fiber modules can be used upstream and/or downstream from a non-DGX matrix switcher. For additional information on switching behavior with this type of system, see page 64.

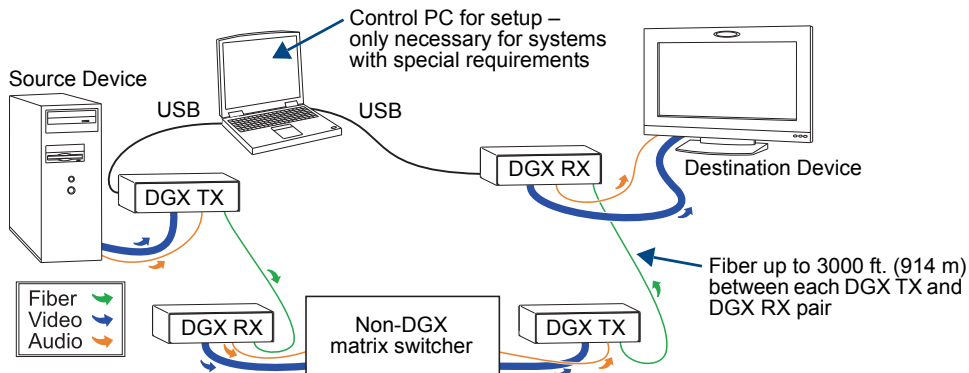


FIG. 14 DGX TX and DGX RX modules in module pair-to-non-DGX switcher-to-module pair solution

Note: When the system has special requirements, any of the DGX TX and the DGX RX modules can be connected via the USB port to the Control PC for this setup scenario.

Mounting Options (Rack Trays and Mounting Brackets)

The DGX TX and RX modules are classified as V Style modules, which require V Style mounting hardware. These versatile mounting options include rack trays and mounting brackets for desktops, under desks, poles, and walls. For details on kit options, see www.amx.com.

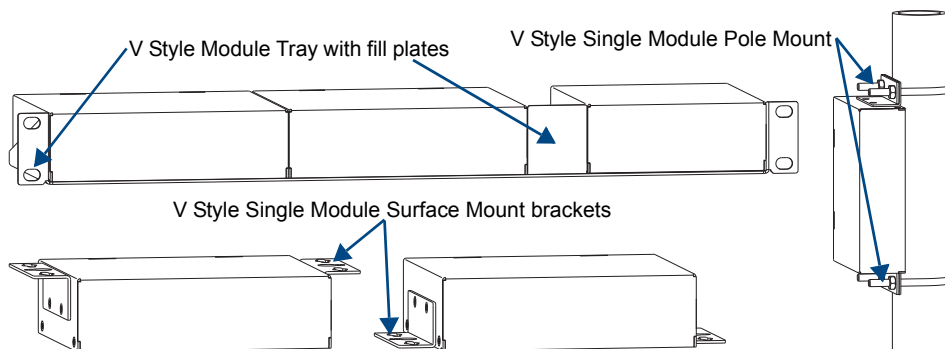


FIG. 15 V Style mounting hardware

HD-15 Cable Options

DGX HD-15 TX – Although any of the following cables (which are available through AMX) can be used to connect the source device to the HD-15 connector on the TX, we recommend using an HD-15 to HD-15 cable for the best display results.

DGX HD-15 RX – Either the HD-15 to HD-15 cable or the HD-15 with 5 BNCs breakout cable can be used to connect the destination device to the HD-15 connector on the RX.

The pinout for the HD-15 connector on the modules is in FIG. 17 on page 28.

HD-15 to HD-15 Cable (FG10-2170-01)

The HD-15 to HD-15 cable is available from AMX and provides the best display results for RGBHV signals.



FIG. 16 HD-15 to HD-15 cable, 6 ft. (1.83 m)

HD-15 to 5 BNC Breakout Cable (FG10-2170-05)

DGX TX – The HD-15 to 5 BNC breakout cable is normally used for an RGBHV signal. If you are using this breakout cable to send a Y/Pb/Pr signal from the source device to the TX, connect as follows:

- Pr to red
- Y to green (sync signal)
- Pb to blue

DGX RX – When connecting the RX to the destination device, HD-15 to 5 BNC breakout cable can only be used for RGBHV signals.



Note: When this type of cable is used, the RX cannot read the EDID from the destination device, resulting in the SmartScale® feature not functioning.

FIG. 17 HD-15 to 5 BNC breakout cable, 6 ft. (1.83 m)

HD-15 to 3 RCA Breakout Cable (FG10-2170-03)

This cable is available from AMX and can be used for either Y/Pb/Pr or RGB signals from the source device to the TX. The connection information is the same as the HD-15 to 5 BNC breakout cable.



Note: This cable cannot be used with an RX, as the RX can only send an RGBHV signal to the destination.

FIG. 18 HD-15 to 3 RCA breakout cable, 6 ft. (1.83 m)

HD-15 Pinout

The pinout in FIG. 19 is for the HD-15 connectors on DGX HD-15 TX and DGX HD-15 RX modules.

 
Input (VESA DDC Compliant)		Output	
	1. Red	1. Red	1. ID Bit
	2. Green	2. Green	2. ID Bit
	3. Blue	3. Blue	3. Horizontal Sync
	4. ID Bit	4. ID Bit	4. Vertical Sync
	5. GND	5. GND	5. DDC SCL
	6. Red GND	6. Red GND	6. Red GND
	7. Green GND	7. Green GND	7. Green GND
	8. Blue GND	8. Blue GND	8. Blue GND
	9. +5 V in DDC	9. +5 V out DDC	9. +5 V out DDC
	10. GND	10. GND	10. GND
	11. ID Bit	11. ID Bit	11. ID Bit
	12. DDC SDA	12. ID Bit	12. ID Bit
	13. Horizontal Sync	13. Horizontal Sync	13. Horizontal Sync
	14. Vertical Sync	14. Vertical Sync	14. Vertical Sync
	15. DDC SCL	15. ID Bit	15. ID Bit

FIG. 19 DGX HD-15 TX (input and local output) and DGX HD-15 RX (output) pinout

Note: 55 mA is supplied on output pin 9; power draw not to exceed 50 mA per port.

DVI Pinout

The pinout in FIG. 20 is for the DVI-I connectors on DGX DVI TX and DGX DVI RX modules.

 
Input		Output	
	1. Data 2-	9. Data 1-	17. Data 0-
	2. Data 2+	10. Data 1+	18. Data 0+
	3. Ground	11. Ground	19. Ground
	4. No connect	12. No connect	20. No connect
	5. No connect	13. No connect	21. No connect
	6. DDC-CLK	14. +5 VDC in	22. Ground
	7. DDC-Data	15. Ground	23. CLK+
	8. No connect	16. Hot-Detect	24. CLK-
	1. Data 2-	9. Data 1-	17. Data 0-
	2. Data 2+	10. Data 1+	18. Data 0+
	3. Ground	11. Ground	19. Ground
	4. No connect	12. No connect	20. No connect
	5. No connect	13. No connect	21. No connect
	6. DDC-CLK	14. +5 VDC out*	22. Ground
	7. DDC-Data	15. Ground	23. CLK+
	8. No connect	16. Hot-Detect	24. CLK-
	C1. No connect	C1. No connect	C1. No connect
	C2. No connect	C2. No connect	C2. No connect
	C3. No connect	C3. No connect	C3. No connect
	C4. No connect	C4. No connect	C4. No connect
	C5. No connect	C5. No connect	C5. No connect

FIG. 20 DGX DVI TX (input and local output) and DGX DVI RX (output) pinout

* The +5 VDC on output pin 14 on the DGX DVI RX module supplies a maximum of 55 mA.

Basic Installation

Installation Scenario 1 (Basic) Automatic Image Adjustment and Automatic EDID Scaling

The flow chart in FIG. 21 assumes that the results from the automatic image adjustment and automatic EDID scaling require no further adjustment.

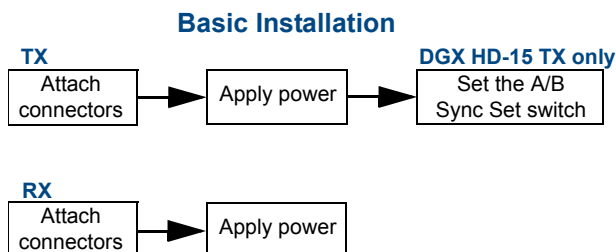


FIG. 21 Basic installation procedure – assumes image is satisfactory

For most installations, the following basic installation steps will provide a satisfactory image on the destination device. If the installation has special requirements, three additional scenarios are presented at the end of the basic installation steps which indicate how to handle them. Depending on the installation's requirements, one or more of the three scenarios could apply.

Safety Recommendations for Laser Products

Important: *There are no user serviceable parts inside AMX DGX SC Fiber products; service should only be done by qualified personnel.*



Caution - *Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.*

Exercise caution when installing DGX products to avoid direct eye exposure to invisible laser radiation. Follow the recommendations below whenever installing or working with DGX products.

- ☐ Be sure to apply the power last, so that the fiber connector is *not* exposed when power is applied.
- ☐ Do *not* remove dust plugs from SC fiber connectors or the dust caps from the fiber cables until establishing connections; avoid direct eye exposure.
- ☐ Make sure all cables, including fiber cables, are correctly connected and/or terminated.
- ☐ If you need to unplug the fiber cable, be sure to unplug the power on the TX first.

TX – Attaching Signal Cables

Check When Fastening Fiber Cable:

- ☐ Make sure that no dust or debris are on the exposed ends of the fiber cable.
- ☐ Make sure that the fiber cable connectors seat firmly into the module's fiber connector. Normally an audible click is heard when a connector engages.



Caution: *Do not severely bend or kink the fiber cable. It can cause irreversible damage to the cable. The bend radius for AMX fiber cables is 2 inches (5 cm).*

Note: *If an interlaced video format is sent to a TX, the RX will output a progressive video format, regardless of the scaling mode.*

To attach signal cables to a TX:

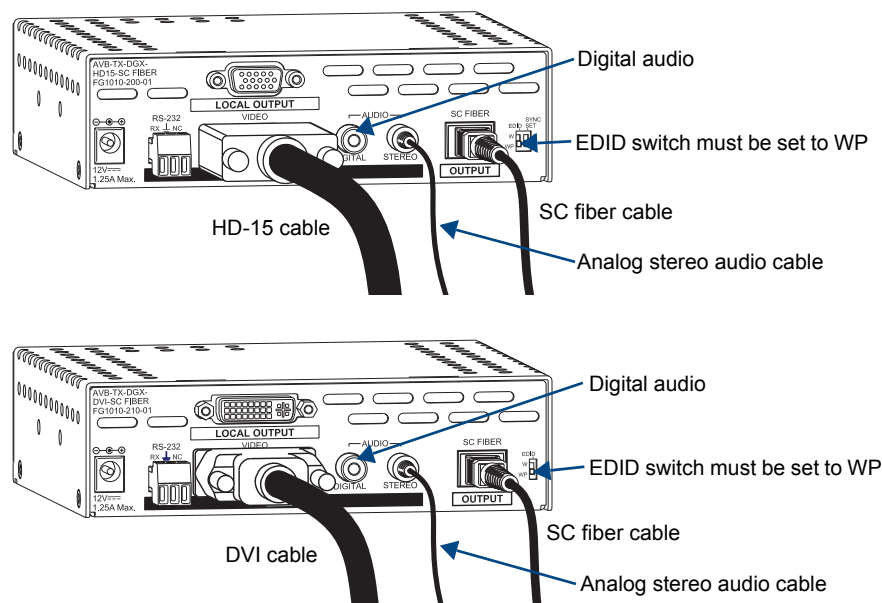


FIG. 22 Attach signal cables to DGX HD-15 TX (top) or DGX DVI TX (bottom)

1. Check the EDID switch on the rear of the TX to be sure that it remains in the down position for WP (write protect).
2. DGX HD-15 TX – Attach the connector on the HD-15 cable from the source device to the Video Input receptacle (FIG. 20, top). HD-15 connectors on the module use the pinout information in FIG. 17.
or
DGX DVI TX – Attach the connector on the DVI cable from the source device to the Video Input receptacle (FIG. 20, bottom). DVI connectors on the module use the pinout information in FIG. 18.
3. Optional – To use the local out option for a nearby video destination device, attach the device's cable to the Local Video Output receptacle.
4. If needed – Insert the connector on the digital **or** analog stereo audio cable from the source device into the appropriate input audio jack, Digital or Stereo. Digital takes precedence if both are connected.



CAUTION – CLASS 3R INVISIBLE LASER RADIATION WHEN OPEN; AVOID DIRECT EYE EXPOSURE.

5. Clean the fiber cable connector. Follow the manufacturer's recommendations.
6. Remove the dust plug from the SC Fiber Output jack* and insert the fiber cable connector (the fiber connector will click when fully engaged).
7. Connect the open end of the SC fiber cable to the RX before connecting power.

* The fiber jack is a standard 2.5 mm SC fiber connector (standardized in TIA-568A) that snaps the cable connector into place.

TX – Wiring for RS-232 Data Transfer

The RS-232 port is a unidirectional interface.

Important: *The RS-232 connection on the modules requires management of the RS-232 data line in relation to switching operations. In an upstream matrix switching scenario, we recommend that RS-232 control commands (via the DGX RS-232 data connection) are not sent immediately prior or subsequent to a matrix switching command. It is possible for the RS-232 data to be corrupted as the video (or audio) signal is removed and then restored by the matrix switcher.*

The RS-232 port is the 3- position screw terminal block on the rear of the module to the right of the power jack. Wire this port to supply unidirectional RS-232 serial data along with the associated video and audio signals from a source device (via the TX over fiber to the RX) to a destination device. The video signal *must* be present to pass serial data.

On the TX module, the pinout for the RS-232 connector is “RX - Ground - NC.” The RS-232 port label is relative to the data flow; RS-232 data flows the same direction as the video signal. Data enters the system at the RX label on the TX module and leaves the system at the TX label on the RX module.

To wire the RS-232 port on the TX for data transfer:

1. Wire the RS-232 connector according to the pinout directly above the connector (FIG. 23).

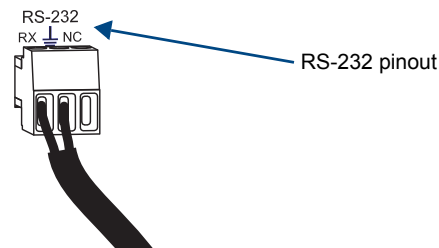


FIG. 23 Wire TX for RS-232 data transfer



TX – Applying Power

Caution: *If you are providing the power supply, use a UL (or equivalent) listed power supply. To avoid damage to the module, the electrical ratings for the power supply must not exceed those indicated in the “Specifications” table on page 18.*

To apply power to the TX:

1. Plug the cord from the desktop power supply (provided) into the power jack on rear of the TX.
2. Plug the desktop power supply into an AC external power source.
The Power LED on the front of the TX initially turns red and after a moment it turns a constant green, indicating a ready state.
Some of the additional LEDs will also turn a turn a constant green; see the table below for LED states on initial power up.

DGX HD-15 TX – Indicator LEDs at Initial Power Up

TX LED	Normal State	Indicates
Power	Constant red Constant green	Initial application of power (red for a brief time only). Power is in an operational state.
Video	Constant green	A video signal is present through TX.
Audio	Constant green	An audio signal is present through TX.
EDID	Off	EDID is in Write-Protect mode (EDID switch on rear is flipped down).
Y/Pb/Pr, RGB	Constant green	A Y/Pb/Pr or RGsB signal is present through TX.
RGBHV, RGBS	Constant green	An RGBHV or RGBS signal is present through TX.
Auto Manual	Constant green Off	TX is in Auto mode for determining resolution (default state). Press Mode button to turn on Manual mode (Auto LED will turn off).

DGX DVI TX – Indicator LEDs at Initial Power Up

TX LED	Normal State	Indicates
Power	Constant red Constant green	Initial application of power (red for a brief time only) Power is in an operational state
Video	Constant green	A video signal is present through TX
Audio	Constant green	An audio signal is present through TX
EDID	Off	EDID is in Write-Protect mode (EDID switch on rear is flipped down)

For information on restoring the TX default settings on power up, see page 71.

DGX HD-15 TX Only – Check and Set Switch for Video Signal Type

When the DGX HD-15 TX is powered up, it is normally in Auto mode and will detect whatever type of signals are coming from the source device. The Sync Set dip switch on the rear *must* be set to position A (down) or position B (up) to match the type of incoming video signal. The default setting is the Sync Set switch in position A.

To check type of video signal DGX HD-15 TX is receiving and set Sync Set dip switch:

1. Check the Video Type LED indicators on the front of the TX.
If the RGBHV, RGBS indicator is green, the Sync Set dip switch can be either in position A or B.
If the Y/Pb/Pr, RGB indicator is green, the toggle switch *must* be in the correct position for the specific signal (to determine setting, see the table below).
2. Set the Sync Set dip switch to position A (down) or B (up) according to the type of incoming signal.
3. Cycle power.

Note: The dip switch can be set to either A or B for RGBHV or RGBS signals.

Signal Type	Sync Set Switch Position A (down)	Sync Set Switch Position B (up)
Y/Pb/Pr	●	
RGsB		●
RGBS	●	●
RGBHV	●	●

Note: If the video cable is disconnected (or the source signal is turned off), the illuminated Signal Type LED will turn off. If the cable is reconnected (or the source signal is turned back on), the indicator will turn green again.

RX – Attaching Signal Cables**Check When Fastening Fiber Cable:**

- ☐ Make sure that no dust or debris are on the exposed ends of the fiber cable.
- ☐ Make sure that the fiber cable connectors seat firmly into the module's fiber connector.
Normally an audible click is heard when a connector engages.



Caution: Do not severely bend or kink the fiber cable. Irreversible damage can occur. The bend radius for AMX fiber cables is 2 inches (5 cm).

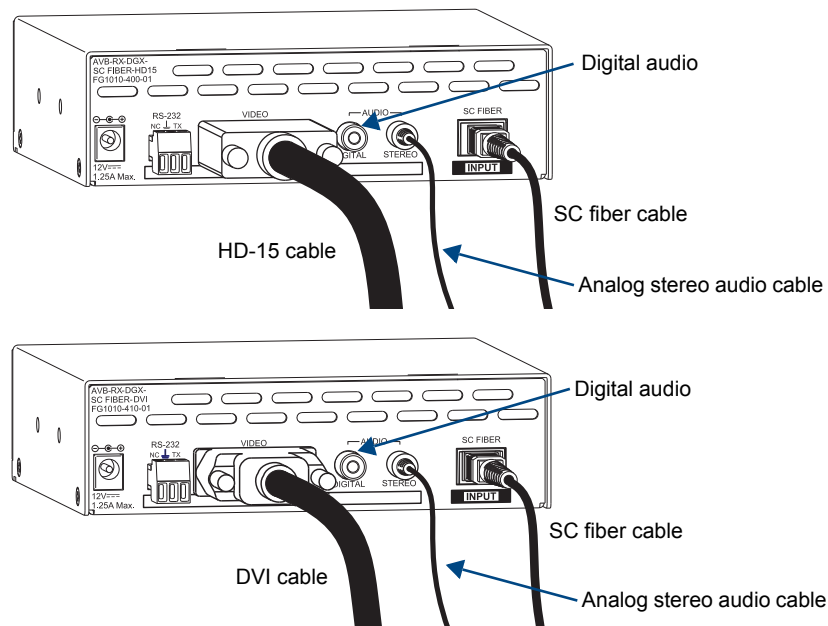


FIG. 24 Attach signal cables to DGX HD-15 RX (top) or DGX DVI RX (bottom)

To attach signal cables to the RX:

1. Attach the connector for the HD-15 cable for the destination device to the Video Output receptacle. HD-15 connectors on the module use the pinout information in FIG. 17.
2. If needed — Insert the connector for the digital and/or analog stereo audio cable for the destination device into the appropriate audio Output jack, Digital or Stereo. The audio signal is output on both ports.



CAUTION: CLASS 3R INVISIBLE LASER RADIATION WHEN OPEN; AVOID DIRECT EYE EXPOSURE.

3. Clean the fiber cable connector; follow the manufacturer's recommendations.
4. Remove the dust plug from the SC Fiber Output jack* and insert the fiber cable connector (the fiber connector will click when fully engaged).
5. Be sure the other end of the SC fiber cable is connected before applying power.

* The fiber jack is a standard 2.5 mm SC fiber connector (standardized in TIA-568A) that snaps the cable connector into place.

RX – Wiring for RS-232 Data Transfer

The RS-232 port is a unidirectional interface, which is compatible only with other AMX products that use the single fiber interface.

The RS-232 port is the 3-position screw terminal block on the rear of the module to the right of the power jack. Wire this port to supply unidirectional RS-232 serial data along with the associated video and audio signals from a source device (via the TX over fiber to the RX) to a destination device. The video signal *must* be present to pass serial data.

On the RX module, the pinout for the RS-232 connector is “NC - Ground - TX.” The RS-232 port label is relative to the data flow; RS-232 data flows the same direction as the video signal. Data enters the system at the RX label on the TX module and leaves the system at the TX label on the RX module.

To wire the RS-232 port on the RX for data transfer:

1. Wire the RS-232 connector according to the pinout directly above the connector (FIG. 25).

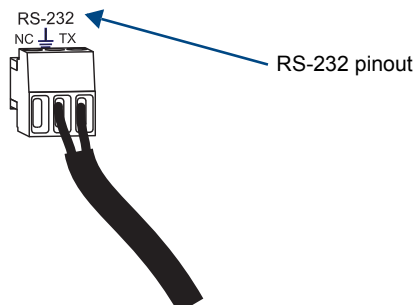


FIG. 25 Wire RX for RS-232 data transfer

RX – Applying Power



Caution: If you are providing the power supply, use a UL (or equivalent) listed power supply. To avoid damage to the module, the electrical ratings must not exceed those indicated in the “Specifications” table on page 18.

To apply power to the RX:

1. Plug the cord from the desktop power supply (provided) into the power jack on rear of the RX.
2. Plug the desktop power supply into an AC external power source.
The Power LED on the front of the RX initially turns red and after a moment it turns a constant green, indicating a ready state.
Some of the additional LEDs will also turn a turn a constant green; for LED states on initial power up, see the table below.

Note: On power up, the blower will toggle to a high (full on) state briefly until the CPU takes over, at which time the blower will go to its normal operational state.

DGX HD-15 RX and DGX DVI RX – Indicator LEDs at Initial Power Up

RX LED	Normal State	Indicates
Power	Constant red Constant green	Initial application of power (red for a brief time only). Power is in an operational state.
Video	Constant green	A video signal is present through the RX.
Audio	Constant green	An audio signal is present through the RX.
Scaling – Bypass – Auto – Manual	Off Constant green* Off	At initial power up, the RX defaults to the Auto Scaling option.* Press Scaling button to turn on the Bypass option or Manual option.

* If the output cable is disconnected from the RX or if no EDID can be found on the destination device, the Bypass LED will be constant green and the Auto LED will blink. This indicates that the RX has switched to the Bypass Scaling option and is waiting for EDID information. As soon as a valid EDID is found, the RX will revert to the Auto Scaling option.

For information on restoring the RX default settings on power up, see page 71.

Addressing Special Installation Requirements

For most installations, the basic installation steps just covered will provide a satisfactory image on the destination device. If the installation has special requirements (or in some cases when the TX is used in conjunction with a DGX matrix switcher), three additional scenarios are presented which indicate how to handle them. The information necessary to complete these scenarios is covered in the chapters referenced under each scenario. Depending on the installation, one or more of the scenarios may apply.

Note: Scenarios 2 and 3 each require the creation of a virtual COM port (see page 67) to run the necessary software, which is available at www.amx.com.

Installation Scenario 2 – Automatic Image Adjustment and Custom Scaling

When a specific or a custom resolution is desired, the flow chart in FIG. 26 shows the sequence to follow. Complete the instructions for “Basic Installation” starting on page 29, and then see the “Scaling Options” chapter on page 37 for detailed information on the scaling modes and the scaling override procedure (applies to both the DGX HD-15 RX and the DGX DVI RX).

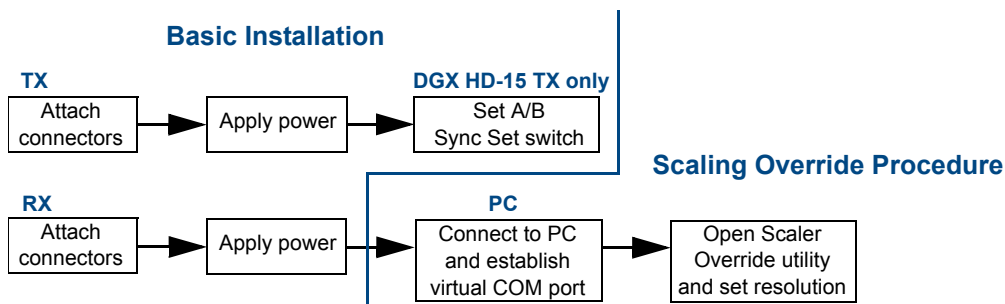


FIG. 26 Installation procedure with override for setting a resolution

Installation Scenario 3 – Manual Image Adjustment and Automatic EDID Scaling

When fine tuning of the image is desired, the flow chart in FIG. 27 shows the sequence to follow. Complete the instructions for “Basic Installation” starting on page 29, and then see the “Adjusting Video with BoardConfig Software” chapter on page 45 for detailed information on the video adjustment procedure (applies *only* to the DGX HD-15 TX).

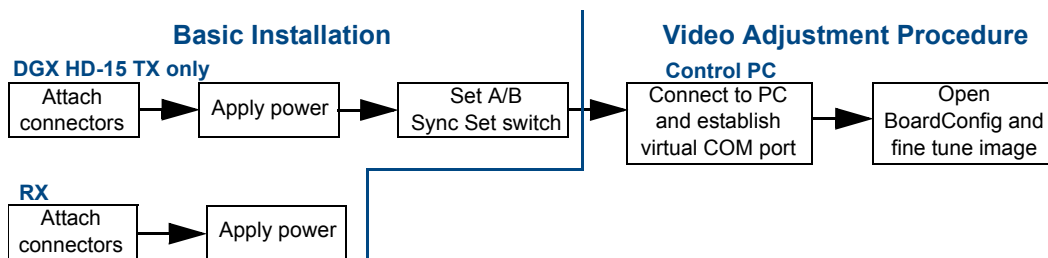


FIG. 27 Installation procedure with manual image adjustment

Installation Scenario 4 – Automatic Image Adjustment Using Custom EDID

When you need to read a custom EDID from the destination device and write it to the TX, the flow chart in FIG. 28 shows the sequence to follow. Complete the instructions for “Basic Installation” starting on page 29, and then see the “EDID Programmer” chapter on page 51 for detailed information on the procedure for reading the EDID from a destination device and writing it to the TX (applies to both the DGX HD-15 TX and the DGX DVI TX).

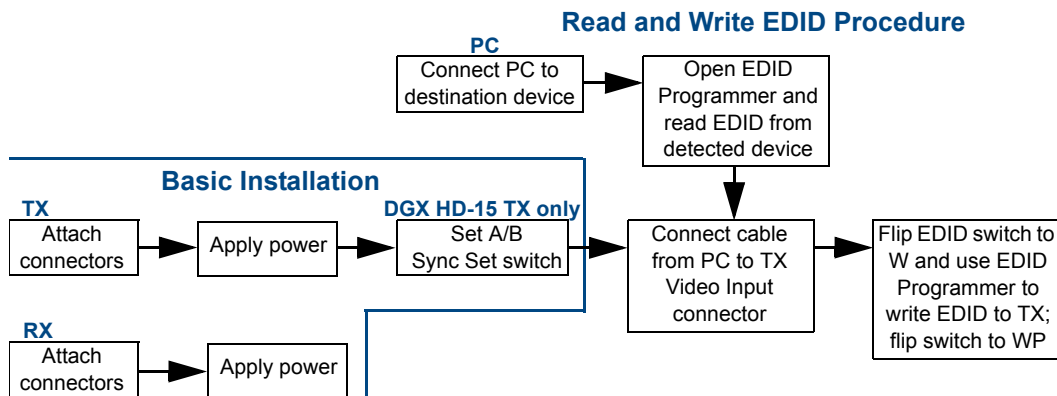


FIG. 28 Installation procedure using EDID Programmer to read and write EDID

Scaling Options

Applicability

This chapter deals with the SmartScale® feature (controlled through the Auto option) on both the DGX HD-15 RX and the DGX DVI RX, as well as Bypass and Manual (the other two Scaling options). The section on the Manual Scaling option provides an overview of the Scaler Override utility along with instructions for setting a specific resolution or a custom resolution.

Important: *Because the basic installation steps normally produce a satisfactory image, you will not need the information in this chapter unless the installation has special requirements.*

Installation Scenario 2 – Automatic Image Adjustment and Custom Scaling

The flow chart in FIG. 29 shows the sequence to follow when the installation requires a specific or a custom resolution.

- Complete the “Basic Installation” – page 29.
- Establish a virtual COM port – page 67.
- Use the Scaler Override utility (available at www.amx.com) – page 38.

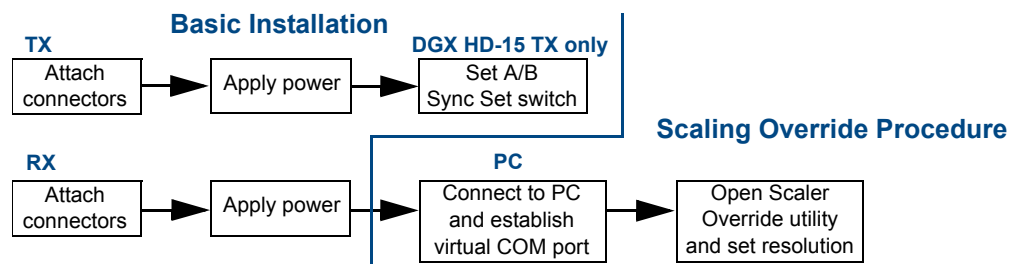


FIG. 29 Installation procedure – override for setting a resolution

Scaling Options Overview

The RX automatically uses the EDID of the destination device to scale (SmartScale® technology). The scaling feature supports from 25 MHz to 165 MHz pixel clock (the maximum resolution is 1920x1200 @ 60 Hz).

The Scaling button on the front of the DGX RX is used to switch between the Auto (SmartScale®), Bypass, and Manual options. The options for Scaling cycle from Auto (default) to Manual to Bypass.

Tip: *After you save the settings in the Scaler Override utility, use the Scaling button to cycle through the options to compare the resulting video displays for the Auto and Manual options.*

Persistence of a Scaling Option

The factory default is for the RX to revert to the Auto option if power is cycled. If you want the RX to remain in either Manual or Bypass when power is cycled, use the following instructions.

To persist a Scaling option on power cycle:

1. Press and release the Scaling button until the LEDs cycle to the option immediately before the one you want to persist.
2. Press and hold the Scaling button about 5 seconds until the desired LED blinks green, indicating that option will persist on power cycle.

Auto Option (SmartScale®)

In most cases, selecting the DGX HD-15 RX and DGX DVI RX Auto option (default) provides a satisfactory image on the destination monitor or device. In this case, no other action is required.

Note: *The Auto option automatically persists when the power is cycled on the RX, unless the persisted state has been changed (see page 37).*

Bypass Option

If the Auto option does not provide a satisfactory image on the monitor, the Bypass option can be selected with the Scaling button. When Bypass is selected, any modifications to the video signal generated on a DGX HD-15 TX or DGX DVI TX (see page 45) are left unmodified by the RX, i.e., the signal leaves the RX exactly as it came into the RX.

To keep in mind regarding the Bypass option:

- When adjusting a TX with Board Config software, setting the RX to the Bypass option is recommended if the display will support the desired resolution (see page 47).
- If the RX fails to read the EDID on power up (i.e., no resolution data is available from the destination device), the RX reverts to the Bypass option until the video cable is unplugged and then plugged in, at which time it will attempt to read the EDID again.

Note: *When Bypass mode is selected, an interlaced source changes to a progressive output.*

To select the Bypass option on the RX:

1. Press the Scaling button on the RX once or twice (depends on current selection) until the Bypass LED illuminates solid green.

Note: *If you want this option to persist when the power is cycled on the RX, see page 37.*

Manual Option and the Scaler Override Utility

In some special installation cases, you will need to select Manual on the DGX RX to override the automatic scaling and set (configure) a specific or a custom resolution for the display monitor. When a DGX RX is connected to a PC running the Scaler Override utility, the utility displays the resolutions supported by the destination monitor based on the set of supported resolutions in the monitor's (or other destination device's) EDID. Settings can then be selected and applied to the RX.

When you select Manual, the RX sets up the video scaler with factory default values (1280x1024 @ 60 Hz). EDID preferred resolution parameters are used if available, unless scaler setup parameters were previously uploaded.

Important: *If a device with an EDID (e.g., a video processor) is installed between the RX and destination monitor, the Scaler Override utility will read the EDID for that device. If this happens, you will probably need to set a custom resolution.*

Note: *When the following timings are in the EDID data, the Scaler Override utility will not display them: 720x400 @ 70 Hz, 720x400 @ 88 Hz, 640x480 @ 67 Hz, 832x624 @ 75 Hz, and 1152x870 @ 75 Hz. These timings can be entered in the utility as custom resolutions.*

PC Requirements

- ☐ Windows XP Professional®
- ☐ Minimum Hardware: 166 MHz, 128 MB RAM, 20 MB free disk space*, 800x600 display
- ☐ Recommended Hardware: 2.0 GHz, 512 MB RAM
- ☐ USB port**

* The installation process requires 20 MB of disk space for the Scaler Override installer. Once installed, the tool requires 5 MB of disk space.

** For DGX Fiber modules, the USB port is used as a virtual COM port for serial communication.

How the Scaler Override Utility Works

Important: If breakout cables are used between the DGX HD-15 RX and the destination monitor (or device), the Scaler Override utility cannot read the EDID.

When the Scaler Override utility is launched, it attempts to obtain the EDID information from the destination monitor. One of the following occurs:

- If the utility finds the EDID information, it populates the interface with the appropriate “preferred/native” resolution settings (and fills in the advanced timing section with the corresponding data).
- If the utility cannot find the EDID information, it populates the interface with the Standard timing default settings (and fills in the advanced timing section with the corresponding data).

Important: On start up, the Scaler Override utility’s interface always reflects one of the two conditions mentioned above; it does not show the settings currently stored on the RX, unless you use the utility to retrieve them from the RX. This holds true even if you persist the Manual Scaling option (see page 37).

The Scaler Override utility can then be used to do any of the following:

- Set the Aspect Ratio option to either Maintain Aspect Ratio or Stretch to Fit. Click Save to persist this setting to the Manual and Auto options. (For descriptions of these settings, see page 44.)
- Set an EDID that is read from the detected device (basic resolution); see (A) on page 40.
- Set a standard preset, which applies standard timing; see (B) on page 41.
- Set a custom resolution with the option of applying advanced detailed timing parameters; see (C) on page 42.
- Retrieve the settings from an RX; see page 43.
- Save the settings in the utility to a file; see page 43.
- Load the timings from a file to the utility and apply them to an RX; see page 43.

Note: When retrieving or loading a timing, the program will automatically display “Custom” as the selected Resolution Source and “Advanced” as the selected Timing Mode regardless of the original source of the timing.

Utility Menu Options

- File Menu – Save Timing to File (saves the settings displayed on the utility to a file), Load Timing from File (loads settings from a file to the utility), and Exit.
- Communication Menu – Refresh EDID Info (from the destination device) and Retrieve Current Timing* (from the RX).

* The current timings displayed will depend on the selected Scaling option. If the RX is in Auto, the utility reflects the current timings chosen by the SmartScale® technology. If the RX is in Manual, the utility reflects the currently applied timings (not necessarily the settings stored in memory).

Time Saving Tip: When a number of RX modules are connected to the same type of destination devices, the menu options can be used to retrieve the settings from one RX, save those settings to a file, and then load the settings to additional RX modules.

Apply, Save, and Close Options

- Apply – Use to try out settings. Sends currently displayed settings to RX; does *not* store or persist settings.
- Save – Use to preserve currently displayed settings. Sends currently displayed settings to RX to store them; sends command to persist settings in the RX memory (also persists Manual Scaling option on the RX).
- Close – Closes the application without sending or saving any changes in the settings. (If Apply was just selected, the utility asks whether or not to save the applied settings.)

Before starting the Scaler Override procedure (applies to either DGX RX):

- ☐ Connect the DGX RX to a PC using a USB (mini-B) cable (FG10-5965 provided). A virtual COM port *must* be established; see page 67.
- ☐ On the PC, install the Scaler Override utility from **www.amx.com**.

(A) To set an EDID for the RX from the detected device:

Note: If the Manual option is not selected in Step 1, the RX automatically goes to the Manual option when the utility is opened or when either the Apply or the Save button in the utility is selected. (If the Save button is selected, the Manual option persists when power is cycled on the RX.) The Manual option remains selected until the Scaling button on the RX is pressed to activate another option.

1. Press the Scaling button on the RX once or twice (depends on the current selection) until the Manual LED illuminates green.
2. Open the Scaler Override utility (it automatically queries the destination device for EDID information). The EDID Status section indicates that the EDID information has been found for the detected device or that a list of standard resolutions is available).

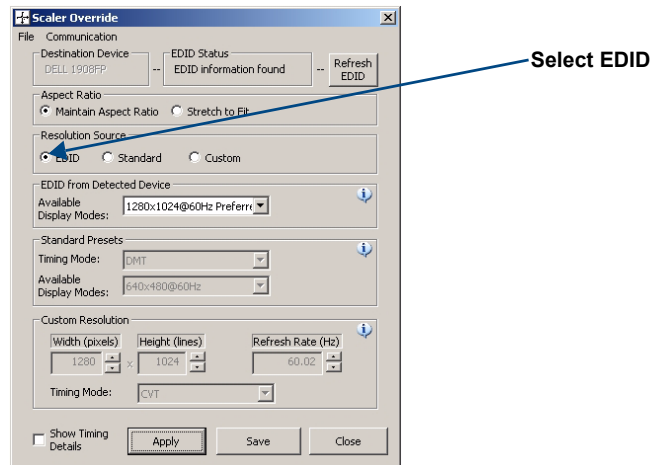


FIG. 30 Scaler Override utility with EDID selected

3. Under Aspect Ratio, click either Maintain Aspect Ratio or Stretch to Fit (for descriptions of both, see page 44).
4. Under Resolution Source, click EDID.
5. Under EDID from Detected Device, select desired resolution from the Available Display Modes list.
6. Click Apply to transmit the selected information to the RX. This action is temporary (and you can still cycle through the Scaling options on the RX); settings are not stored on the RX until Step 8; otherwise, the settings last only until power is cycled. The display re-syncs with the module.
7. Verify that the display is satisfactory before proceeding.
8. Click Save* to store the currently displayed settings (if the setting have been changed since clicking Apply, the newest settings will be saved) on the RX and persist them in memory. (The RX will power up in the Manual option.)

* If you click Close instead of Save immediately after applying settings, the utility asks if you want to save prior to exiting. Selecting Yes applies the settings, persists them on the RX, persists the Manual mode on the RX over power cycles, and closes the utility. Selecting No closes the utility; the applied settings are still in effect and can be accessed under the Manual option. However, they are not stored on the RX and on power cycle, the RX will revert to its previously stored settings.

(B) To set to a standard preset for the RX:

Note: If the Manual option is not selected in Step 1, the RX automatically goes to the Manual option when the utility is opened or when either the Apply or the Save button in the utility is selected. (If the Save button is selected, the Manual option persists when power is cycled on the RX.) The Manual option remains selected until the Scaling button on the RX is pressed to activate another option.

1. Press the Scaling button on the RX once or twice (depends on the current selection) until the Manual LED illuminates green.
2. Open the Scaler Override utility (it automatically queries the destination device for EDID information). The EDID Status section indicates either that the EDID information has been found for the detected device or that a list of standard resolutions is available).

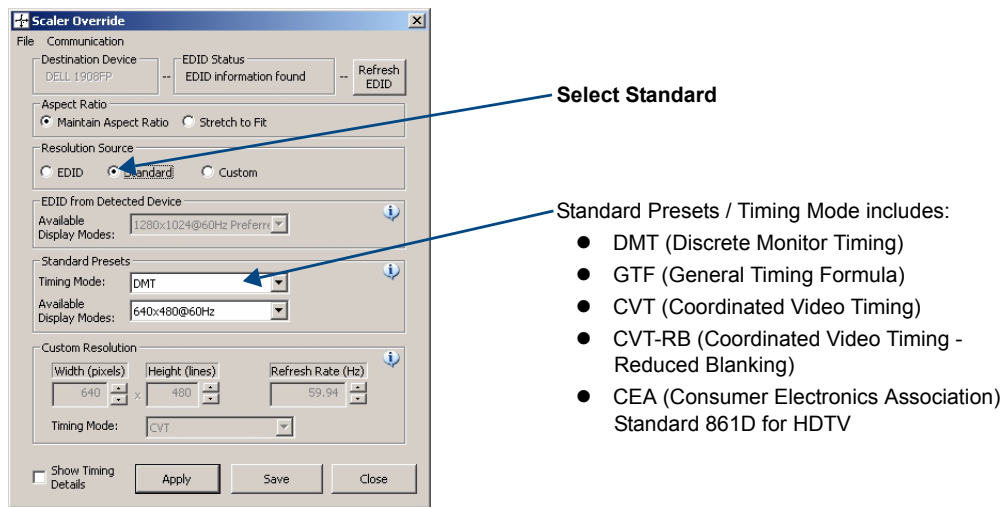


FIG. 31 Scaler Override utility with standard resolution selected

3. Under Aspect Ratio, click either Maintain Aspect Ratio or Stretch to Fit (for descriptions of both, see page 44).
4. Under Resolution Source, click Standard.
5. Under Standard Presets, select the timing mode from the Timing Mode list and select the resolution from the Available Display Modes list.
6. Click Apply to transmit the selected information to the RX. This action is temporary (and you can still cycle through the Scaling options) until the settings are stored on the RX in Step 8; otherwise, the settings last only until power is cycled. The display re-syncs with the module.
7. Verify that the display is satisfactory before proceeding.
8. Click Save* to store the currently displayed settings (if the setting have been changed since clicking Apply, the newest settings will be saved) on the RX and persist them in memory. (The RX will power up in the Manual option.)

* If you click Close instead of Save immediately after applying settings, the utility asks if you want to save prior to exiting. Selecting Yes applies the settings, persists them on the RX, persists the Manual mode on the RX over power cycles, and closes the utility. Selecting No closes the utility; the applied settings are still in effect and can be accessed under the Manual option. However, they are not stored on the RX and on power cycle, the RX will revert to its previously stored settings.

(C) To set a custom resolution for the RX with optional advanced timing parameters:

Note: If the Manual option is not selected in Step 1, the RX automatically goes to the Manual option when the utility is opened or when either the Apply or the Save button in the utility is selected. (If the Save button is selected, the Manual option persists when power is cycled on the RX.) The Manual option remains selected until the Scaling button on the RX is pressed to activate another option.

1. Press the Scaling button on the RX once or twice (depends on the current selection) until the Manual LED illuminates green.
2. Open the Scaler Override utility (it automatically queries the destination device for EDID information). The EDID Status section indicates either that the EDID information has been found for the detected device or that a list of standard resolutions is available.

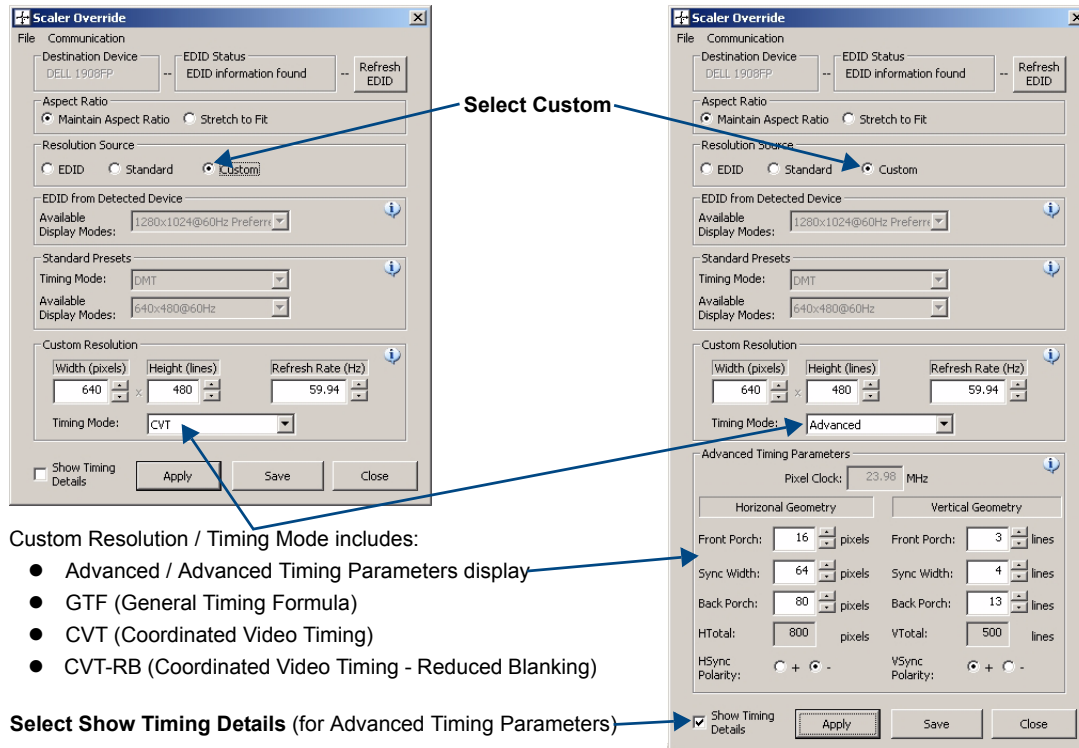


FIG. 32 Scaler Override utility with a Custom Resolution selected (left) and Advanced Timing Parameters selected (right)

3. For Aspect Ratio, click either Maintain Aspect Ratio or Stretch to Fit (for descriptions of both, see page 44).
4. Under Resolution Source, click Custom.
5. Under Custom Resolution, enter the width, height, and refresh rate.
6. Select the timing mode from the Timing Mode list.
If Advanced is selected from the list (FIG. 30, on the right), the Advanced Timing Parameters section opens; complete all remaining steps.
If another timing mode is selected from the list (FIG. 30, on the left), go to Step 8.
7. Advanced only — under Horizontal Geometry, enter the values in pixels. Under Vertical Geometry, enter the values in lines. Select HSync and VSync Polarity.
8. Click Apply to transmit the selected information to the RX. This action is temporary (and you can still cycle through the Scaling options) until the settings are stored on the RX in Step 10; otherwise, the settings last only until the power is cycled. The display re-syncs with the module.
9. Verify that the display is satisfactory before proceeding.

10. Click Save* to store the currently displayed settings (if the settings have been changed since clicking Apply, the newest settings will be saved) on the RX and persist them in memory. (The RX will power up in the Manual option.)

* If you click Close instead of Save immediately after applying settings, the utility asks if you want to save prior to exiting. Selecting Yes applies the settings, persists them on the RX, persists the Manual mode on the RX over power cycles, and closes the utility. Selecting No closes the utility; the applied settings are still in effect and can be accessed under the Manual option. However, they are not stored on the RX and on power cycle, the RX will revert to its previously stored settings.

Retrieving, Saving, and Loading Settings

Time Saving Tip: *When a number of RX modules are connected to destination devices of the same type, the menu options can be used to retrieve the settings from one RX, save those settings to a file, and then load the settings to another RX.*

Note: *When retrieving or loading a timing, the program will automatically display "Custom" as the selected Resolution Source and "Advanced" as the selected Timing Mode regardless of the original source of the timing.*

To retrieve the settings from an RX:

1. From the Communications menu, select Retrieve Current Timing.

To save the settings in the utility to a file:

1. From the File menu, select Save Timing to File.

To load the timings from a file to the utility and then apply them to an RX:

1. From the File menu, select Load Timing from file.
2. Click Apply to transmit the loaded timing to the RX. This action is temporary (and you can still cycle through the Scaling options) until the settings are stored on the RX in Step 4; otherwise, the settings last only until power is cycled. The display re-syncs with the module.
3. Verify that the display is satisfactory before proceeding.
4. Click Save* to store the currently displayed settings (if the setting have been changed since clicking Apply, the newest settings will be saved) on the RX and persist them in memory. (The RX will power up in the Manual option.)

* If you click Close instead of Save immediately after applying settings, the utility asks if you want to save prior to exiting. Selecting Yes applies the settings, persists them on the RX, persists the Manual mode on the RX over power cycles, and closes the utility. Selecting No closes the utility; the applied settings are still in effect and can be accessed under the Manual option. However, they are not stored on the RX and on power cycle, the RX will revert to its previously stored settings.

Maintain Aspect Ratio and Stretch to Fit

Maintain Aspect Ratio (default) — This option maintains the incoming video's aspect ratio, but will scale the image until the display's video fills either the horizontal or vertical direction first. If the vertical direction is filled first, then the video will have pillar box black bars on the sides of the display (display on left in FIG. 33). If the horizontal direction is filled first, then the video will have letter box black bars on the top and bottom of the display.

Stretch to Fit — This option scales the video to fill the display in both the horizontal and vertical directions (display on right in FIG. 33). Black bars do not show when Stretch to Fit is selected.



FIG. 33 Example of displays set to Maintain Aspect Ratio and Stretch to Fit

Important: *If changing the Aspect Ratio setting to Stretch to Fit is the only change you need to make with the Scaler Override utility, select the option and click Save. Stretch to Fit will now persist to the Manual and Auto options.*

Adjusting Video with BoardConfig Software

Applicability

This chapter applies *only* to the DGX HD-15 TX module and covers manual adjustment for fine tuning an image. BoardConfig software is provided for manually adjusting the video image, if necessary.

Important: *Because the basic installation steps (see page 29) normally produce a satisfactory image, you will not need the information in this chapter unless the installation has special requirements.*

Installation Scenario 3 – Manual Image Adjustment and EDID Scaling

The flow chart in FIG. 34 shows the sequence when fine tuning of the image is desired.

- Complete the “Basic Installation” – page 29.
- Establish a virtual COM port – page 67.
- Use BoardConfig software (available at www.amx.com) – see page 47.

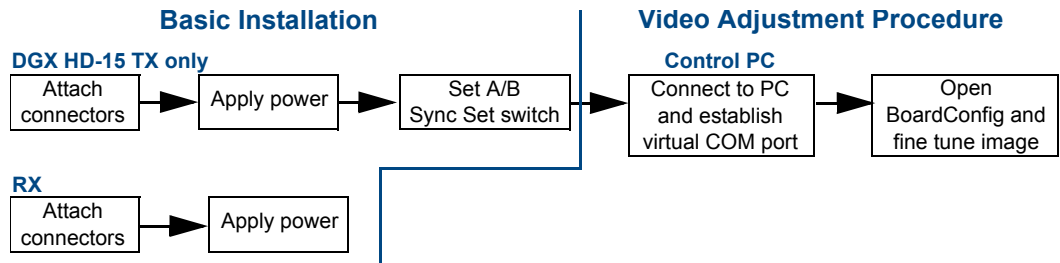


FIG. 34 Installation procedure – adjust image with BoardConfig

The input signal from the source to the TX may need to be adjusted to obtain an optimal display at the destination. Board configuration software, the DGX-HD15 Wizard, is provided at www.amx.com for this purpose.

System Requirements

Control PC

- ☐ Windows 2000® or Windows XP Professional®
- ☐ Minimum Hardware: 166 MHz, 128 MB RAM, 20 MB free disk space*, 800x600 display
- ☐ Recommended Hardware: 2.0 GHz, 512 MB RAM, 20 MB free disk space*, 1024x768 display
- ☐ USB port**

* The installation process requires 20 MB of disk space for the BoardConfig installer. Once installed, the tool requires 5 MB of disk space.

** For DGX Fiber modules, the USB port is used as a virtual COM port for serial communication.

The Control PC runs the DGX-HD15 Wizard software, which adjusts the source's video signal as it is viewed on the Destination Monitor. The TX is connected to a Control PC via the USB port. Once system setup is complete and no further changes to the display are necessary, you can disconnect the Control PC.

Source PC (or any other RGB or Y/Pb/Pr video source)

The TX is connected to the Source PC via an HD-15 cable. If the Source PC does *not* have a video card that supplies RGBHV, RGBS, RGsB, or Y/Pb/Pr video format signals at one of the resolution and refresh rates in the table below, BoardConfig software can be used. To determine the resolution and refresh rate for the Source PC, see page 47.

Resolution	Refresh Rate
640x480	60 Hz, 72 Hz, 75 Hz, 120 Hz
800x600	56 Hz, 60 Hz, 72 Hz, 75 Hz
1024x768	60 Hz, 70 Hz, 75 Hz, 87 Hz
1280x720	60 Hz
1280x800	60 Hz
1280x1024	60 Hz, 75 Hz
1600x1200	60 Hz
1680x1050	60 Hz
1920x1080	60 Hz
1920x1200	60 Hz (This is the preferred timing identified in the EDID.)

Important: If the device's EDID does not fall within the default resolution parameters provided (check the EDID timing specifications on page 20), see the "EDID Programmer" chapter on page 51 before adjusting the video with the DGX-HD15 Wizard.

AMX reserves the right to modify its products and their specifications without notice.

Destination Monitor

The Destination Monitor is connected to the HD-15 connector on the DGX HD-15 RX or the DVI connector on the DGX DVI RX. Adjustments made with the wizard are seen on the Destination Monitor.

Test Pattern Files

Test pattern files for specific resolutions for viewing when adjusting the display are provided at **www.amx.com** on the product's page. Test pattern files are opened* on the Source PC and subsequently display on the Destination Monitor.

* Adobe Acrobat Reader is required to view the test pattern .pdf files. Acrobat Reader is a free program available online at www.adobe.com.

Determining Resolution and Refresh Rate for Source PC

The instructions below assume that the basic installation has been completed and the DGX HD-15 TX has been connected to the Source PC. Before attempting to adjust the video display with the DGX-HD15 Wizard, verify the resolution and refresh rate on the Source PC using the following instructions.

To determine video card resolution/refresh settings on Windows® operating systems:

1. Minimize all applications on the Source PC.
2. Right click on the desktop.
3. Select Properties from the shortcut menu.
4. In the Display Properties dialog box, select the Settings tab.
5. Check the Screen resolution setting; write it down (e.g., 1280 by 1024 pixels).
6. Click Advanced.
7. Select the Monitor tab.
8. Check the Screen refresh rate (or frequency); write it down (e.g., 60 Hertz).
If the refresh rate setting is not located under the Monitor tab, try selecting the other available tabs.
9. Click Cancel on each dialog box to exit.

Adjusting the Video Image with the DGX-HD15 Wizard

Important: *This procedure works only on the DGX HD-15 TX module.*

The DGX-HD15 Wizard can be used for adjusting the video image for a DGX HD-15 TX module. This wizard displays embedded Help (information at the bottom of the screen) and also includes a standard Help file with detailed information.

Important: Do not change the video input while in the process of using the DGX-HD-15 Wizard.

Pre-Adjustment Tasks

Before starting the adjustment procedure, the following pre-adjustment tasks *must* be completed:

- ☐ If the system contains an RX — We recommend selecting the Bypass option on the RX (press the Scaling button once or twice until the Bypass LED illuminates solid green; return to the desired option when the video adjustments are complete).
- ☐ Connect the Control PC to the TX via the USB port (a virtual COM port *must* be established; see page 67). A USB mini-B cable, FG10-5965, is provided.
- ☐ Install the DGX-HD15 Wizard on the Control PC by running the BoardConfig.exe file from **www.amx.com**. We recommend uninstalling any versions of BoardConfig software prior to v1.4.0 first.
- ☐ Transfer the test pattern files from the Control PC to the Source PC.
- ☐ Determine the resolution and refresh rate of the Source PC (see instructions above).
- ☐ Place the Destination Monitor within view of the Control PC, so you can see the effect of the adjustments.

Adjustment Tips:

- Be sure the source device that is sending the signal to the Display Monitor (or device) has a sharp picture before you start.
- The Destination Monitor controls may also need adjusting during the video display adjustment procedure with the wizard.
- CRT monitors seem more sensitive to losing sync when changing vertical position.
- “ReSync Monitor” under the Options menu can be useful when closing in on the final settings. Sometimes re-syncing will clear up small irregularities in the display.
- Watch the sync / no sync light on the Destination Monitor. Dramatic movements in a setting can cause the monitor to go blank temporarily because it loses sync. As long as the adjustments are in the acceptable range for the Destination Monitor, the sync light will shine constant a few seconds before the image reappears. If the sync light does not shine constant, return to the previous setting.

Note: The TX automatically goes into Manual mode when adjustments are made in BoardConfig.

To adjust the video display using the DGX-HD15 Wizard:

1. Complete the “Pre-Adjustment Tasks” list on the previous page.
2. Open the DGX-HD15 Wizard.

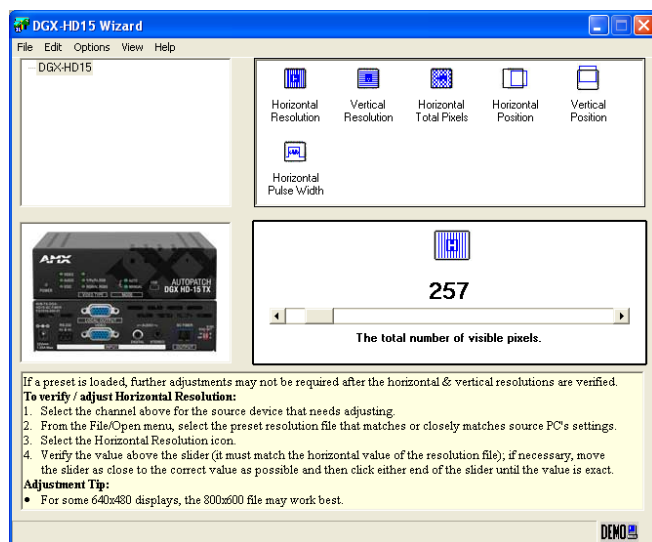


FIG. 35 DGX-HD15 Wizard

3. Use the File\Open menu and select the supplied resolution file (<installation folder>\presets\defaults\) that matches or closely matches the Source PC's settings. (The .xml file name consists of the resolution followed by the refresh rate. If not indicated, the refresh rate is the default of 60 Hz).
4. Select the Horizontal Resolution icon. Verify that the value above the scroll bar matches the horizontal value of the resolution. If necessary, move the scroll bar as close as possible to the correct value. Then click either scroll arrow until the value is exact. For example, for a resolution of 1280x960 move the scroll bar as close to 1280 as possible; then click a scroll arrow until the value is exactly 1280.
5. Select the Vertical Resolution icon and repeat the previous step for the vertical value of the resolution.

Important: After the resolution values have been verified, further adjustments may not be required. If this is the case, go to Step 9 to complete the procedure.

6. On the Source PC, open the test pattern PDF that matches the resolution setting.
If an image does not appear, change the Source PC's video card settings to match one of the supported resolutions (see the "EDID Specifications" table on page 20).
7. Select the Horizontal Total Pixels icon. Adjust one step at a time (click on either scroll arrow), watching the vertical noise lines (bands) on the Destination Monitor mover farther apart. Stop when the bands disappear.
8. If needed, adjust the rest of the icons keeping the following tips in mind:
 - Horizontal Position
 - CRT screens may need to use the screen controls to fine tune for size and position.
 - If not working, try adjusting Horizontal Pulse Width first and then retry.
 - Vertical Position
 - CRT screens will often go blank for a moment on each adjustment.
 - To quickly make large adjustments to CRT screens, use the Page Up / Page Down keys.
 - Horizontal Pulse Width
 - The default normally works well for higher resolutions.
 - For lower resolutions that do not fit the display well, try increasing the value.
 - Reduced blanking resolutions (>1600x1200) require a small value.

Tip: Use the Mode button to toggle between Auto and Manual to compare the resulting video displays.

9. From the Options menu, select Save to System (to restore settings upon power up).
The Save to System dialog box opens.
10. Click OK.
The custom BoardConfig settings are now part of Auto mode and will be used any time that customized format is detected.
11. Recommended – From the File menu, select Save As to save a backup file to the Control PC.
Enter a file name, and click Save.
12. Close BoardConfig and toggle the Mode button to Auto.
13. If the system has an RX – If the RX was set to Bypass as part of the pre-adjustment tasks on page 47, press and release the Scaler button to select the desired option.
14. Disconnect the Control PC when finished.

Note: If the settings are customized again and saved, the new custom settings will overwrite the current custom settings. To restore the default settings, see page 71.

EDID Programmer

Applicability

This chapter applies to both the DGX HD-15 TX and the DGX DVI TX modules and covers reading the EDID from the destination device and writing the EDID to the TX.

Important: *Because the basic installation steps normally produce a satisfactory image, you will not need the information in this chapter unless the installation has special requirements or in some cases when a DGX TX is used in conjunction with a DGX matrix switcher.*

EDID Programmer software is provided for in-field re-programming of the EDID EEPROM chips on the DGX TX module if necessary.

Installation Scenario 4 – Automatic Image Adjustment Using Custom EDID

The flow chart in FIG. 36 shows the sequence when a custom EDID is read from the destination device and written to a DGX TX.

- To complete the “Basic Installation,” see page 29.
- To install and use the EDID Programmer (available at www.amx.com), see page 53.

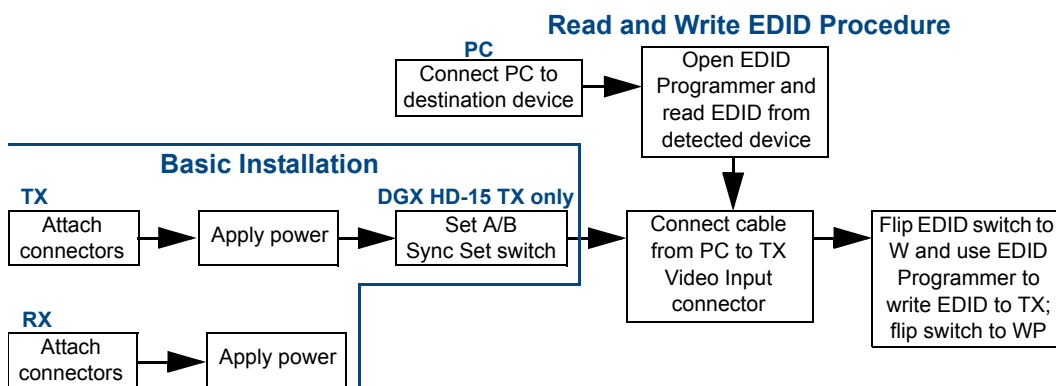


FIG. 36 Installation procedure – Read and Write EDID using EDID Programmer

EDID Overview

EDID (Extended Display Identification Data) is a data structure established by the Video Electronics Standards Association (VESA) to enable plug-and-play support by enabling easy configuration of a computer’s graphics subsystem based on the capabilities of the attached display device.

EDID information includes items such as the following:

- Manufacturer’s name
- Product type
- Supported video resolutions and refresh rates
- Color space and filter chromaticity
- Detailed timings

When a computer is directly connected to a display device, it can use the display device’s EDID information to determine an initial compatible video signal to send. With the computer’s display controls, the user can modify this selection to another compatible signal based on the provided EDID information.

DGX TX Modules and EDID

As long as the source signal being transmitted is supported by the display device, the result should be a good image on the display. If the source signal being transmitted is not supported by the display device, the result will be either a badly distorted image or no image at all.

To address these issues, the DGX TX comes with an EDID EEPROM chip for the input connector, which has been pre-loaded with an AMX AutoPatch EDID set. This EDID set consists of 24 of the most common EDID settings in use today, including all VESA Established Timings encompassing 8 resolutions at a variety of refresh rates and 8 additional Standard Timings encompassing 8 resolutions and refresh rate combinations (for timing details, see page 20). In almost all cases, the DGX TX can be used straight out of the box with no adjustments (see “Determining the Need for EDID Programming” on page 52).

The EDID Programmer software has been provided for cases where additional in-field re-programming of the EDID chip is needed. EDID Programmer software can be used for the following:

- Reading and saving EDID data from a device
- Writing EDID data to a DGX TX input connector’s associated EDID EEPROM

Note: Any analysis or editing of the EDID data necessary to support the equipment specific to your installation will need to be done separately prior to using the EDID Programmer. A variety of freeware tools can be found on the web to help with these tasks.

The remaining sections provide information on:

- Determining the need for EDID programming
- Installing the EDID Programmer
- Reading and saving EDID data from a destination device
- Writing data to the DGX TX

Determining the Need for EDID Programming

Ideally the EDID analysis will have been completed during installation specification. If this was not possible but the system’s devices are now available, the most effective way to proceed is to test if the signal from the source device can be transmitted through the DGX TX and RX to the destination device. If the signal can be routed (i.e., the image is present), then EDID programming is *not* necessary.

To determine if EDID programming is necessary:

1. Install the DGX TX and RX according to the installation procedure starting on page 29.*
2. Check the destination display to verify that the picture is present.
If the picture is not present, see “Troubleshooting” on page 57 before proceeding.

Note: If the destination does not display a picture, analysis or editing of the EDID data may be necessary prior to using the EDID Programmer. A variety of freeware tools can be found on the web to help with these tasks.

* If a DGX TX and a DGX RX are used in conjunction with a DGX matrix switcher, install the modules and the matrix switcher and then route the video signal to verify that the picture is present on the destination(s). (The system could also include just a TX or an RX depending on the boards in the matrix switcher; for setup options, see page 25.)

Installing the EDID Programmer

PC Requirements (EDID Programmer v1.2.0)

- ☐ Windows 2000® or Windows XP Professional®
- ☐ Minimum Hardware: 166 MHz, 128 MB RAM, 20 MB of free disk space*, 800x600 display, video card with dual outputs**
- ☐ Recommended Hardware: 2.0 GHz, 512 MB RAM
- ☐ Serial port

* The installation process requires 20 MB of disk space for the EDID Programmer installer. Once installed, the EDID Programmer requires 5 MB of disk space.

** We strongly urge the user not to use video cards with DMS-59 connectors. Video cards with DMS-59 connectors have been shown to fail consistently and, in the worst case, can corrupt an EDID data file. A laptop PC with a VGA or DVI out is a good solution. Cards with 2 DVI connectors, 2 VGA connectors, or 1 DVI and 1 VGA connector are also acceptable.

To install EDID Programmer software:

1. Locate and open the installer at **www.amx.com**.
2. Follow the directions in the wizard.

Reading and Saving EDID Data from the Destination Device

Tip: The *Save* button in the EDID Programmer can be used to save the EDID information as an *.edid* file, which can be opened as a text file (click the *Open* button) and edited or opened and written to the Video input on the TX (click the *Write* button).

The instructions on page 54 cover the situation in which the EDID Programmer is used to read the EDID information from a destination device in the installation using a DVI connector (an HD-15 connector can also be used). Additional information for using DVI cable is provided below.

Using Cable Adapters

If your laptop has an HD-15 (VGA) port, you can use a DVI-to-VGA cable to connect the laptop's HD-15 video port to a DVI cable attached to a destination device's DVI port. Alternatively, use the following combination of adapters with a DVI-D cable to connect the laptop to the destination device:

 



FIG. 37 Connecting an HD-15 (VGA) port to a DVI port

Note: The setup of adapters and DVI-D cable in FIG. 37 passes EDID information but does not pass video signals.

To read and save EDID data from the destination:

1. On the PC, open the EDID Programmer.

Communication menu – use to select PC serial port or change baud rate

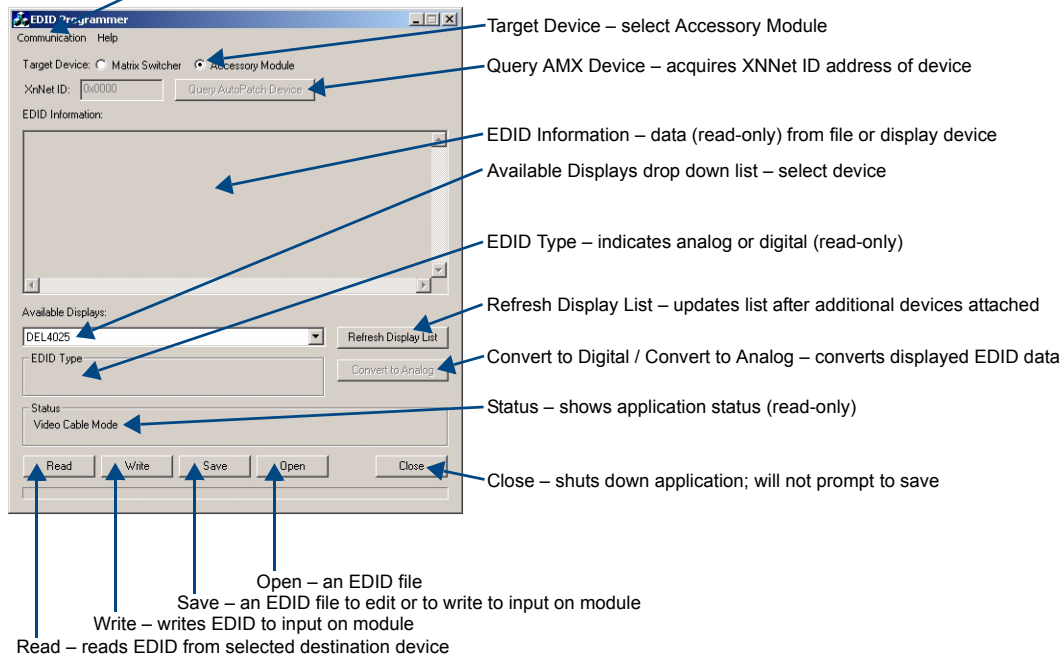

2. Connect a DVI cable to the PC using the PC's spare monitor port (for cable options for this step, see "Using Cable Adapters" on page 53).
3. Connect the open end of the DVI video cable to the destination device (typically a monitor) from which the EDID information needs to be read.
4. Click the Refresh Display List button to update the Available Displays drop down list.
5. From the Available Displays drop down list, select the destination device from which you need to read the EDID.
6. Click the Read button to read the EDID information. The results display in the read-only area.
7. Click the Save button (select location, enter file name, and click Save).
Leave the EDID Programmer open for the instructions on writing the EDID to the TX on the next page.
8. Disconnect the DVI cable from the PC and from the destination device.

Writing EDID Data to the TX

DGX HD-15 TX

The instructions that follow cover the situation in which the EDID Programmer is used to write EDID information to the EDID chip for the Video Input connector on a previously unprogrammed DGX HD-15 TX using an HD-15 cable.

DGX DVI TX

The instructions that follow can be adapted to cover the situation in which the EDID Programmer is used to write EDID information to the EDID chip for the Video Input connector on a previously unprogrammed DGX DVI TX. Use a DVI cable instead of an HD-15 cable. A DVI to HD-15 adapter may be necessary depending on the PC (see “Using Cable Adapters” on page 53).

Note: If the system contains an RX, the RX does not need to be connected, powered up or placed in a specific Scaling option during the following process.

To write EDID data to the EDID chip on the TX:

1. Connect the HD-15 video cable (if necessary, use a cable adapter; see page 53) to the PC using the PC's spare monitor port.
2. Connect the open end of the HD-15 cable to the Video Input connector (HD-15) on the TX.
3. Apply power to the TX.
4. Flip the TX EDID switch up to the W (write enable) setting. (The EDID LED on the front of the TX illuminates solid green.)

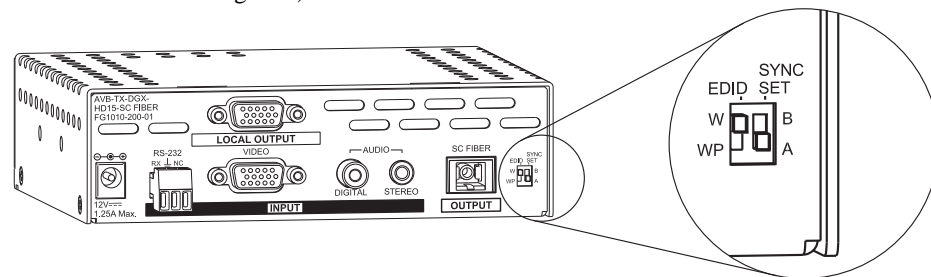


FIG. 38 Flip EDID switch to W

5. If not already open, open the EDID Programmer on the PC (for an illustration of the interface, see page 54).
6. For Target Device, select the Accessory Module option.
7. Save the TX's EDID default as a backup (assumes the TX has no previous EDID programming).
 - Click the Refresh Display List button
 - Select the device.
 - Click the Read button.
 - Click the Save button (select location, enter file name, and click Save).
8. Click the Open button to select the .edid file to be written to the Video Input connector on the TX.
9. Click the Write button to write the EDID information to the Video Input connector.
10. Flip the TX EDID switch down to the WP (write protect) setting. (The EDID LED on the front of the TX turns off.)
11. Disconnect the HD-15 cable from the PC and from the TX.

Note: Depending on the equipment used, conversion of the data from analog to digital or from digital to analog may be necessary (click the conversion button before writing the EDID to the input).

Troubleshooting

DGX TX and DGX RX Troubleshooting

The troubleshooting suggestions/strategies provided apply to both the TX and RX modules, unless otherwise noted.

Important: *The Power LED can illuminate solid amber at any time, not just at power up. If this occurs, check the error code (see page 62) and contact technical support (page 64).*

Four potential types of problems are covered in full-page flow charts on the following pages.

- Flow Chart 1: Power up
- Flow Chart 2: Video or Audio Signal Not Present (LEDs not illuminated)
- Flow Chart 3: No Video Image (with Video LED illuminated)
- Flow Chart 4: No Audio

This chapter also has sections on:

- Error code reporting – page 62
- Live status update messages – page 63
- Non-DGX matrix switcher routing behavior – page 64
- Technical support contact information – page 64

Tip: *When modules are used in conjunction with a DGX matrix switcher, we also suggest checking the troubleshooting information in the matrix switcher's "Instruction Manual."*


Flow Chart 1: Power Up

What to Expect for Normal Power Up Operation

Upon power up, the Power indicator LED on the front of the TX and the RX illuminates solid red for a short time while the module is performing power up testing. The solid red LED is normal at power up and indicates that power up is in process. Once the power up testing is complete, the LED illuminates solid green. (When a USB cable is connected, the Power LED blinks red while communication is being established with the PC (see page 67).

Important: The Power LED can illuminate solid amber at any time, not just at power up. If this occurs, check the error code (see page 62) and contact technical support (page 64).

Troubleshooting Flow Chart – When Power Up Problems Occur

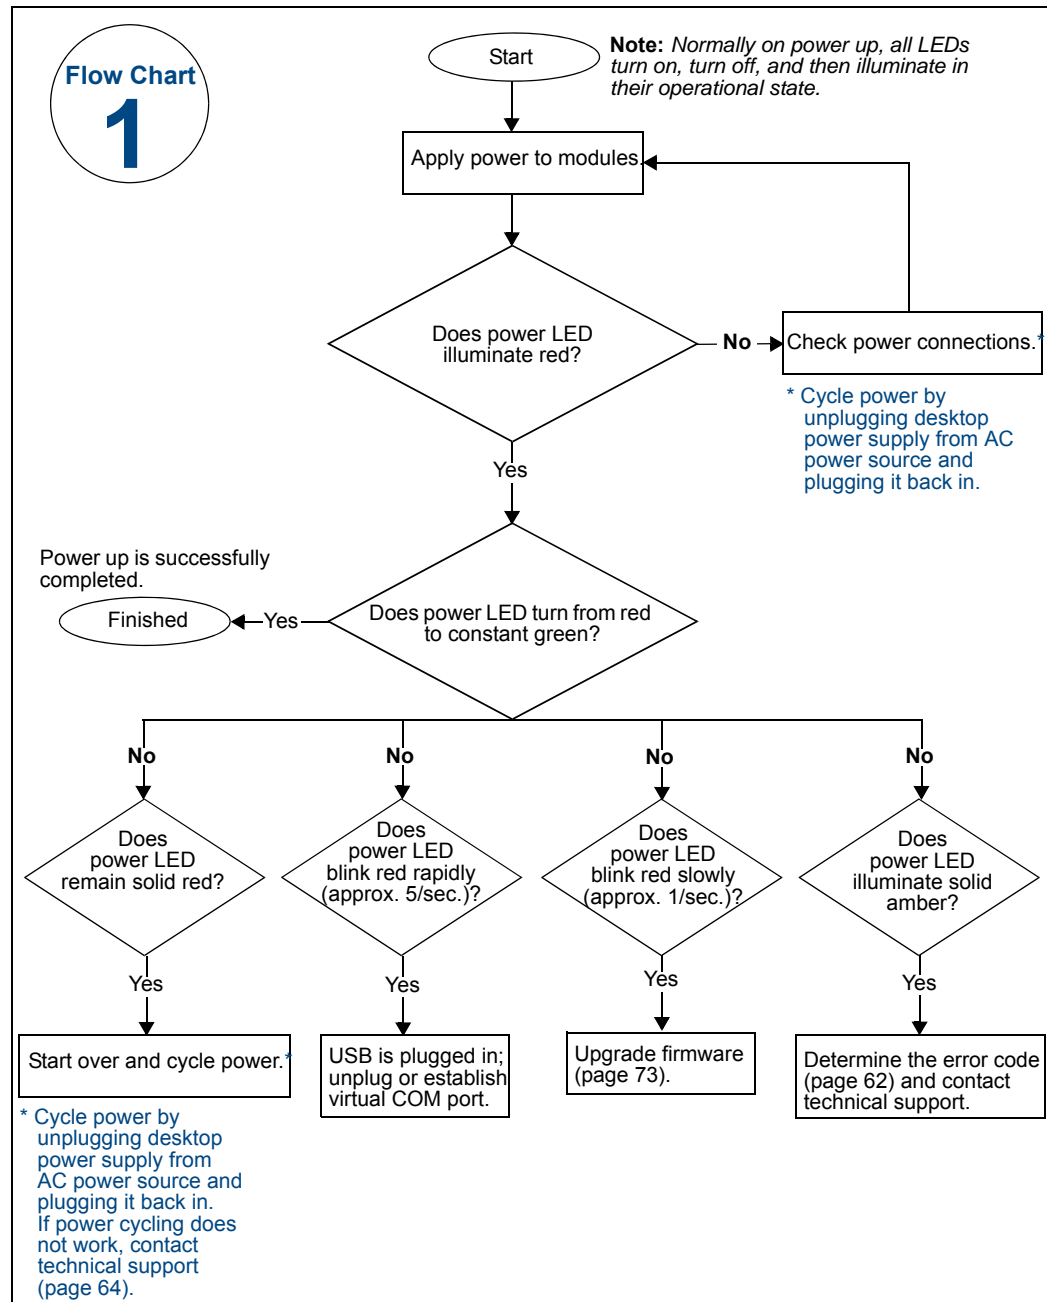


Flow Chart 2: Video or Audio Signal Not Present (LEDs not illuminated)

What to Expect when Video and Audio Signals are Transmitted Normally

The normal display for the Video and Audio LEDs when the signals are present is: the LEDs illuminate during power up, turn off, and then illuminate again.

Note: When Audio is present but the Audio LED is off (or flickers on and off), the audio level is below the recommended threshold (see the optimal audio operating range in the Audio Specifications table on page 21).

Troubleshooting Flow Chart – When Video and/or Audio LEDs Do Not Illuminate

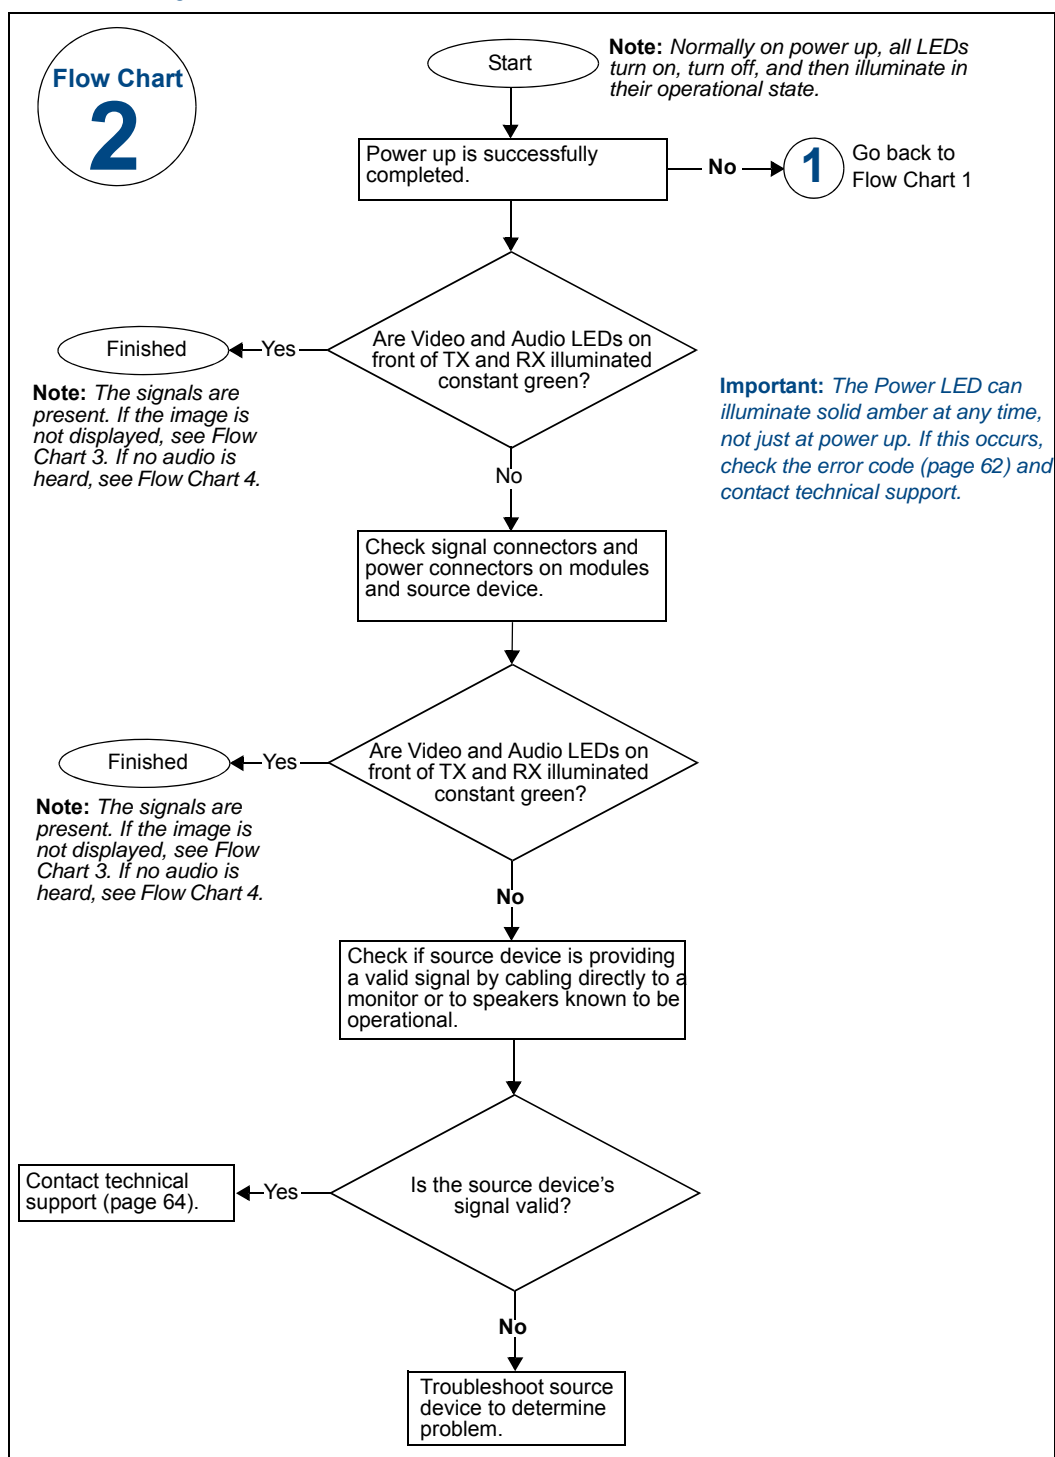


Flow Chart 3: No Video Image (with Video LED illuminated on the TX)

What to Expect with Normal Video Display

On power up, the Video LED illuminates, turns off, and then illuminates indicating that the video signal is present. On both DGX RX modules, the LED sequence for the Scaling LEDs is: all illuminate, all turn off, and then the Auto LED illuminates as the video displays at the destination (assumes power up is in Auto).

Troubleshooting Flow Chart – When Video Does Not Display

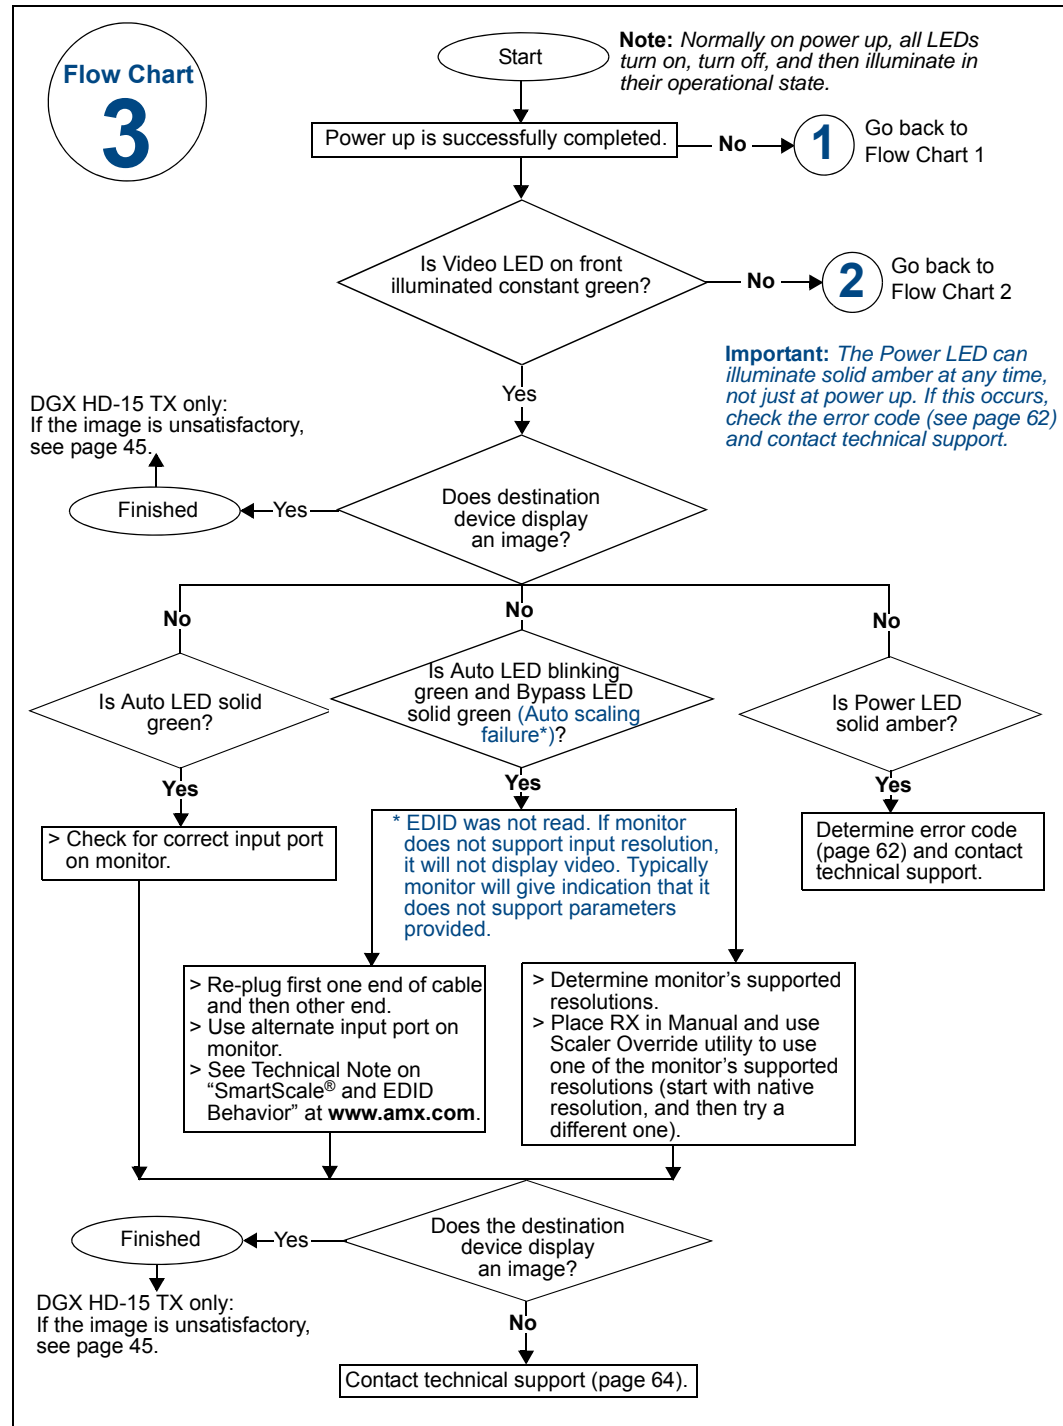


Flow Chart 4: No Audio

What to Expect with Normal Audio

The normal display for the Audio LED (and Video LED) at power up when an audio signal is present is: the LED illuminates, turns off, and then illuminates again as the audio is heard at the destination.

Important: Video must be present or audio cannot be transmitted.

Troubleshooting Flow Chart – When Audio Is Not Heard at Destination

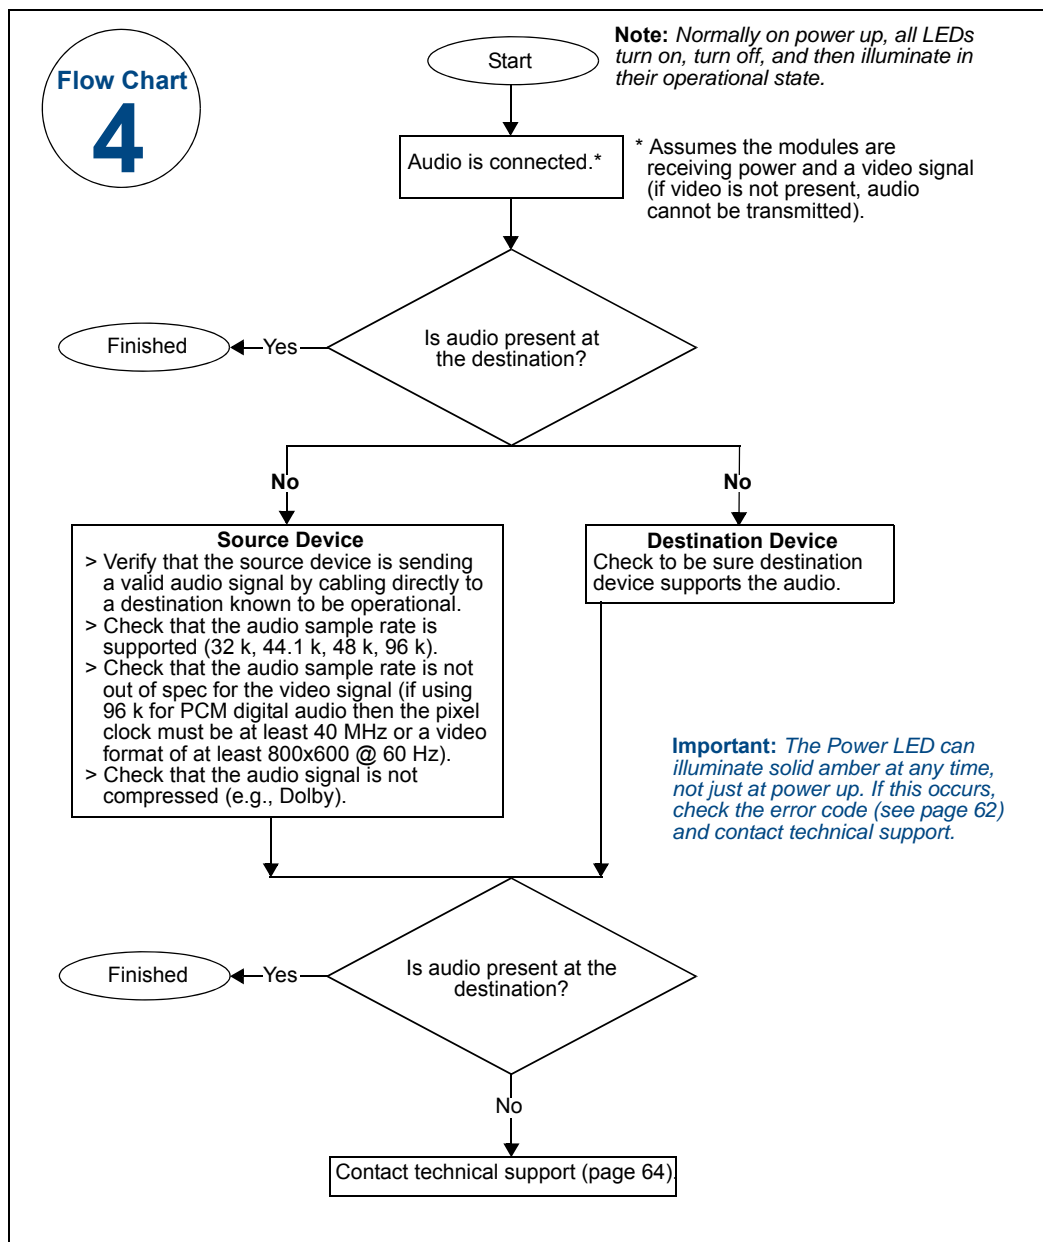

Error Code Reporting (Power LED is Solid Amber)

Error code reporting is available via a terminal emulation program (e.g., TeraTerm, PuTTY, or HyperTerminal). If the Power LED illuminates solid amber, we recommend determining the error code before contacting technical support.

PC Requirements

- ☐ Windows XP Professional® or Windows 2000®
- ☐ Terminal emulation program
- ☐ USB port

To determine the error code (error code reporting):

1. Connect the module to a PC via the USB port.
2. Establish a virtual COM port (for requirements and instructions, see page 67).
3. Open a terminal emulation program (e.g., TeraTerm, PuTTY, or HyperTerminal).
An error code is reported within 5 seconds.
4. Record the error code and try the recommended course of action in the table below.
If the course of action does not correct the problem, contact technical support (see page 64).

To clear all errors in the error message queue:

1. Enter the BCS command: `~cle!`
Or
Power cycle the module by unplugging the desktop power supply from the power source and plugging it back in.

Error Codes

If the recommended course of action for the specific error code in the table below does not resolve the problem, you will need to contact technical support (see page 64).

TX Error Codes	Error Description	Recommended Course of Action
E01	I2C Write failure	Cycle power for the TX.
E02	I2C Read failure	Cycle power for the TX.
E03	I2C Dev Init failure	Cycle power for the TX.
E08	Incompatible Firmware / Hardware failure	Use the splash screen to check that the firmware/hardware versions match the ones in the upgrade kit. Upgrade accordingly.

RX Error Codes	Error Description	Recommended Course of Action
E01	I2C Write failure	Cycle power for the RX.
E02	I2C Read failure	Cycle power for the RX.
E04	SPI Bus Comm failure	Cycle power for the RX.
E05	EDID Read failure	Cycle power on the display monitor; let the RX attempt to read the EDID with the monitor power down. If unsuccessful, try using an alternate port on the monitor.
E06	Scaler FPGA NConf failure	Cycle power for the RX at the AC cord.
E08	Incompatible Firmware/Hardware failure	Use the splash screen to check that the firmware/hardware versions match the ones in the upgrade kit. Upgrade accordingly.

Live Status Update Messages

Live status update messages will appear at times in a terminal emulation program (e.g., TeraTerm, PuTTY, or HyperTerminal) when a module is connected to a PC via the USB port (see page 67). These messages can be helpful for technical support when assessing the state of the system.

Certain activity/conditions in the system can trigger live status update messages. The majority of the messages simply verify normal responses/changes in the state of the system and are not a cause for concern. However, if you are having problems, have tried the strategies in the Troubleshooting Flow Charts, and reached the point where you need to contact technical support, technical support may ask you to take certain actions with the system and provide them with the resulting live status update messages.

Note: *None of the live status update messages have error codes that are directly associated with them.*

Example of a Typical Live Status Update Message

The following example is taken from a DGX HD-15 TX Module when a valid video signal is applied and the system is responding correctly.

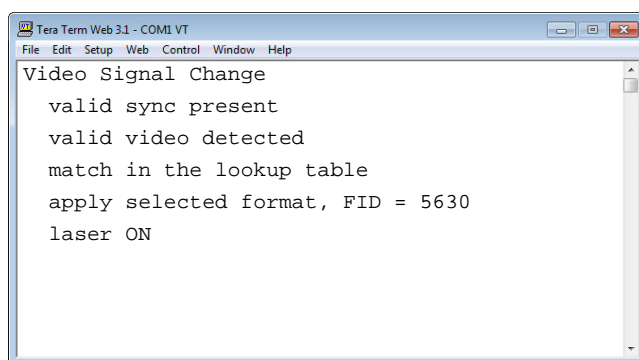


FIG. 39 Example of live status update message on DGX HD-15 TX Module

Non-DGX Matrix Switcher Routing Behavior

Corrupted or Lost RS-232 Data

- The RS-232 connection on the modules requires management of the RS-232 data line in relation to switching operations. In an upstream matrix switching scenario, we recommend that RS-232 control commands (via the DGX RS-232 data connection) are not sent immediately prior, during, or subsequent to a matrix switching command. It is possible for the RS-232 data to be corrupted or lost as the video (or audio) signal is removed and then restored by the matrix switcher. The corrupted data could be misinterpreted by the destination equipment.

Non-DGX Matrix Switcher between DGX TX and RX Pairs (FIG. 12 on page 24)

- For best results when using a non-DGX matrix switcher between pairs of DGX TX and DGX RX modules, place the upstream DGX RX module in Bypass mode. This will maintain the video resolution/format that is fed to the DGX TX module after the switch rather than trying to scale it to the matrix switcher's preferred EDID timing.
- When using a matrix switcher with a DVI board between pairs of DGX DVI TX and RX modules, cycling power to the RX upstream from a DVI input on the switcher can cause an image shift to the left. To resolve this issue, connect the DVI cable on the downstream DGX DVI RX or cycle through the display's source options.

Non-DGX Matrix Switcher with DVI Output and Downstream DGX TX

- When a DVI output is connected to a DGX DVI TX, switching input video formats can cause the new content to display briefly at the new resolution, to blink, then finally to stabilize on the new content. This behavior only occurs on some monitors.

Non-DGX Matrix Switcher Routing Digital Audio Breakaway

- When using an upstream non-DGX matrix switcher for digital audio breakaway (especially on different digital formats), control operations can cause small audio "pops" or "crackles" on both the analog and digital outputs of the DGX RX.

Technical Support

Before contacting technical support with a question, please consult this manual. If you still have questions, contact your AMX representative or technical support. Have the serial numbers for the modules and the splash screen information ready.

Note: *You may also be asked to take certain actions with the system and provide the resulting live status update messages that appear in your terminal emulation program (e.g., TeraTerm, PuTTY, or HyperTerminal). For more information, see page 63.*

Serial Numbers

We recommend recording the serial numbers in an easily accessible location.

Splash Screen Information

A terminal emulation program (e.g., TeraTerm, PuTTY, or HyperTerminal) can be used to display information, including the firmware version, on a module.

To obtain the splash screen information:

1. Open a terminal emulation program on the PC.
2. Connect the PC to the TX or the RX via the USB mini-B port (a virtual COM port *must* be established; see page 67).

3. Enter `~scr!`

Splash screen information appears (see examples in FIG. 40).

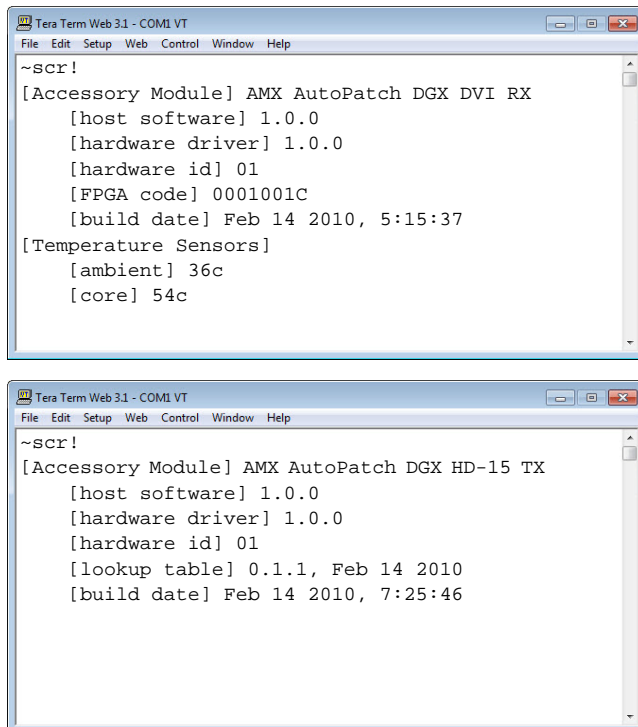


FIG. 40 Splash screen information for a DGX DVI RX and a DGX HD-15 TX

4. Record the information.

5. Repeat Steps 2 through 4 for any other modules in the system.

Note: AMX reserves the right to add to the contents of the splash screen at any time, without notice.

AMX Contact Information

- 3000 Research Drive, Richardson, TX 75082
- 800.222.0193
- 469.624.8000
- Fax 469.624.7153
- Technical Support 800.932.6993
- www.amx.com

Appendix A – Creating a Virtual COM Port

The USB (mini-B) port on the DGX TX and RX modules can be used to create a virtual COM port on the PC. Once a virtual COM port is created, the USB port acts the same as a standard serial connection. The virtual COM ports on the modules can be used with the programs/utilities listed in the table below.

Program/Utility	USB Port	Function	PC Requirements
Scaler Override	RX	Set custom resolution for destination device	See page 38
BoardConfig	HD-15 TX only	Adjust video signal	See page 46
Terminal Emulation	TX and RX	Live status updates and error code reporting	See page 62 and page 63
Firmware Upgrade	TX and RX	Upgrade the firmware	See page 73

Establishing a Virtual COM Port

The use of USB hubs with DGX Fiber modules is *not* recommended. AMX recommends a direct USB connection between a DGX Fiber module and the computer's USB connector.

Important: *You must have adequate rights to install USB device drivers to the PC. Before proceeding, check with your System Administrator to be sure you have the required access.*

When establishing a new connection, complete all of the steps in the instructions starting below.

Or

When reconnecting after previously establishing a USB connection, complete Steps 1 and 2 below and then set up and run the desired software program or utility (see the options in the table above).

To attach PC to USB port on TX or RX and establish a virtual COM port:

1. Download the APBridge.inf file (Go to www.amx.com and enter APBridge in the Search AMX.com field in the upper right-hand corner of the site). No user permissions are required for this download.
 2. Apply power to the module (see page 34).
 3. Using a USB mini-B cable (FG10-5965 provided) connect the module to a PC that is running Windows (FIG. 41).*
- New connection: Power LED blinks red rapidly until the process is completed successfully.
Previous connection: Power LED blinks red rapidly for a few seconds while connection is made.

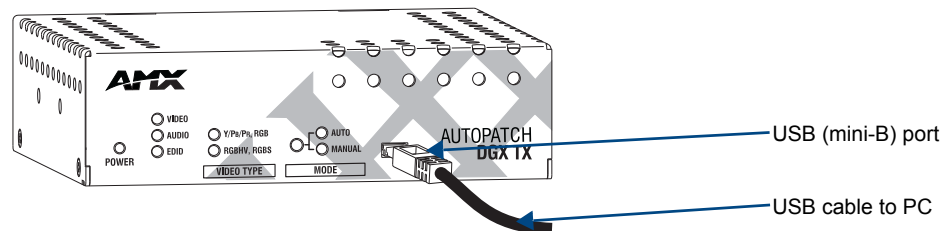


FIG. 41 Connect USB cable to PC and to module (DGX DVI TX shown)

* When the USB cable is inserted on an RX Module, the RX's blower will toggle to either a high (full on) or low (completely off) state and remain in that state until the USB cable is removed. Once the cable is removed, the blower will return to its normal operational state.


4. If establishing a new connection, complete the remaining steps.

Or


If reconnecting after previously establishing a USB connection, navigate to Start/Control Panel/Device Manager icon, then go to Step 8 (on page 69) to identify the virtual COM port before attempting to run the desired software.

Note: The following dialog boxes appear only during the initial USB connection. Once the virtual COM port has been assigned to the module, the dialog boxes do not appear again. If they do appear, you have connected the USB plug to a different COM port on the PC than the initial one – either switch to the initial COM port or establish a virtual COM port for the new port.

The Driver Software Installation window appears. Click Close.

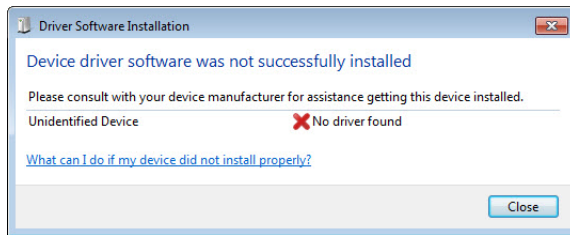


5. Open the Device Manager window (Start/Control Panel/Device Manager icon), open Other devices and right-click on the Unknown device icon. Select Properties from the menu items. (The Device Manager may have a different location depending on the operating system and theme selected.)

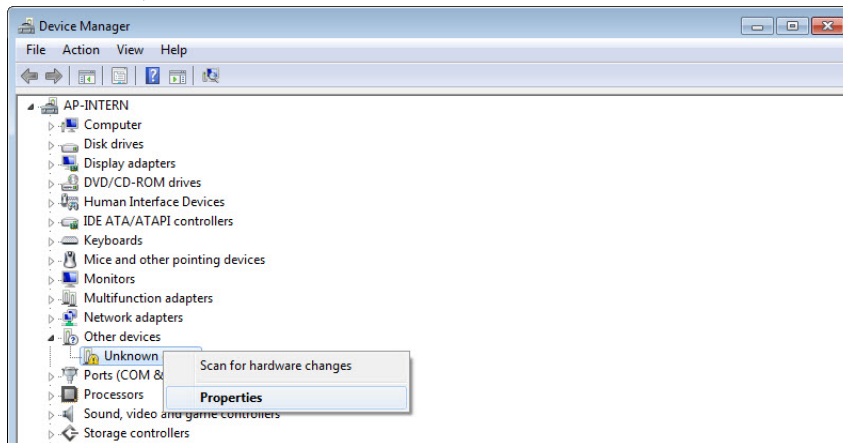


The Unknown device Properties window opens.


6. In the Driver tab, select the Update Driver button.

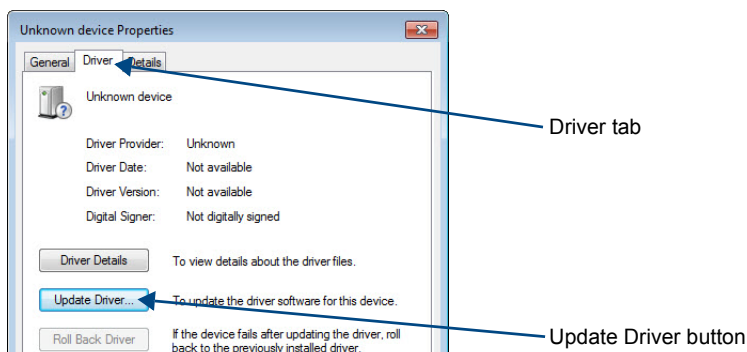

7. Browse for the APBridge.inf file and select the Next button.

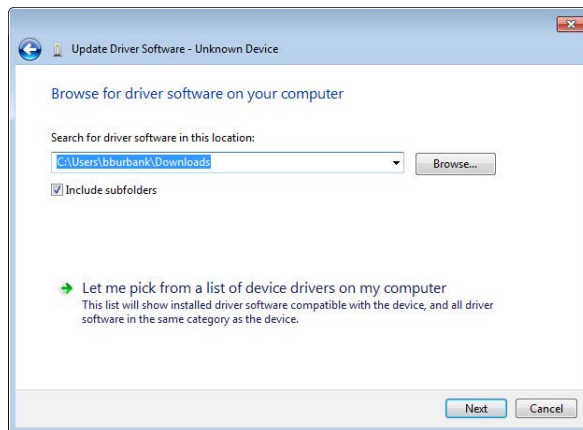


Another Update Driver Software window appears. Click Close.

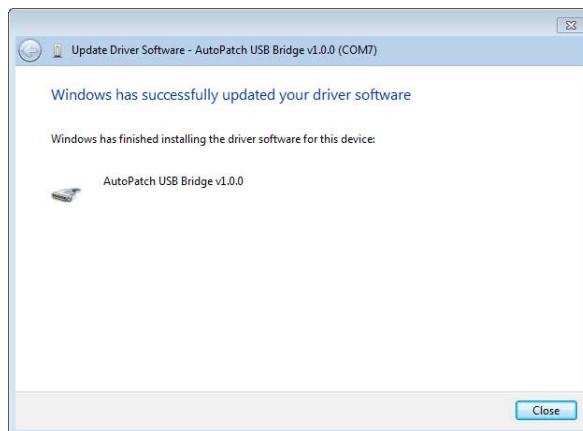


Note: A Windows Security window may open and ask if you wish to install a driver with an unverified publisher. Select the “Install this driver software anyway” option.

8. If the AutoPatch USB Bridge port specifies the COM number, go to Step 10.

If the port does not specify a COM number, right-click AutoPatch USB Bridge, select Properties, and complete all remaining steps.

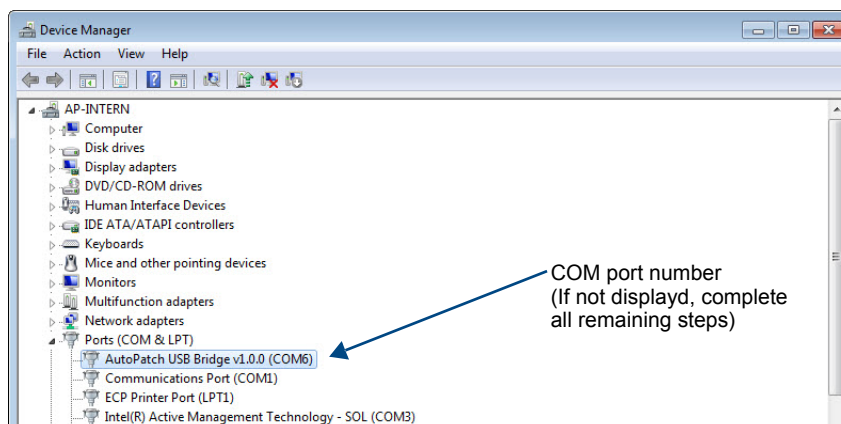

9. In the AutoPatch USB Bridge Properties dialog box, select the General tab.

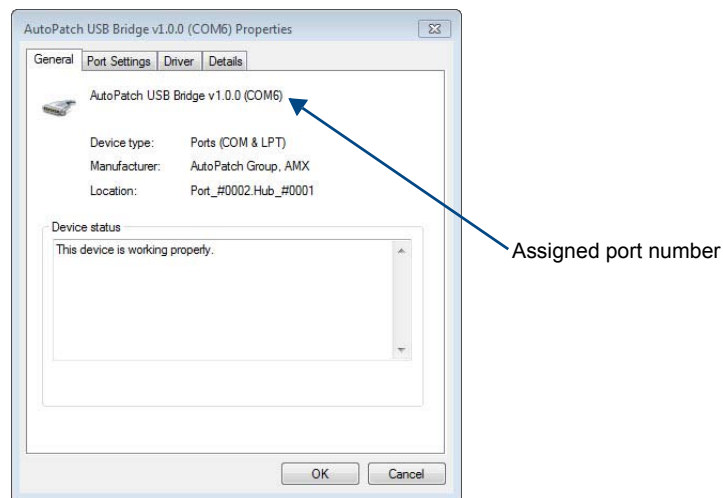

10. Make note of the COM port number assigned to the AutoPatch USB Bridge. This port number must be entered when setting a connection in a software program or a terminal emulation program. The PC will always associate a specific USB connector with the assigned virtual COM port. The PC will not recognize the module if you disconnect and reconnect using a different COM port on the PC. However, it will attempt to install a new virtual COM port using the new port. If completed, the new port will be assigned a different COM number.

Important: You must identify the virtual COM port assigned to the USB connector to enable communication between the Control PC and the module.

11. Set up and run the desired application:

- Scaler Override utility – page 38
- BoardConfig software – page 45
- Terminal emulation program (error code reporting and live status updates) – page 62 and page 63
- FW (Firmware) Upgrade Tool – page 73

Important: When a PC application has established an active connection (virtual COM port) with the module and then power is cycled on the module, the connection must be reestablished. (1) Remove the USB cable, (2) close the software application in use, (3) reconnect the USB cable to the same USB connector on the PC that was used previously, and (4) reopen the software.

Appendix B – Restoring Default Settings

This appendix covers the following:

- Restoring the factory default settings on the DGX HD-15 TX module
- Restoring the factory default settings on the DGX HD-15 RX or DGX DVI RX module

TX (DGX HD-15 TX only) – Restoring the Factory Default Settings

To restore the factory default settings to the TX:

1. If the TX is powered, unplug its power connector.
2. Press and hold down the Mode button; apply power to the TX; continue to hold down the Mode button.
The Power LED blinks red. All other LEDs remain off.
3. When the Power LED illuminates solid green, release the Mode button.
The factory default settings are restored.

RX – Restoring the Factory Default Settings

To restore the factory default settings to the RX:

1. If the RX is powered, unplug its power connector.
2. Press and hold down the Scaling button; apply power to the RX; continue to hold down the Scaling button.
The Power LED blinks red. All other LEDs remain off.
3. When the Power LED illuminates solid green, release the Scaling button.
The factory default settings are restored.

Note: Entering the reboot command (`~def!`) in a terminal emulation program will restore a module to its “last saved” settings.

Appendix C – Upgrading the Firmware

The firmware on the TX and RX can be upgraded in the field using the Firmware Upgrade Tool v1.0.0 found online at www.amx.com/techcenter/AutoPatchTools.asp. Laser calibration is retained across firmware upgrades.

Important: *You must have adequate rights to install the Firmware Upgrade Tool. Before proceeding, check with your System Administrator to be sure you have the required access.*

If you need to update the firmware, contact technical support for the upgrade file (see page 64).

PC Requirements

- ☐ Control PC
- ☐ Windows XP Professional®
- ☐ Minimum Hardware: 166 MHz, 128 MB RAM, 20 MB free disk space*, 800x600 display
- ☐ Recommended Hardware: 2.0 GHz, 512 MB RAM
- ☐ USB port**

* The installation process requires 20 MB of disk space for the Firmware Upgrade Tool installer. Once installed, the tool requires 5 MB of disk space.

** For DGX Fiber modules, the USB port is used as a virtual COM port for serial communication.



Caution: *Upgrading the firmware is a serious action in that if the upgrade fails, it can leave the system completely non-operational.*

Upgrade Information

Blinking Red Power LED

Upon power up, the Power indicator LED on the front of the TX and the RX illuminates solid red for a short time while the module is performing power up testing. The solid red LED is normal at power up and indicates that power up testing is in process.

If upon power up the Power LED starts blinking red, the application code is incorrect (or has failed), indicating that the module is in a state where it is ready to receive a firmware update file. Follow the instructions on page 74 to update the file. Once the download is completed, the module needs to be power cycled before it enters the normal power up procedure with normal Power indicator LEDs (see page 31). The TX or RX can be power cycled either by unplugging the desktop power supply from the AC power source and plugging it back in or by selecting Reboot When Done in the Firmware Upgrade Tool.

In the Event of Power Loss During an Upgrade

If power loss occurs *before* any firmware information has been transferred – when power is restored, the module will remain operational using the original firmware.

If power loss occurs *after* some of the firmware information has been transferred *but before* the transfer is complete – when power is restored, the module will time out and will not operate until a successful upgrade takes place.



Caution: *If the application signals a failure, you must immediately attempt to upgrade the firmware again, as the module is in an unknown state and cannot be guaranteed to be operational.*

Before Upgrading the Firmware:

- ☐ Establish a virtual COM port (see page 67).
- ☐ Connect the module to the PC via the USB port (cable FG10-5965 provided).
- ☐ Download the Firmware Upgrade Tool (at **www.amx.com**, search for “Firmware Upgrade Tool”). Download does not require user permissions.
- ☐ Download the most recent Firmware Field Upgrade Package (at **www.amx.com**, on the product’s page, on the right side under Firmware Files). Download requires user permissions.




Caution: Do not attempt to upgrade the firmware during runtime.

The system will be non-operational during the upgrade procedure below.

To upgrade the firmware:

1. On the PC, open the Firmware Upgrade Tool.

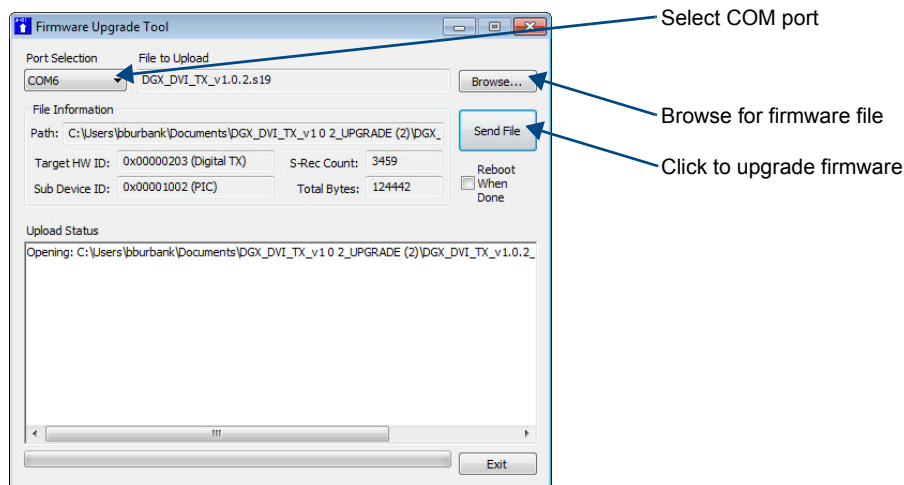

2. Under Port Selection, select the COM port being used. (If unsure of the correct COM port, navigate through Start/Control Panel/Device Manager icon, expand the Ports tree, and note the AutoPatch USB Bridge COM port assignment.)
3. Click Browse to search for the firmware file to be uploaded.
4. Click Send File to upgrade the firmware on the module.
The Power LED blinks amber during the process for upgrading the firmware (this is normal). The progress of the upgrade displays in the Upload Status field. Status is also indicated in the Status bar at the bottom. The success of the upgrade or any errors that occur will be reported.*
5. To cycle power using the new image, select Reboot When Done or unplug the desktop power supply from the AC power source and plug it back in.
6. When the process is complete, click Exit.

* If an incorrect file has been selected or if the upgrade has failed, the LED will briefly illuminate amber then change to a slow red blink. To recover (in either case), browse to select the correct file and resend.



**Increase Your Revenue
through education + knowledge**

In the ever-changing AV industry, continual education is key to success. AMX University is dedicated to ensuring that you have the opportunity to gather the information and experience you need to deliver strong AMX solutions. Plus, AMX courses also help you earn CEDIA, NSCA, InfoComm, and AMX continuing education units (CEUs).

Visit AMX University online for 24/7/365 access to:

- *Schedules and registration for any AMX University course*
- *Travel and hotel information*
- *Your individual certification requirements and progress*



It's Your World - Take Control™