

Overview

The CB-MET-ECOM Rough-In Box (FG039-12) is an optional accessory for the Metreau Entry Communicators. The CB-MET-ECOM allows Metreau Entry Communicators to be mounted directly to the studs/pre-wall and includes a Rough-In box and mounting



FIG. 1 CB-MET-ECOM

CB-MET-ECOM (FG039-12) SPECIFICATIONS	
Dimensions (HWD)	4.42" x 3.08" x 1.81" 11.21 cm x 7.82 cm x 4.59 cm
Certifications	• UL 508A

Mounting Specifications

The following illustrations (FIG. 2, FIG. 3 and FIG. 4) provide mounting specifications for the CB-MET-ECOM.

Reference these measurements when planning and installing the CB-MET-ECOM.

CB-MET-ECOM - Front View

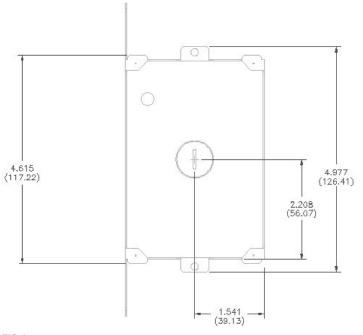


FIG. 2 CB-MET-ECOM MOUNTING SPECIFICATIONS (FRONT VIEW)

CB-MET-ECOM - Top View

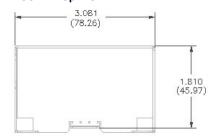


FIG. 3 CB-MET-ECOM MOUNTING SPECIFICATIONS (TOP VIEW)

CB-MET-ECOM Rough-In Box for Metreau Entry Communicator

CB-MET-ECOM - Side Views

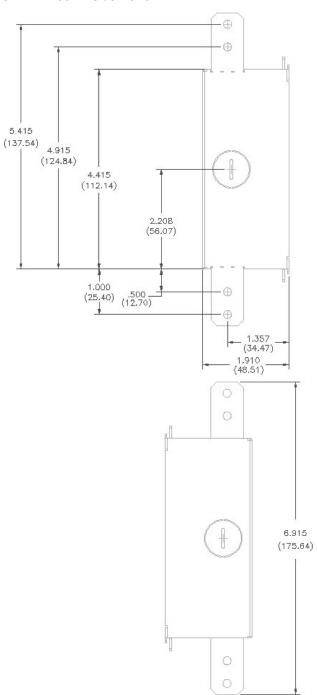


FIG. 4 CB-MET-ECOM MOUNTING SPECIFICATIONS (SIDE VIEWS)

Installing onto a Flat Surface Using Mounting Screws

Mounting screws (#4 flathead, not included) are secured through two sets of circular holes located at the left and right sides of the CB-MET-ECOM.

Ensure the CB-MET-ECOM is flush against the mounting surface.

FIG. 5 provides recommended cutout dimensions for the CB-MET-ECOM.

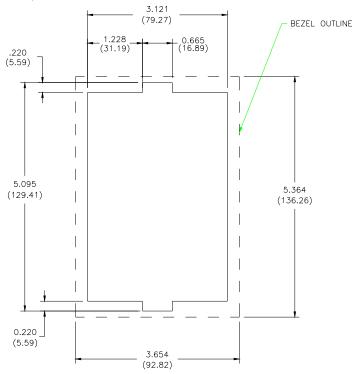


FIG. 5 CB-MET-ECOM RECOMMENDED CUTOUT

It is recommended that you cutout the surface slightly smaller than what is outlined in the installation drawings so that you can make any necessary cutout adjustments. *Notes:*

- Be sure to install the Cat5 Suppression Ferrite (provided) before mounting the Metreau Entry Communicator unit into the Rough-In Box.
- The device and Rough-In Box must have an Earth ground.
- Replacement drywall clip sets must be ordered from AMX.
- Do not over-torque the screws; doing so can cause the unit to not function properly

Typical Installation (without Expansion Clips)

- Remove the tabs for the expansion clip installation from the Rough-In Box by bending back and forth with pliers.
- 2. Use screws through the rough-in tabs to the stud.
- The CB-MET-ECOM is 1.81" (4.597 cm) deep.
- The front of the Rough-In Box should be flush with the front surface of the sheetrock.
- While the Rough-In Box can be recessed it should never stand out from the surface.
- Run the Ethernet cable and an Earth ground wire into the Rough-In Box. Only use the keyholes indicated in FIG. 6.

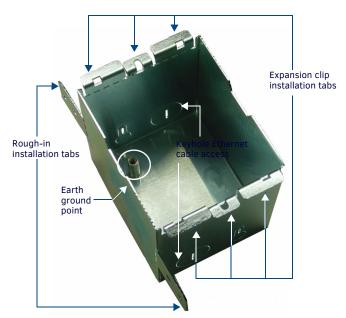


FIG. 6 CB-MET-ECOM

- 4. Place the lug of the ground wire on the device and the Earth ground wire around the provided screw and connect them both to the point shown in FIG. 6.
- 5. Install the (provided) Ferrite clip onto the Ethernet cable.
- 6. Connect the Ethernet cable in the back of the Metreau Entry Communicator.
- 7. Insert the Metreau Entry Communicator into the CB-MET-ECOM, and push until the device is flush to the wall.

Note: Start at the top of the device and tilt in toward the bottom.

Removing the Device from the Wall

The installation housing for the Metreau Entry Communicators are made to such exacting specifications it will always be a snug fit. Should you ever need to remove the Metreau Entry Communicator from the wall, follow these steps:

- Place a flathead screwdriver between the tab of the Rough-In Box and the notch
 of the Metreau Entry Communicator and pop the two apart.
- 2. Pull the bottom of the unit out (pivoting on the top clip) until it seems to bind against the shielding
- 3. While keeping the unit at this angle, pull the top of the unit away from the top clip.

Additional Documentation

Refer to the Metreau Entry Communicators Operation/Reference Guide (available online at www.amx.com) for additional installation drawings and instructions, including:

- Typical Installation (without Expansion Clips)
- Installing the Rough-In Box without the Use of Tabs
- Wall Surface Installation (Using Expansion Clips)



© 2016 Harman. All rights reserved. Modero, AMX, AV FOR AN IT WORLD, HARMAN, and their respective logos are registered trademarks of HARMAN. Oracle, Java and any other company or brand name referenced may be trademarks/registered trademarks of their respective companies. AMX does not assume responsibility for errors or omissions. AMX also reserves the right to alter specifications without prior notice at any time. The AMX Warranty and Return Policy and related documents can be viewed/downloaded at www.amx.com.

