

The Modero 5" wall/flush mount Touch Panel (NXD-500i), the Modero 7" wall/flush mount Touch Panel (NXD-700Vi), and the Modero 10" wall/flush mount Touch Panel (NXD-1000Vi) are available in Mystique styled black or white by ordering and installing the optional Mystique style bezel kits (FIG. 1). Easily swap out the traditional silver bezel with a Mystique style bezel to complement other Mystique style Touch Panels, R-Series Remotes and Metreau Keypads, as well as match a variety of residential and business decors. All three varieties of Mystique style bezels are available with one programmable button in landscape mode.



FIG. 1 NXA-BEZ500-BL Black Bezel for the NXD-500i

Common Applications

The NXD-1000Vi can be used for a variety of applications and locations such as entryways, bedrooms, bathrooms, kitchens, podiums and other surface mount locations.

Touch Panel	Mystique Style Bezel Part Number
NXD-500i	<ul style="list-style-type: none"> NXA-BEZ500-BL, Black Bezel: FG2261-48 NXA-BEZ500-WH, White Bezel: FG2261-49
NXD-700Vi	<ul style="list-style-type: none"> NXA-BEZ700-BL, Black Bezel: FG2258-48 NXA-BEZ700-WH, White Bezel: FG2258-49
NXD-1000Vi	<ul style="list-style-type: none"> NXA-BEZ1000-BL, Black Bezel: FG2259-48 NXA-BEZ1000-WH, White Bezel: FG2259-49

Mystique Style Bezel Kit Specifications	
Dimensions (HWD):	<ul style="list-style-type: none"> NXA-BEZ500: 4 1/8" x 5 5/8" x 5/16" (10.48 cm x 14.29 cm x 0.79 cm) NXA-BEZ700: 5 7/8" x 7 7/8" x 3/4" (14.92 cm x 20.00 cm x 1.91 cm) NXA-BEZ1000: 7 15/16" x 11 1/8" x 11/16" (20.16 cm x 28.26 cm x 1.75 cm)
Weight:	<ul style="list-style-type: none"> NXA-BEZ500: 0.05 lbs (22.68 grams) NXA-BEZ700: 0.15 lbs (68.04 grams) NXA-BEZ1000: 0.25 lbs (113.40 grams)
Other AMX Equipment:	<ul style="list-style-type: none"> NXD-500i 5" Modero® Wall/Flush Mount Touch Panel with Intercom (FG2261-02) NXD-700Vi 7" Modero® Wall/Flush Mount Touch Panel with Intercom (FG2258-04K) NXD-1000Vi 10" Modero® Wall/Flush Mount Touch Panel with Intercom (FG2259-04K)

Removing and Installing the Touch Panel Bezel

Any of the Mystique Style bezels may be attached to a previously installed touch panel. Because the device is installed against a wall, the bezel must be removed carefully to prevent the two top prongs from being broken. To remove the bezel:

1. Gently lift up on the bezel from the bottom. Do NOT pull up from the sides or the top.
2. Let the bezel fall forward from the top of the device and let it pivot from the bottom.
3. Remove the bezel from the two bottom prongs.
4. When attaching the new bezel to the device, make sure to align the Microphone, Light, and PIR Motion sensor locations on the device to their respective openings on the bezel assembly.

