

## Warranty

MAXRAD, Inc. warrants that at the time of shipment the products furnished by MAXRAD, Inc. are free of defects in material and workmanship. MAXRAD, Inc. makes no other warranty, express or implied, with respect to its products. MAXRAD, Inc. will repair or replace, at its option, without charge, any MAXRAD product which fails within two years from date of purchase. This warranty does not extend to any of our products which have been subjected to misuse, neglect, accident, improper installation, improper application, nor shall it extend to units which have been repaired, disassembled or substantially altered outside the MAXRAD factory.

MAXRAD, Inc. reserves the right to inspect all defective products which must be returned to the MAXRAD, Inc. factory freight prepaid. No products will be accepted for replacement or repair without prior written approval. In all cases, final warranty disposition of defective products will be determined by MAXRAD, Inc. The warranty period shall not be extended beyond its original term with respect to any part or parts repaired or replaced by MAXRAD, Inc.

**MAXRAD, INC. WILL NOT BE RESPONSIBLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES DUE TO FAILURE OF A MAXRAD, INC. PRODUCT UNDER THIS WARRANTY WHETHER SUCH CLAIM IS BASED ON TORT (INCLUDING NEGLIGENCE), CONTRACT, ANY THEORY OF STRICT LIABILITY OR REGULATORY ACTION.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

**THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. THE ABOVE STATED WARRANTIES ARE GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND MAXRAD INC. HEREBY SPECIFICALLY DISCLAIMS ALL IMPLIED WARRANTIES INCLUDING THOSE OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE AND ANY BASED UPON USAGE OF TRADE OR COURSE OF DEALING.**

## RETURNS

In the unlikely event a defect occurs in this product, please work through the dealer or distributor from which this product was purchased. Maxrad provides complete service and support to all of its dealers and distributors.

# MAXRAD™


**4350 Chandler Drive  
Hanover Park, IL 60133**



## **2.4 GHz ISM ENCLOSED YAGI DIRECTIONAL ANTENNA SERIES INSTRUCTION SHEET**

© 2002 MAXRAD, Inc.  
All Rights Reserved


Part #: MIS-MYP2400 SERIES

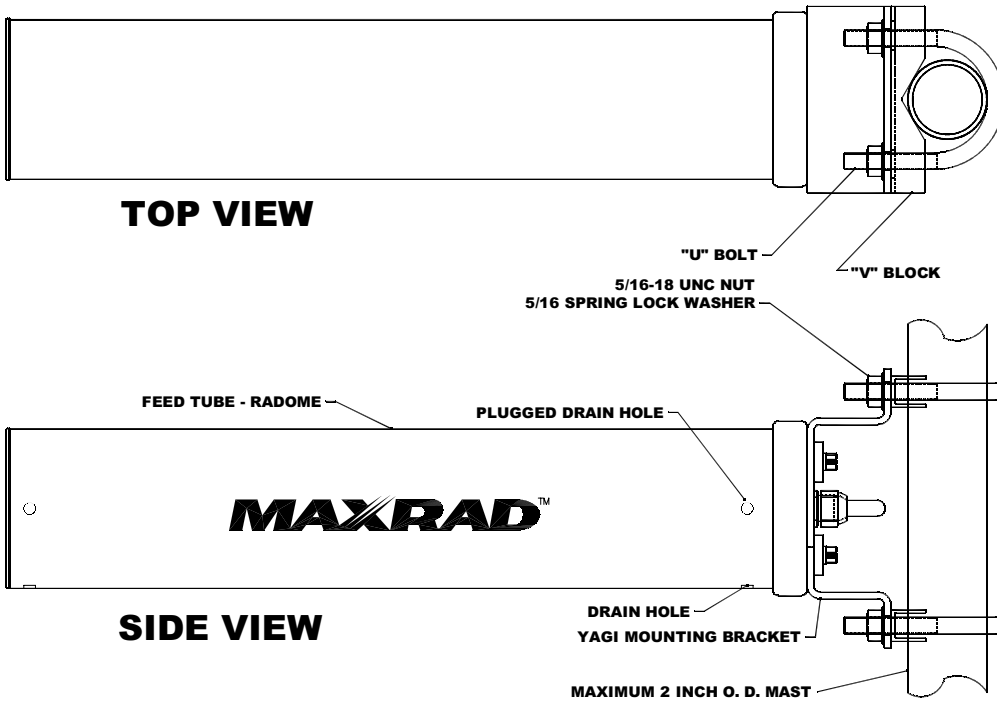

**SEE PAGE 3 FOR MOUNTING IN HORIZONTAL POSITION. THE ANTENNA IS SHIPPED IN VERTICAL POSITION.**


Remove the bag of hardware from the container. The following hardware is included: two (2) "V" blocks, two (2) hex nuts, four (4) spring lock washers and two (2) "U" bolts.

1. Place a "U" bolt around the mast and the Yagi mounting bracket. Next place the holes in the top of the Yagi in the desired position, and tighten the "U" bolt. Now place a spring lock washer on each end of the "U" bolt and start a hex nut on each end of the "U" bolt.
2. Repeat this procedure for the bottom of the Yagi in the desired position, and tighten the "U" bolt.
3. Attach the cable connector to the side of the antenna (do not use tools; you may over-tighten the connector).
4. Wrap the connectors with the sealant tape. Remove the paper backing from the rubber sealant tape and apply it above the top connector. Stretch the tape around the antenna piping to 1/2 inch below the bottom connector and secure with electrical tape.

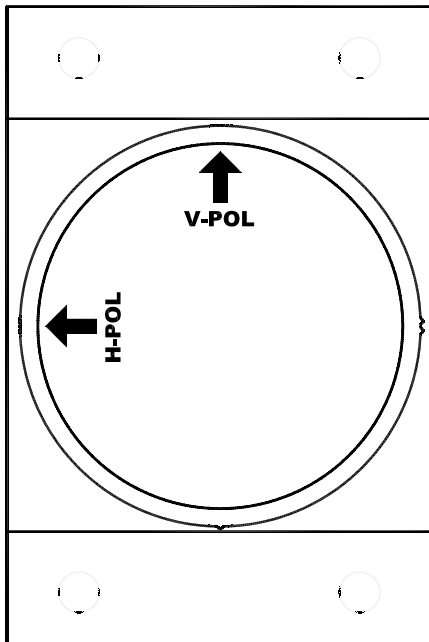

**VERTICAL POLARIZATION**

**HEAD VIEW**

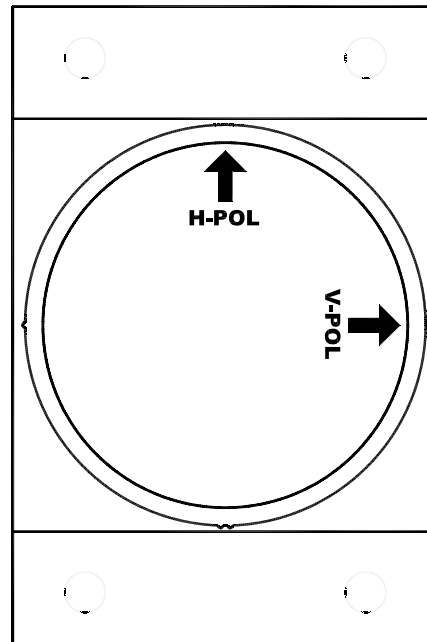

**HORIZONTAL POLARIZATION**

**POLARIZATION CAN BE CHANGED A**

1. Using a 5/32" hex allen wrench, remove the two (2) screws from the base of the antenna and rotate the antenna 90 degrees clockwise above.
2. Remove the two (2) drain plugs from the antenna. Remove the radome and re-install them in the desired position.