

Cables in VC-Grid and VC-Strip System

with P3 PowerPort 1500

4-pin Male XLR to 4-pin Female XLR



from P3 PowerPort 1500 towards first VC-Grid/Strip

P/N 11821016 (1m), P/N 11821017 (2.5m), P/N 11821018 (5m), P/N 11821019 (10m), P/N 11821015 (25m)

4-pin Male XLR to 4-pin Female PCB



from long 4-pin XLR cable into first VC-Grid/Strip on the daisy-chain

P/N 11840158 (0.25m)

4-pin Female PCB to 4-pin Female PCB



between daisy-chained VC-Grids/Strips

P/N 11840160 (200mm), P/N 11840161 (400mm), P/N 11840162 (600mm), P/N 11840163 (800mm), P/N 11840157 (1000mm)

4-pin Female PCB to 4-pin Female XLR



 
out of VC-Grid/Strip back into 4-pin XLR cable for long daisy-chain

P/N 11840159 (0.25m)

Cables in VC-Grid and VC-Strip System


with Tripix Power IP66

5-pin Male XLR + Tripix Power to 4-pin Female XLR (DMX Input Adapter)

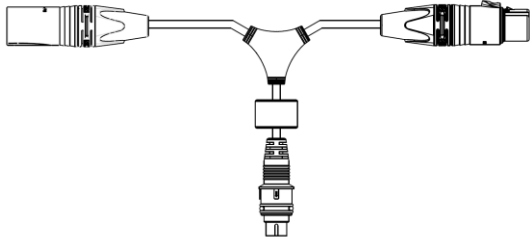

from DMX Source and Tripix Power IP66 towards start of daisy-chain
P/N 11840194 (0.25m)

 4-pin Male XLR to 4-pin Female XLR



from DMX Input Adapter towards first VC-Grid/Strip
P/N 11821016 (1m), P/N 11821017 (2.5m), P/N 11821018 (5m), P/N 11821019 (10m), P/N 11821015 (25m)

4-pin Male XLR to 4-pin Female PCB



from long 4-pin XLR cable into first VC-Grid/Strip on the daisy-chain
P/N 11840158 (0.25m)

4-pin Female PCB to 4-pin Female PCB



 
between daisy-chained VC-Grids/Strips
P/N 11840160 (200mm), P/N 11840161 (400mm), P/N 11840162 (600mm), P/N 11840163 (800mm), P/N 11840157 (1000mm)

4-pin Female PCB to 4-pin Female XLR



out of VC-Grid/Strip back into 4-pin XLR cable for long daisy-chain
P/N 11840159 (0.25m)

4-pin Male XLR to 5-pin Female XLR (DMX Output Adapter)




out of daisy-chain towards another DMX Device or towards start of another daisy-chain
P/N 11840203 (0.25m)

Cables in VC-Grid and VC-Strip System

with generic 48Vdc power supply

 
5-pin Male XLR + 2 Power Wires to 4-pin Female XLR (DMX Input Adapter)



from DMX Source and generic 48Vdc power supply towards start of daisy-chain

P/N 11840171 (0.25m)

 4-pin Male XLR to 4-pin Female XLR



from DMX Input Adapter towards first VC-Grid/Strip

P/N 11821016 (1m), P/N 11821017 (2.5m), P/N 11821018 (5m), P/N 11821019 (10m), P/N 11821015 (25m)

4-pin Male XLR to 4-pin Female PCB



from long 4-pin XLR cable into first VC-Grid/Strip on the daisy-chain

P/N 11840158 (0.25m)

 
4-pin Female PCB to 4-pin Female PCB



between daisy-chained VC-Grids/Strips

P/N 11840160 (200mm), P/N 11840161 (400mm), P/N 11840162 (600mm), P/N 11840163 (800mm), P/N 11840157 (1000mm)

4-pin Female PCB to 4-pin Female XLR



out of VC-Grid/Strip back into 4-pin XLR cable for long daisy-chain

P/N 11840159 (0.25m)

4-pin Male XLR to 5-pin Female XLR (DMX Output Adapter)



out of daisy-chain towards another DMX Device or towards start of another daisy-chain

P/N 11840203 (0.25m)