

Exterior Linear Pro Series

Exterior Linear Pro QUAD Cove and QUAD Graze

Exterior Linear Pro CTC Cove and CTC Graze

Exterior Linear Pro DV

User manual

(with Installation and Safety Manual attached)

QUAD Cove



QUAD Graze



QUAD DV



CTC Cove



CTC Graze



Junction Box Power DMX to PD



©2022 HARMAN PROFESSIONAL DENMARK ApS. All rights reserved. Features, specifications and appearance are subject to change without notice. HARMAN PROFESSIONAL DENMARK ApS and all affiliated companies disclaim liability for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this document. Martin is a registered trademark of HARMAN PROFESSIONAL DENMARK ApS registered in the United States and/or other countries.

HARMAN PROFESSIONAL DENMARK ApS, Olof Palmes Allé 44, 8200 Aarhus N, Denmark
HARMAN PROFESSIONAL SOLUTIONS U.S., 8500 Balboa Blvd., Northridge CA 91329, USA

www.martin.com

Exterior Linear Pro User Manual (Engl.) & Safety/Instln. Manual (Multi-Lang.) Rev. A, P/N 5140734-00

Table of contents

Introduction	4
Exterior Linear Pro Series	4
Features	5
Before using the product for the first time	5
Setting up fixtures	6
Martin Companion® and RDM	6
Fixture discovery	6
Supported parameters	6
Setting up DMX operation	7
Behavior when no DMX signal is present	7
Dimming curves	7
Color mode	8
Power limit mode	8
Fixture information	8
Status messages	8
Utilities	8
Setting up standalone operation	9
Operating the fixture	12
Test sequences and fixture status	12
Controlling via DMX	12
Identifying fixtures in the installation	12
DMX protocols	13
QUAD color mixing models	13
CTC models	16
RDM functions	19

Introduction



Warning! Before installing, operating or servicing the Exterior Linear Pro lighting fixture, read the latest version of the fixture's Safety and Installation Manual, paying particular attention to the Safety Precautions section. The Safety and Installation Manual is supplied with the fixture and also included at the back of this user manual.

Important! Full specifications for Exterior Linear Pro fixtures and accessories are available in the Exterior Linear Pro area of the Martin® website at www.martin.com.

Thank you for selecting the Exterior Linear Pro lighting fixture from Martin.

This User Guide is a supplement to the Safety and Installation Manual that is supplied with the fixture and attached to the back of this User Manual. This combined User Manual plus Safety and Installation Manual is available for download from the Exterior Linear Pro area of the Martin website at www.martin.com. The User Manual contains information that is mainly of interest for lighting designers and operators, whereas the Safety and Installation Manual contains important information for all users, especially installers and technicians.

We recommend that you check the Martin website regularly for updated documentation. We publish revised versions each time we can improve the quality of the information we provide and each time we release new firmware with changes or new features. Each time we revise this guide we list any important changes on page 2 so that you can keep track of updates.

Exterior Linear Pro Series

The Exterior Linear Pro Series from Martin is a line of rugged LED-based outdoor lighting fixtures. Variants are available to suit a range of applications.

Applications and design

Three types of fixture design are available:

- **Graze** variants are designed for illumination of walls or other surfaces.
- **Cove** variants are designed for a range of indirect lighting applications.
- **DV** variants are designed for direct viewing and feature 6-inch (15 cm) segment control for low-resolution animation effects.

Color and CTC

QUAD color mixing

Exterior Linear Pro QUAD variants feature RGBW LEDs and offer RGB control with automatic addition of White. They have a resolution of 8 x LEDs per foot (30 cm). QUAD fixtures have a dedicated color temperature control channel which accurately follows the black body curve from 1000 K to 12 850 K.

QUAD fixtures are available in the following variants:

- **Graze** (15° beam angle)
- **Cove** (100° beam angle)
- **DV** (Direct View with round diffuser)

CTC

Exterior Linear Pro Controllable Color Temperature (CTC) variants feature even higher light quality and efficacy than QUAD variants. They offer White CT mixing from 2700 to 6500 K with 3 x discrete color LEDs for high efficacy, with a resolution of 12 x LEDs per foot (30 cm).

CTC fixtures are available in the following variants:

- **Graze** (9° native beam angle)
- **Cove** (100° native beam angle)

Fixture length

All fixtures are available in **1.02 ft.** (312 mm) and **4.02 ft.** (1227 mm) lengths.

Mounting options

A range of mounting options is available. See the Exterior Linear Pro Series Safety and Installation Manual for details.

Asymmetric diffusers for Graze variants

Micro lens asymmetric diffuser film accessories are available for Graze variants only. The diffusers give additional beam angle options. See the Exterior Linear Pro area of the Martin website at www.martin.com for details.

Features

All Exterior Linear Pro Series fixtures feature:

- Long-life, high output LEDs
- DMX control
- RDM configuration and addressing
- Stand-alone light show function with up to 20 scenes, compatible with other Martin fixtures
- Functional and discreet optional glare shield and louvre accessories
- Operation as single units or divided into segments down to 6 inches (15 cm) in length
- IP66 ingress protection rating (suitable for permanent outdoor use)
- Integrated 100-277 V, 50/60 Hz auto-ranging AC power supply
- Easy cabling with hybrid (combined power and data) daisy-chain cables
- Range of mounting options
- Local diagnostics called up by swiping magnet over fixture.

Before using the product for the first time

1. Check the Exterior Linear Pro area of the Martin website at www.martin.com for the most recent user documentation and technical information about the fixture. Martin user manual revisions are identified by the revision letter at the bottom of the inside cover. Read the latest revision of the Exterior Linear Pro Safety and Installation Manual that is included at the end of the User Manual, paying particular attention to the 'Safety Precautions' section.
2. Unpack and ensure that there is no transportation damage before using the fixture. Do not attempt to operate a damaged fixture.
3. Before operating, ensure that the voltage and frequency of the power supply match the power requirements of the fixture.
4. If fixtures are exposed to a sudden temperature change, give them time to warm or cool to the ambient temperature before applying power. This will help avoid damage due to condensation.

Setting up fixtures



Warning! Read the Safety and Installation Manual that is included at the end of this User Manual, paying particular attention to the Safety Precautions section, before setting up the fixture for use.

This chapter covers the use of Martin Companion to set up and manage the Exterior Linear Pro via RDM. While we recommend the use of Martin Companion, most of the commonly available RDM controllers also support the Exterior Linear Pro. Check with the controller manufacturer if you cannot find the Martin Exterior Linear Pro in the list of supported fixtures. The exact procedures and command names used by different RDM controllers vary.

Setting up single or multiple fixtures

You can set behavior in one fixture by sending a unicast RDM command to that one fixture only, or you can set behavior in all the fixtures on the data link by sending a broadcast RDM command to all the fixtures.

Martin Companion® and RDM

To set up Exterior Linear Pro fixtures via RDM, we invite you to use the **Martin Companion Cable** PC-to-DMX interface that is available as an accessory from Martin suppliers. This tool plugs into the USB port of a Windows PC and connects to Martin fixtures over the DMX data link. The Martin Companion Cable is designed to work together with the **Martin Companion software suite** for Windows PCs that can be downloaded free of charge from the Martin website at www.martin.com. The Martin Companion software suite will always offer the latest Exterior Linear Pro features and firmware when your PC is connected to the Internet.

Instructions for connecting the Martin Companion Cable are supplied with the tool and can also be downloaded from the Martin website.

Martin Companion offers the following features:

- Simple PC-based user interface
- Update of fixture firmware
- RDM configuration and addressing
- Standalone show programming with automatic start when fixtures are powered on.

RDM functions

A full list of the RDM functions that Exterior Linear Pro fixtures support is given at the end of this chapter. These functions are generally referred to using the more specific term 'PIDs' or 'Parameter IDs'.

Fixture discovery

Before you can communicate with fixtures using RDM, you must send a scan command (fixture discovery command) to all the devices on the data link so that the RDM controller can identify them. It does this by retrieving each device's factory-set unique identifier (UID). This process can take some time, depending on the number of devices on the link.

To identify the fixtures on the link:

1. Check that the fixtures are correctly connected to the RDM controller on the data link and that power is applied to all fixtures.
2. Send a discovery command via RDM (Martin Companion does this automatically as soon as the cable is connected).
3. Give the controller time to identify the devices on the link and prepare for communication with the devices.

Supported parameters

Exterior Linear Pro fixtures can communicate the control parameters that they support to the RDM controller and give brief information on each parameter.

Setting up DMX operation

Setting DMX mode

This RDM command lets you set the DMX mode of fixtures on the data link. The different DMX modes available give you a range of options for color or color temperature control as well as letting you control the fixture as one unit or divide the fixture into individually controlled segments. See the 'DMX protocols' section at the end of this manual for details of the modes and control options available.

Because DMX mode affects the number of DMX channels a fixture uses, it will affect the assignment of DMX addresses to fixtures. You should therefore set the DMX mode of all the fixtures in the installation before you set their DMX addresses.

See the 'DMX protocols' section at the end of this manual for an overview of the functions available and number of DMX channels used by Exterior Linear Pro fixtures.

You can set the DMX mode of one fixture by sending a unicast RDM command to that one fixture only, or you can set the DMX mode of all the fixtures on the data link by sending a broadcast RDM command to all the devices on the link.

Setting DMX addresses

This RDM command lets you set the DMX addresses of fixtures on the data link.

A fixture's DMX address is the first DMX channel it uses to receive data communication. It uses this channel and the channels immediately above it. If a fixture has DMX address 001 and the fixture uses four DMX channels, it will use channels 001, 002, 003 and 004. DMX address 005 will be available as a DMX address for the next fixture on the data link. If this fixture also uses four DMX channels, the next available DMX address will be 009, and so on.

You can set the DMX address of one fixture by sending a unicast RDM command to that one fixture only, or you can set all the fixtures on the data link to the same DMX address by sending a broadcast RDM command to all the devices on the link. If all the fixtures have the same DMX address, they will behave identically and you will not be able to control any single fixture independently.

An example procedure might look like this, depending on which RDM controller you use:


1. Go to Scan → Properties → Advanced → Choose PID → SET DMX START ADDRESS.
2. Enter the DMX address that you want to give to the fixture (or give to all the fixtures if you are sending a broadcast command).
3. Confirm your selection.

Behavior when no DMX signal is present

Using RDM, you can define how fixtures behave if power is applied but fixtures are not receiving a DMX signal (or if fixtures are powered on and being controlled by DMX, and then the DMX signal stops). Four options are available:

- **Blackout** – Fixture intensity set to zero light output when no DMX signal is being received.
- **Standalone** – Fixture goes to standalone operation when no DMX signal is being received. If you have programmed a scene or scenes via RDM and DMX, the fixtures will display that scene when no DMX signal is present.
- **Last received value** – Fixture follows the last DMX values it received.
- **Default value** – All LEDs go to 100% intensity when no DMX signal is being received.

Dimming curves

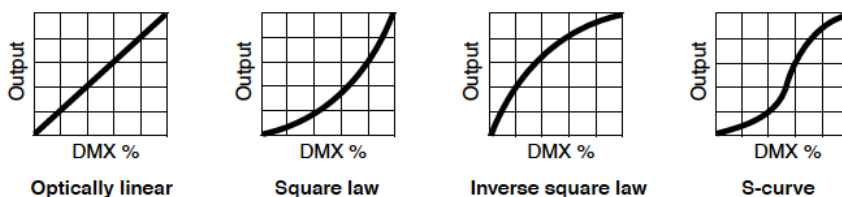

Four dimming curves are available via RDM:

- **Optically linear** – The increase in light intensity appears to be linear as DMX value is increased.
- **Square law** (default setting) – light intensity control is finer at low levels and coarser at high levels.

- **Inverse square law** – Light intensity control is coarser at low levels and finer at high levels.
- **S-Curve** – light intensity control is finer at low levels and high levels and coarser at medium levels.

Color mode

You can select from two color management options:

- **Calibrated** – All colors stay consistent at all times.
- **Calibrated Extended** (default setting) – The White point is calibrated, but you can saturate colors to the maximum level available.

Power limit mode

You can set the maximum power consumption of Exterior Linear Pro fixtures via RDM. The power limit mode settings let you adjust the balance between electrical power consumption versus light intensity.

Three options are available:

- **Max. 12 watt per foot / 30 cm** (default setting) – Gives maximum light intensity. Power consumption will not exceed 12 W per foot / 30 cm length.
- **Max. 10 watt per foot / 30 cm** – Gives a small reduction in power consumption and light intensity.
- **Max. 5 watt per foot / 30 cm** – Gives a significant reduction in power consumption and light intensity. This setting complies with the Californian ASHRAE standard.

Fixture information

Exterior Linear Pro fixtures can communicate the following information to the RDM controller:

- Basic fixture information – type and length of fixture.
- Name of product and manufacturer.
- Device label – This information can be edited by the user, providing a means of giving an individual fixture its own ID number, for example.
- Currently installed firmware version.
- List of temperature sensors and sensor readouts.
- Number of hours fixture has had power applied since manufacture (non-resettable).
- Number of hours LEDs have been active since manufacture (non-resettable).
- Number of on/off power cycles since manufacture (non-resettable).
- Serial number – This is a factory-set serial number that cannot be changed.

Status messages

The Exterior Linear Pro features a self-diagnostic system that detects any issues concerning correct operation or safety (temperature that exceeds safe level, for example) and communicates the issues as status messages or warnings. These messages can be useful in connection with service and maintenance.

It is possible to:

- Call up a list of any status messages that the fixture has stored in memory.
- View information on the messages.
- Clear the stored list of status messages.

Utilities

The following useful functions are available via RDM:

- **Pixel flip** – Lets you invert the order of the segments in 2/4/8-segment mode. This can greatly speed up programming if fixtures are not all installed in the same orientation.
- **Reset device** – Carries out a full reset of all the fixture's electronics.
- **Perform self-test** – The fixture carries out a sequence of functions designed to test the fixture.
- **Self-test description** – Lets you select from various sequences that test the fixture's functionality, the fixture's LEDs or every aspect of the fixture.
- **Factory defaults** – Deletes any custom settings that have been configured via RDM and returns the fixture to its factory default settings.

Setting up standalone operation


Standalone operation in the Exterior Linear Pro requires the use of Martin Companion. This hardware cable accessory and free software offers the following features:

- Simple PC-based user interface
- Programming from a remote location over the DMX link.
- Easy programming of multiple fixtures simultaneously
- Combining different types of Martin fixture in one stand-alone show
- Standalone show programming with possibility of automatic start when fixtures are powered on
- Programming of up to twenty scenes with global or individual fade and hold times


In standalone mode, fixtures display a 'scene' (a color and intensity) or a sequence of up to twenty scenes if you use Martin Companion. Once scenes have been programmed, fixtures can display them without needing a DMX signal.

To program standalone operation using Martin Companion:


1. Connect the Martin Companion Cable and a PC running the Martin Companion application to the DMX link. Apply power to the fixtures on the DMX link that you want to program. If the fixtures have not already been discovered by Martin Companion, wait until the **Discovery** counter stops. This will indicate that all fixtures have been discovered.
2. Once all fixtures have been discovered and are shown in the list of connected fixtures, set them all to the desired DMX Mode using the **Mode** column. The DMX Mode that you select for a fixture determines what controls are available when you create scenes in the next steps.
3. See screenshot below. Select the fixtures that you want to set up for stand-alone operation using the checkboxes in the **Select** column, and then click **Create New Show** to continue to the next step (it is also possible to edit an existing show that has already been programmed into the fixtures).

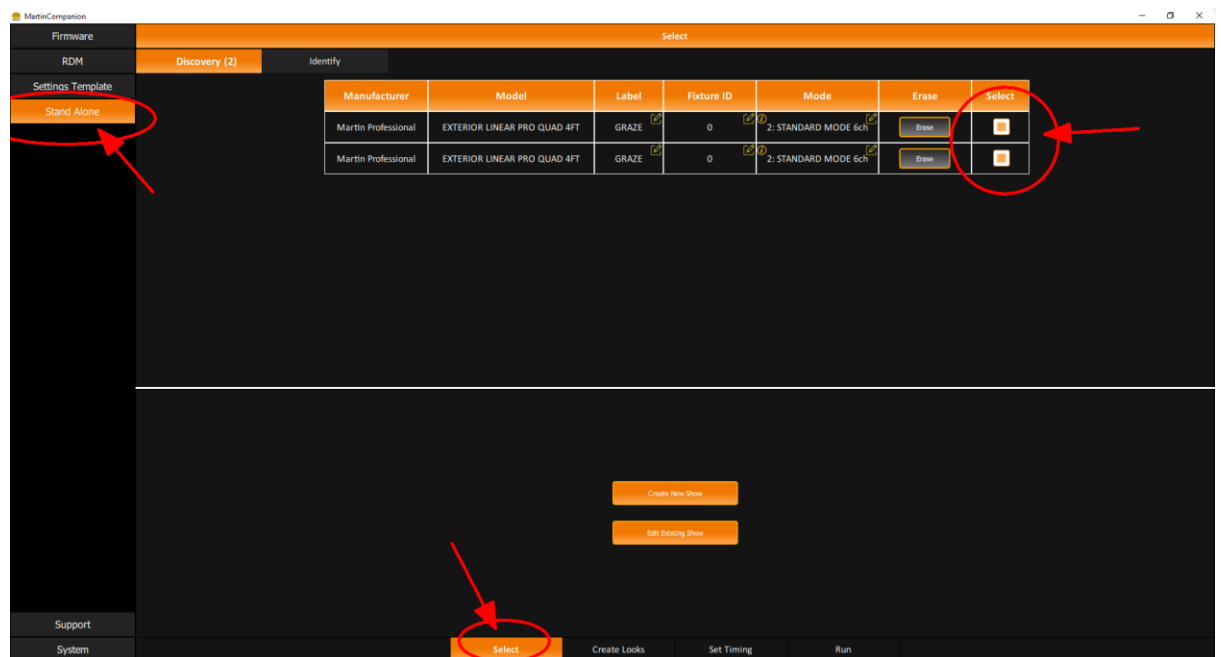


4. See screenshot below. Click on the **Create Looks** button to open the scene creation controls.
 - a. Select the fixture or fixtures that you want to control in the list at the top of the screen.
 - b. Create the desired look for the selected fixture(s) in Scene 1 using the sliders shown below. The sliders shown depend on which DMX Mode you set for the fixtures in the previous step.
 - c. Select any other fixtures that you want to control in the list at the top of the screen.
 - d. Repeat steps b. and c. until you are happy with the output from ALL the fixtures in Scene 1.
 - e. To create a second scene, click on **Add Scene**.
 - f. Repeat steps a. to d. to create the desired look for all the fixtures in scene 2.
 - g. Repeat steps e. and f. to add more scenes.
 - h. You can step through the scenes that have been programmed using the **Previous Scene** and **Next Scene** buttons.
 - i. When you have finished creating scenes, click on **Set Timing** to continue to the next step.

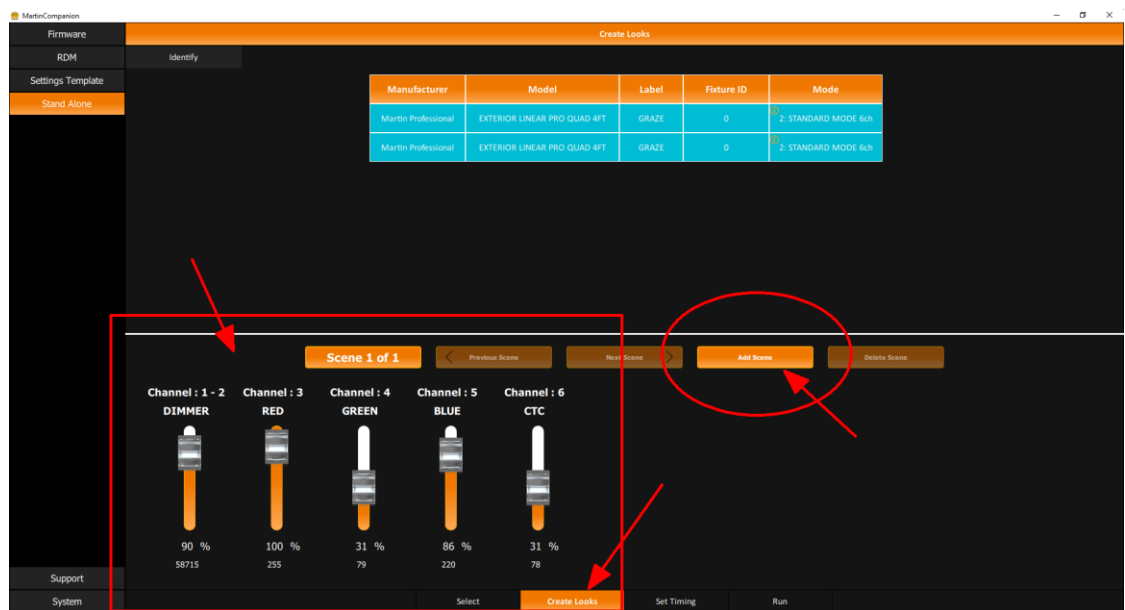

5. See screenshot below. On the **Set Timing** page, you can now set the **Duration** and **Fade Time** for each scene. Simply select one or multiple cells to edit the timing values. You can click **Play All** to let all fixtures play the recorded scenes with the entered Duration and Fader times. Once you are satisfied with the result, click on **Run** to continue to the next step.

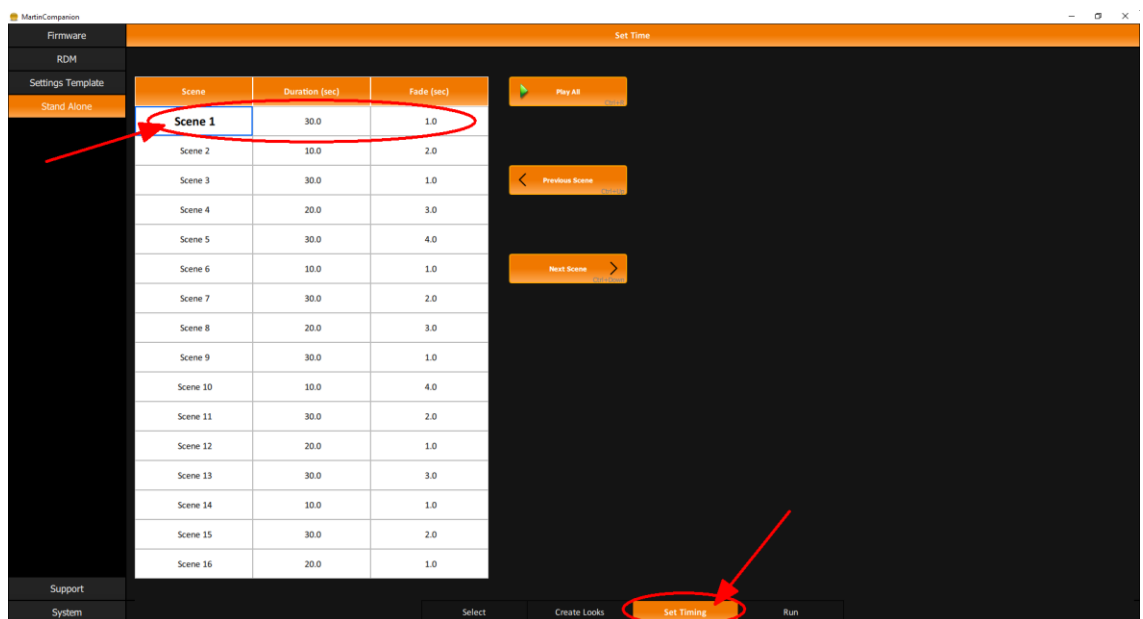

6. See screenshot below. In the **Run** tab, simply click on **Start Stand Alone Show** to finalize programming. The application will now tell you to disconnect the DMX cable between Martin Companion and the fixtures. Once you do that, the fixtures will start to run their standalone show.

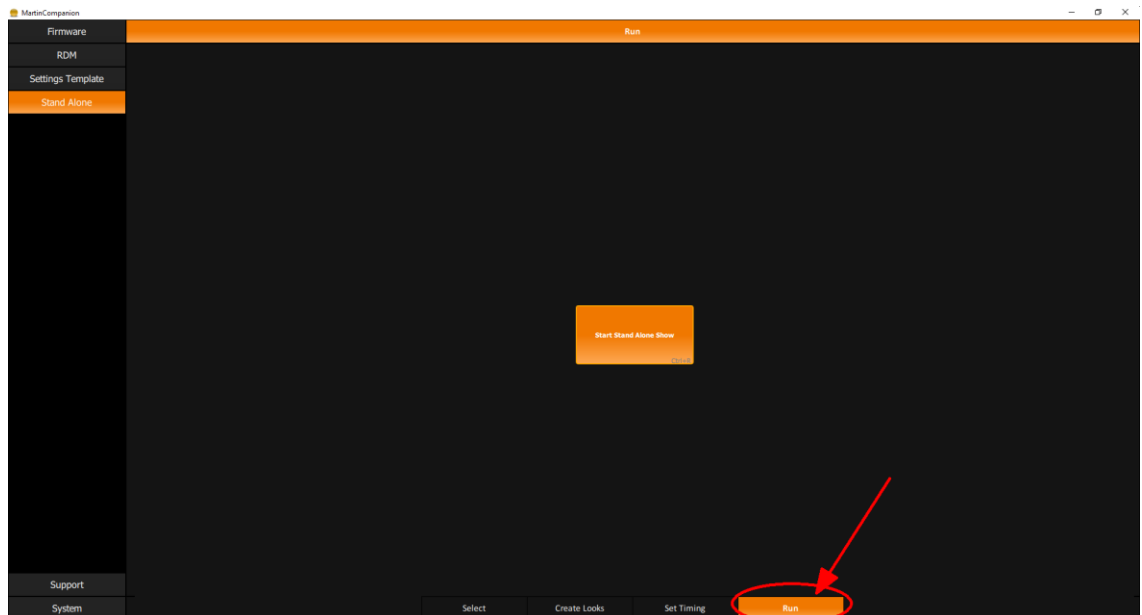

Synchronized standalone operation

All fixtures programmed together for standalone operation will also synchronize the playback of their standalone scenes. Fixtures need to be connected with each other using DMX cables (but not to a DMX controller) to allow this synchronization to happen. The synchronization makes sure that all fixtures switch to the same scene number with the same duration and fade time. But each fixture can have a different look programmed into it for each scene.

Note that Martin Companion automatically assigns one fixture as the standalone host, and all the others as clients. The host fixture only tells the client fixtures to "go to scene X with fade time Y". The color / dimmer level / CTC that each fixture uses in a specific scene is stored inside each fixture individually. Again, not all fixtures have to show the same color in each scene. Only the duration and fade times are synchronized.

Operating the fixture



Warning! Read the Safety and Installation Manual that is included at the end of this User Manual, paying particular attention to the Safety Precautions section, before operating the fixture.

Be aware that the output of LEDs, like all light sources, changes gradually over many thousands of hours of use. If you require products to perform to very precise color specifications, you may eventually need to make small readjustments at the lighting controller.

Test sequences and fixture status

The Exterior Linear Pro Series Safety and Installation Manual that is included at the end of this User Manual contains information on displaying fixture status codes and running test sequences that you may find useful before starting fixture operation.

Controlling via DMX

Once you have set up fixtures' DMX modes and DMX addresses via RDM, you can control fixtures using the DMX controller that is connected to the installation.

See the 'DMX protocols' section at the end of this manual for details of the control options available.

Identifying fixtures in the installation

To help with programming scenes and controlling the installation, it is possible to send an RDM command that causes a fixture to flash a signal so that you can identify it. To identify a fixture:

1. Black out all fixtures if you have been using them.
2. Send an IDENTIFY DEVICE unicast command to an individual fixture in the installation via RDM. The fixture will respond by flashing white, letting you identify it. In Martin Companion you can simply enable the "Identify" button in the toolbar, and then any fixture(s) you select will immediately identify itself. You can even use arrow keys to navigate through the list of fixtures, with the corresponding fixture flashing as soon as you get to it.
3. If your RDM-compatible DMX controller allows it, you can now identify the fixture at the controller.

DMX protocols

QUAD color mixing models

QUAD models feature RGBW LEDs. The following DMX control modes are available:

All models

- **Standard mode** gives 16-bit control of overall fixture intensity, RGB control of the fixture using one channel per color with White added automatically, and a CTC channel with color temperature variable from 1000 K to 12 850 K in 50 K steps.
- **Raw mode** gives raw RGBW control of the fixture using one channel per color.

4 ft. models

- **8-segment mode** (8 x 15 cm/6 in. segments)
 - **4-segment mode** (4 x 30 cm/1 ft. segments)
 - **1-segment mode** (1 x 120 cm/4 ft. segment)
- give RGB control of segments. White is added automatically.

1 ft. models

- **2-segment mode** (2 x 15 cm/6 in. segments)
 - **1-segment mode** (1 x 30 cm/1 ft. segment)
- give RGB control of segments. White is added automatically.

Standard Mode – 6 DMX channels

Channel	DMX Value	Function	Fade type	Default value
1 and 2	0-65535	Dimmer Overall intensity 0 – 100%	Fade	0
3	0-255	Red Intensity 0-100%	Fade	255
4	0-255	Green Intensity 0-100%	Fade	255
5	0-255	Blue Intensity 0-100%	Fade	255
6	0-18 19-77 78 79-127 128 129-254 255	Color Temperature Control 1000 K 1050 K to 3950 K in 50 K steps 4000 K 4050 K to 6450 K in 50 K steps 6500 K 6550 K to 12 800 K in 50 K steps 12 850 K	Fade	78

Raw Mode – 4 DMX channels

Channel	DMX Value	Function	Fade type	Default value
1	0-255	Red Intensity 0-100%	Fade	0
2	0-255	Green Intensity 0-100%	Fade	0
3	0-255	Blue 0-100%	Fade	0
4	0-255	White 0-100%	Fade	0

1-segment Mode – 3 DMX channels

Channel	DMX Value	Function	Fade type	Default value
1	0-255	Red Intensity 0-100%	Fade	0
2	0-255	Green Intensity 0-100%	Fade	0
3	0-255	Blue 0-100%	Fade	0

2-segment Mode (1 ft. models only) – 6 DMX channels

Channel	DMX Value	Function	Fade type	Default value
Segment 1				
1	0-255	Red Intensity 0-100%	Fade	0
2	0-255	Green Intensity 0-100%	Fade	0
3	0-255	Blue Intensity 0-100%	Fade	0
Segment 2				
4	0-255	Red Intensity 0-100%	Fade	0
5	0-255	Green Intensity 0-100%	Fade	0
6	0-255	Blue Intensity 0-100%	Fade	0

4-segment Mode (4 ft. models only) – 12 DMX channels

Channel	DMX Value	Function	Fade type	Default value
Segment 1				
1	0-255	Red Intensity 0-100%	Fade	0
2	0-255	Green Intensity 0-100%	Fade	0
3	0-255	Blue Intensity 0-100%	Fade	0
Segment 2				
4	0-255	Red Intensity 0-100%	Fade	0
5	0-255	Green Intensity 0-100%	Fade	0
6	0-255	Blue Intensity 0-100%	Fade	0
Segment 3				
7	0-255	Red Intensity 0-100%	Fade	0
8	0-255	Green Intensity 0-100%	Fade	0
9	0-255	Blue Intensity 0-100%	Fade	0
Segment 4				
10	0-255	Red Intensity 0-100%	Fade	0
11	0-255	Green Intensity 0-100%	Fade	0
12	0-255	Blue Intensity 0-100%	Fade	0

8-segment Mode (4 ft. models only) – 24 DMX channels

Channel	DMX Value	Function	Fade type	Default value
Segment 1				
1	0-255	Red Intensity 0-100%	Fade	0
2	0-255	Green Intensity 0-100%	Fade	0
3	0-255	Blue Intensity 0-100%	Fade	0
Segment 2				
4	0-255	Red Intensity 0-100%	Fade	0
5	0-255	Green Intensity 0-100%	Fade	0
6	0-255	Blue Intensity 0-100%	Fade	0
Segment 3				
7	0-255	Red Intensity 0-100%	Fade	0
8	0-255	Green Intensity 0-100%	Fade	0
9	0-255	Blue Intensity 0-100%	Fade	0
Segment 4				
10	0-255	Red Intensity 0-100%	Fade	0
11	0-255	Green Intensity 0-100%	Fade	0
12	0-255	Blue Intensity 0-100%	Fade	0
Segment 5				
13	0-255	Red Intensity 0-100%	Fade	0
14	0-255	Green Intensity 0-100%	Fade	0
15	0-255	Blue Intensity 0-100%	Fade	0
Segment 6				
16	0-255	Red Intensity 0-100%	Fade	0
17	0-255	Green Intensity 0-100%	Fade	0
18	0-255	Blue Intensity 0-100%	Fade	0
Segment 7				
19	0-255	Red Intensity 0-100%	Fade	0
20	0-255	Green Intensity 0-100%	Fade	0
21	0-255	Blue Intensity 0-100%	Fade	0
Segment 8				
22	0-255	Red Intensity 0-100%	Fade	0
23	0-255	Green Intensity 0-100%	Fade	0
24	0-255	Blue Intensity 0-100%	Fade	0

CTC models

Color Temperature Control (variable CT white) models offer 0 to 100% intensity control and color temperature control from 2700 K to 6500 K in 50 K steps. The following DMX control modes are available:

All models

- **Standard mode** gives 16-bit control of overall fixture intensity and a CTC channel with color temperature variable from 2700 K to 6500 K in 50 K steps.

4 ft. models

- **8-segment mode** (8 x 15 cm/6 in. segments)
- **4-segment mode** (4 x 30 cm/1 ft. segments)
- **1-segment mode** (1 x 120 cm/4 ft. segment)

give raw control of 2700 K, 4000 K and 6500 K white LEDs, allowing flexible control of color temperature and intensity.

1 ft. models

- **2-segment mode** (2 x 15 cm/6 in. segments)
- **1-segment mode** (1 x 30 cm/1 ft. segment)

give raw control of 2700 K, 4000 K and 6500 K white LEDs, allowing flexible control of color temperature and intensity.

Standard Mode – 3 DMX channels

Channel	DMX Value	Function	Fade type	Default value
1 and 2	0-65535	Dimmer Overall intensity 0 – 100%	Fade	0
3	0-51 52 53-77 78 79-127 128-255	Color Temperature Control 2700 K 2700 K 2750 K to 3950 K in 50 K steps 4000 K 4050 K to 6450 K in 50 K steps 6500 K	Fade	78

1-segment Mode – 3 DMX channels

Channel	DMX Value	Function	Fade type	Default value
1	0-255	2700 K Intensity 0-100%	Fade	0
2	0-255	4000 K Intensity 0-100%	Fade	0
3	0-255	6500 K Intensity 0-100%	Fade	0

2-segment Mode (1 ft. models only) – 6 DMX channels

Channel	DMX Value	Function	Fade type	Default value
Segment 1				
1	0-255	2700 K Intensity 0-100%	Fade	0
2	0-255	4000 K Intensity 0-100%	Fade	0
3	0-255	6500 K Intensity 0-100%	Fade	0
Segment 2				
4	0-255	2700 K Intensity 0-100%	Fade	0
5	0-255	4000 K Intensity 0-100%	Fade	0
6	0-255	6500 K Intensity 0-100%	Fade	0

4-segment Mode (4 ft. models only) – 12 DMX channels

Channel	DMX Value	Function	Fade type	Default value
Segment 1				
1	0-255	2700 K Intensity 0-100%	Fade	0
2	0-255	4000 K Intensity 0-100%	Fade	0
3	0-255	6500 K Intensity 0-100%	Fade	0
Segment 2				
4	0-255	2700 K Intensity 0-100%	Fade	0
5	0-255	4000 K Intensity 0-100%	Fade	0
6	0-255	6500 K Intensity 0-100%	Fade	0
Segment 3				
7	0-255	2700 K Intensity 0-100%	Fade	0
8	0-255	4000 K Intensity 0-100%	Fade	0
9	0-255	6500 K Intensity 0-100%	Fade	0
Segment 4				
10	0-255	2700 K Intensity 0-100%	Fade	0
11	0-255	4000 K Intensity 0-100%	Fade	0
12	0-255	6500 K Intensity 0-100%	Fade	0

8-segment Mode (4 ft. models only) – 24 DMX channels


Channel	DMX Value	Function	Fade type	Default value
Segment 1				
1	0-255	2700 K Intensity 0-100%	Fade	0
2	0-255	4000 K Intensity 0-100%	Fade	0
3	0-255	6500 K Intensity 0-100%	Fade	0
Segment 2				
4	0-255	2700 K Intensity 0-100%	Fade	0
5	0-255	4000 K Intensity 0-100%	Fade	0
6	0-255	6500 K Intensity 0-100%	Fade	0
Segment 3				
7	0-255	2700 K Intensity 0-100%	Fade	0
8	0-255	4000 K Intensity 0-100%	Fade	0
9	0-255	6500 K Intensity 0-100%	Fade	0
Segment 4				
10	0-255	2700 K Intensity 0-100%	Fade	0
11	0-255	4000 K Intensity 0-100%	Fade	0
12	0-255	6500 K Intensity 0-100%	Fade	0
Segment 5				
13	0-255	2700 K Intensity 0-100%	Fade	0
14	0-255	4000 K Intensity 0-100%	Fade	0
15	0-255	6500 K Intensity 0-100%	Fade	0
Segment 6				
16	0-255	2700 K Intensity 0-100%	Fade	0
17	0-255	4000 K Intensity 0-100%	Fade	0
18	0-255	6500 K Intensity 0-100%	Fade	0
Segment 7				
19	0-255	2700 K Intensity 0-100%	Fade	0
20	0-255	4000 K Intensity 0-100%	Fade	0
21	0-255	6500 K Intensity 0-100%	Fade	0
Segment 8				
22	0-255	2700 K Intensity 0-100%	Fade	0
23	0-255	4000 K Intensity 0-100%	Fade	0
24	0-255	6500 K Intensity 0-100%	Fade	0

RDM functions

Exterior Linear Pro fixtures support the following RDM PIDs:

PID	Name	Description	GET	SET
Device discovery				
0x0001	DISC_UNIQUE_BRANCH	Fixture discovery	N/A	N/A
0x0002	DISC_MUTE	Fixture discovery	N/A	N/A
0x0003	DISC_UN_MUTE	Fixture discovery	N/A	N/A
Device information				
0x0060	DEVICE_INFO	Get basic fixture info	✓	
0x0080	DEVICE_MODEL_DESCRIPTION	Product Name	✓	
0x0081	MANUFACTURER_LABEL	Manufacturer Name	✓	
0x0082	DEVICE_LABEL	Info label (user-settable)	✓	✓
0x8003	FIXTURE_ID	Fixture number (user- settable)	✓	✓
0x8700	SERIAL_NUMBER	Fixture serial number	✓	
0x00C0	SOFTWARE_VERSION_LABEL	Firmware version	✓	
0x0200	SENSOR_DEFINITION	Sensor description	✓	
0x0201	SENSOR_VALUE	Sensor value	✓	✓
0x0400	DEVICE_HOURS	Fixture hours (non-resettable)	✓	✓
0x0401	LAMP_HOURS	LED hours (non-resettable)	✓	✓
0x0405	DEVICE_POWER_CYCLES	Fixture power cycles (non-resettable)	✓	✓
DMX setup				
0x00E0	DMX_PERSONALITY	DMX mode	✓	✓
0x00E1	DMX_PERSONALITY_DESCRIPTION	DMX mode details	✓	
0x00F0	DMX_START_ADDRESS	DMX start address	✓	✓
0x0121	SLOT_DESCRIPTION	DMX channel details	✓	
Device management				
0x0050	SUPPORTED_PARAMETERS	Parameter discovery	✓	
0x0051	PARAMETER_DESCRIPTION	Parameter discovery	✓	
0x0090	FACTORY_DEFAULTS	Reset to factory defaults	✓	✓
0x1000	IDENTIFY_DEVICE	Identify fixture in rig	✓	✓
0x1001	RESET_DEVICE	Reset fixture		✓
0x1020	PERFORM_SELFTEST	Run self-test	✓	✓
0x1021	SELF_TEST_DESCRIPTION	Self-test description	✓	
0x8004	COLOR_MODE	Set color mode	✓	✓
0x8310	DIMMER_CURVE	Set dimmer curve	✓	✓
0x832F	PIXEL_FLIP	Invert order of segments	✓	✓
0x8335	POWER_LIMIT_MODE	Max. power per foot setting	✓	✓
Status messages				
0x0020	QUEUED_MESSAGE	Get Queued Messages	✓	
0x0030	STATUS_MESSAGES	Get Status/Error Information	✓	
0x0031	STATUS_ID_DESCRIPTION	Status/Error Description	✓	
0x0032	CLEAR_STATUS_ID	Clear Status/Error Queue	✓	✓

PID	Name	Description	GET	SET
Standalone operation				
0x1030	CAPTURE_PRESET	Capture current DMX values for use as standalone preset		✓
0x1031	PRESET_PLAYBACK	Play back standalone preset	✓	✓
0x8220	MANUAL_MODE_OVERRIDE	Remote manual control	✓	✓
0x810B	PRESET_PLAYBACK_LIMIT	Standalone cue counter	✓	✓
0x8101	SYNCHRONIZED	Sync mode in standalone	✓	✓
0x810C	OFFLINE_MODE	Set behavior when DMX stops	✓	✓

 	Disposing of this product Martin® products are supplied in compliance with Directive 2012/19/EC of the European Parliament and of the Council of the European Union on WEEE (Waste Electrical and Electronic Equipment), where applicable. Help preserve the environment! Ensure that this product is recycled at the end of its life. Your supplier can give details of local arrangements for the disposal of Martin products
---	--

See the Safety and Installation Manual for details of product compliance with standards, FCC rules etc.

Exterior Linear Pro Series

Exterior Linear Pro QUAD Cove and QUAD Graze Exterior
Linear Pro QUAD DV

Exterior Linear Pro CTC Cove and CTC Graze

Safety and Installation manual

Avec consignes de sécurité en français
Mit Sicherheitshinweise auf Deutsch

QUAD Cove



QUAD Graze



QUAD DV



CTC Cove



CTC Graze



Junction Box Power DMX to PD



Martin[®]
by HARMAN

Table of contents

Dimensions.....	3
Safety information	8
Précautions d'emploi	11
Sicherheitshinweise.....	14
Introduction.....	17
General information	17
Before using the product for the first time.....	17
Physical installation.....	18
Fixture location	18
Mounting the fixture	18
Mounting bracket accessories	19
AC power and data connection	21
Power requirements	21
Safety limits for chains of fixtures	21
System layout.....	22
Connecting via the Martin Junction Box	22
Interconnecting a chain of fixtures	23
Data network requirements	24
Installation physique.....	25
Placement de l'appareil.....	25
Fixation de l'appareil.....	25
Accessoires de pose.....	26
Alimentation et télécommande.....	28
Prérequis pour l'alimentation électrique	28
Limites de sécurité pour la connexion en cascade.....	28
Principe de raccordement	29
Connexion au boîtier Martin Junction Box.....	29
Interconnexion d'appareils en cascade	30
Montage	31
Auswahl des Montageorts	31
Montage des Gerätes	31
Montagezubehör.....	32
Stromquelle und Datenverbindung	34
Anforderungen an die Stromquelle	34
Sicherheitshinweise zur Verbindung von Geräten	34
Topographie des Systems.....	35
Anschluss mit Hilfe der Martin Verbindungsbox.....	35
Verbindung der Geräte.....	36
Accessories	37
Installing a glare shield.....	37
Installing a louvre.....	37
Installing a microlens diffuser (Graze fixtures only).....	37
Maintenance	38
Running test sequences.....	38
Managing humidity.....	39
Cleaning.....	39

©2022 HARMAN PROFESSIONAL DENMARK ApS. All rights reserved. Features, specifications and appearance are subject to change without notice. HARMAN PROFESSIONAL DENMARK ApS and all affiliated companies disclaim liability for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this document. Martin is a registered trademark of HARMAN PROFESSIONAL DENMARK ApS registered in the United States and/or other countries.

HARMAN PROFESSIONAL DENMARK ApS, Olof Palmes Allé 44, 8200 Aarhus N, Denmark
HARMAN PROFESSIONAL SOLUTIONS U.S., 8500 Balboa Blvd., Northridge CA 91329, USA


www.martin.com

Exterior Linear Pro Series Safety and Installation Manual Revision A


Dimensions

All dimensions are given in millimeters


Exterior Linear Pro QUAD Graze, QUAD Cove and CT 1 ft.

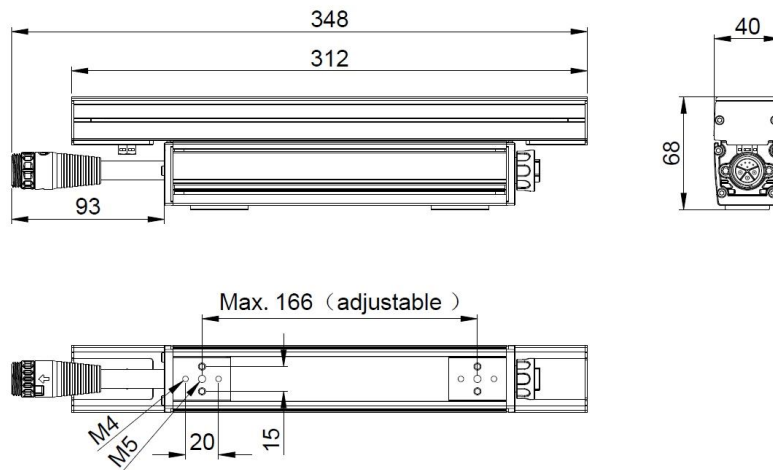


Exterior Linear Pro QUAD Graze, QUAD Cove and CT 1 ft. with mounting bracket accessories

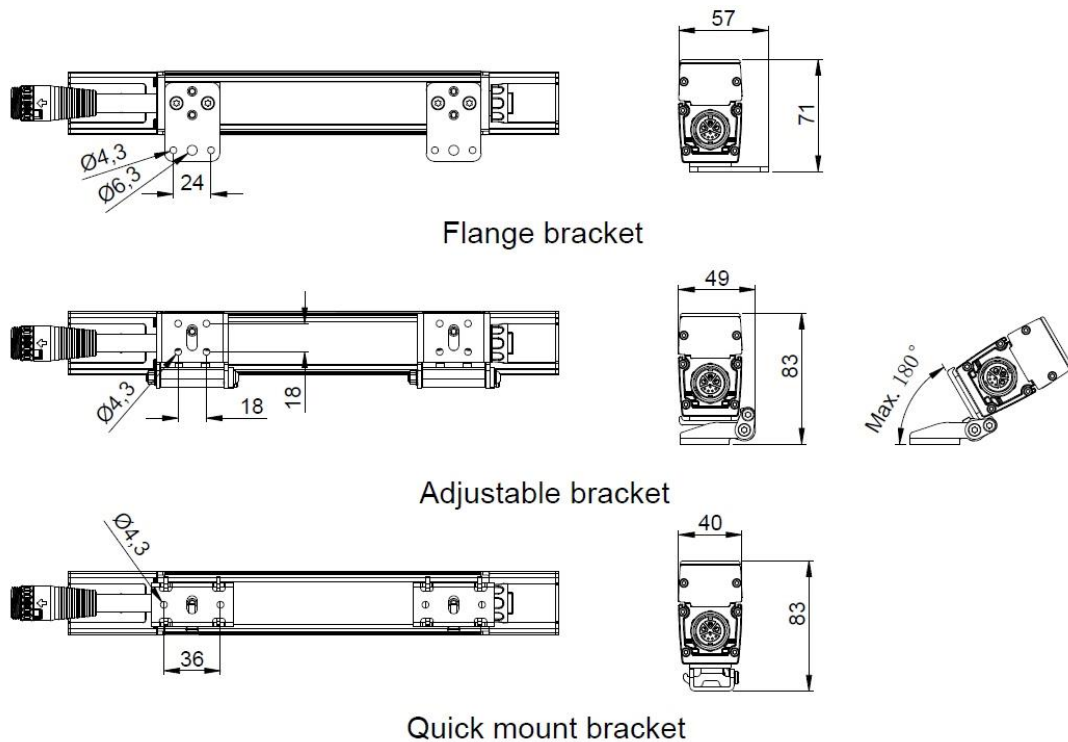


Exterior Linear Pro QUAD Graze, QUAD Cove and CT 4 ft.

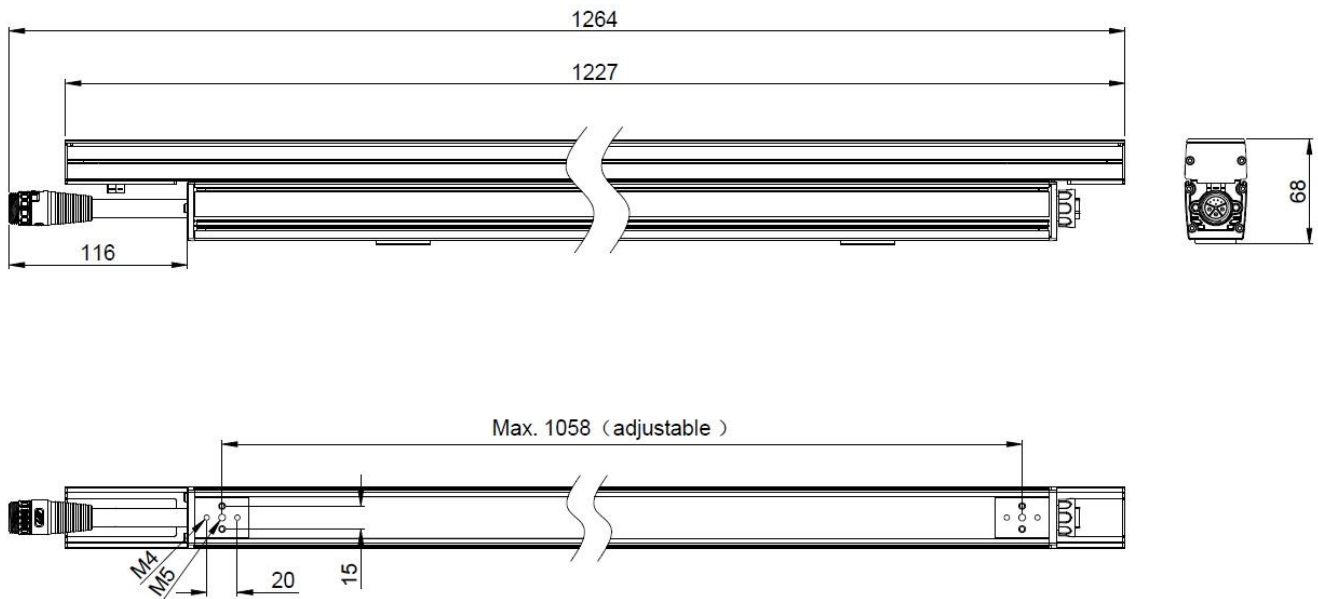


Exterior Linear Pro QUAD Graze, QUAD Cove and CT 1 ft. With mounting bracket accessories

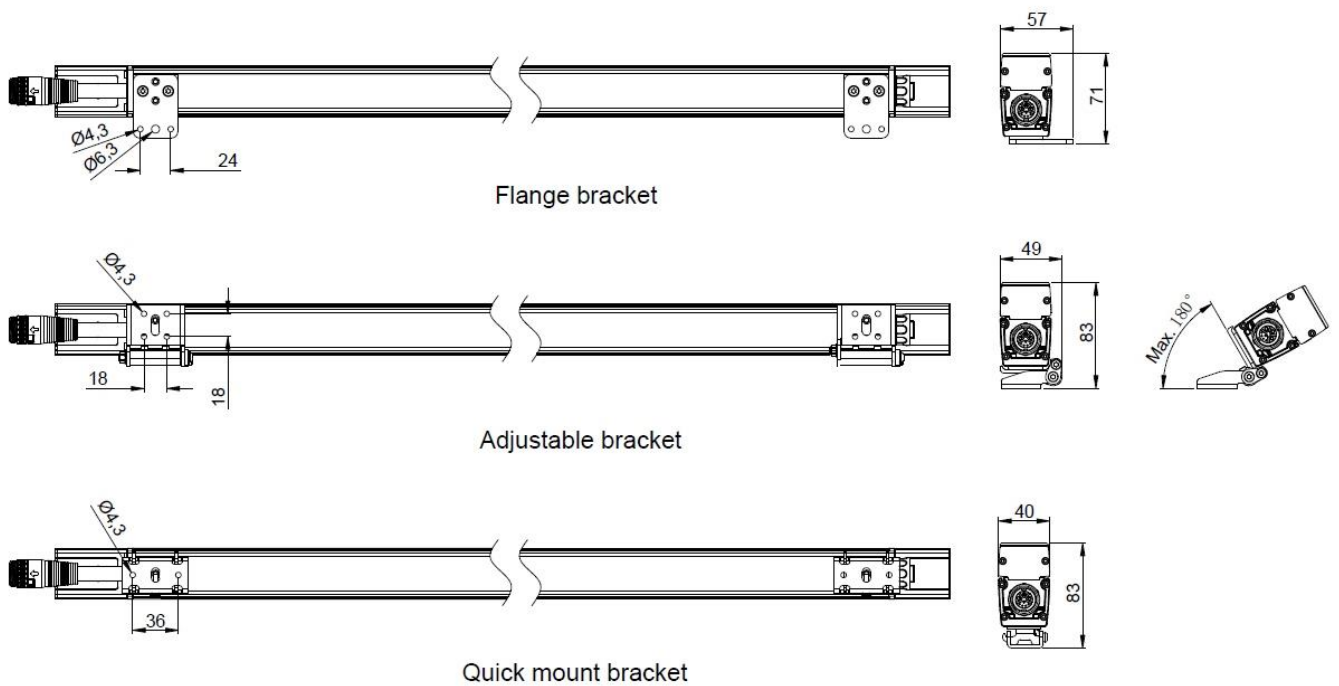



Exterior Linear Pro QUAD DV 1 ft.

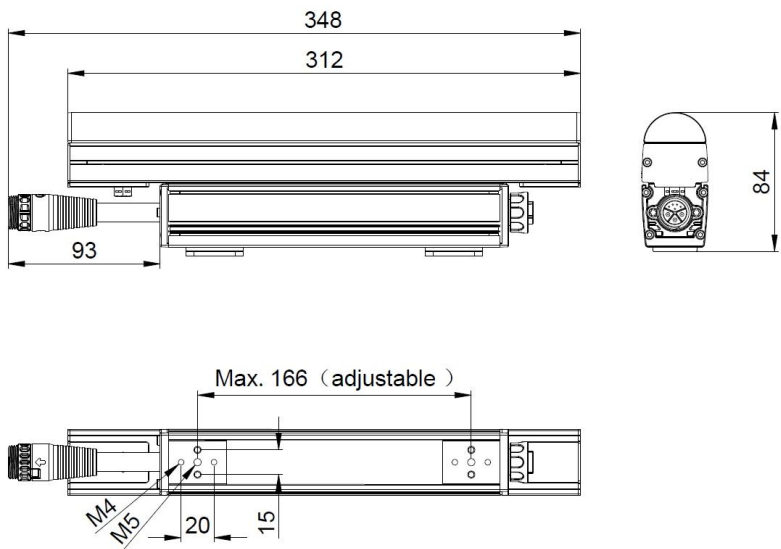




**Exterior Linear Pro QUAD DV 1 ft.
with mounting bracket accessories**

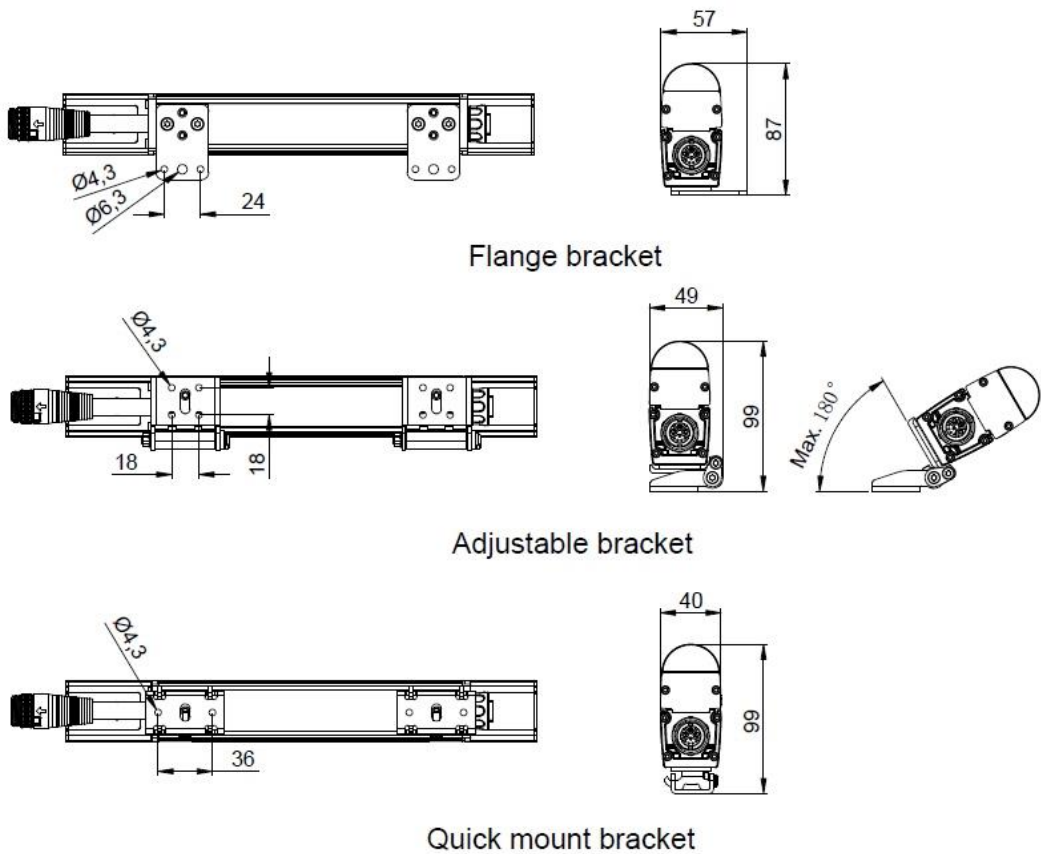

Exterior Linear Pro QUAD DV 4 ft.

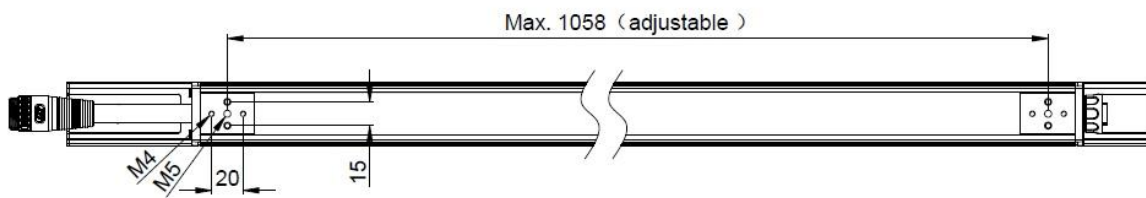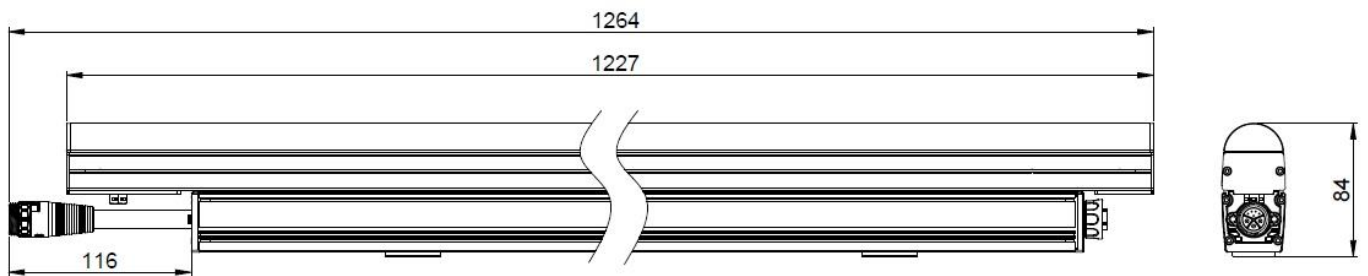


Exterior Linear Pro QUAD DV 4 ft. with mounting bracket accessories

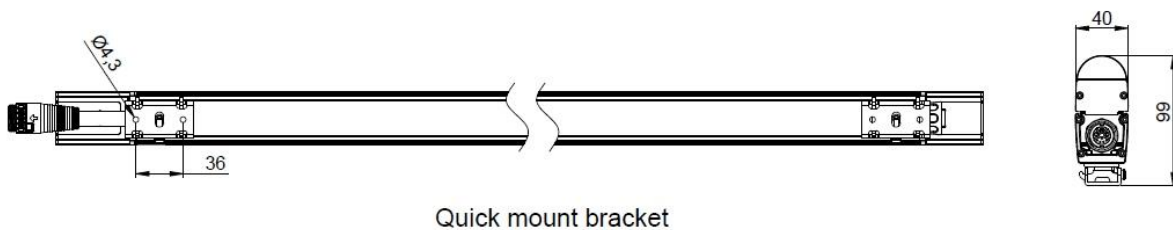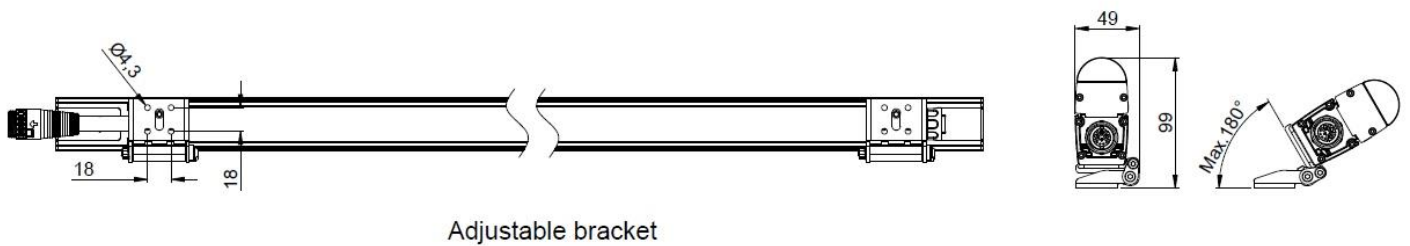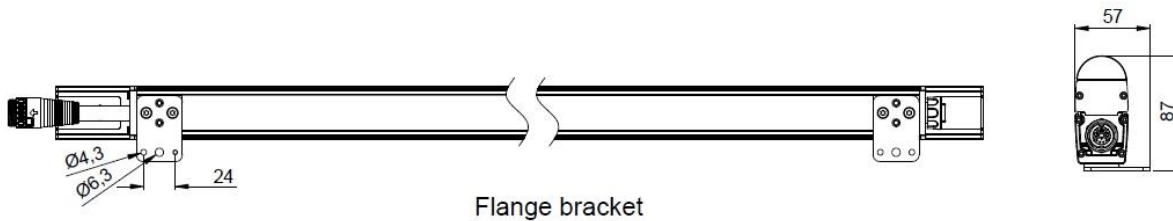


Accessories


Flange bracket

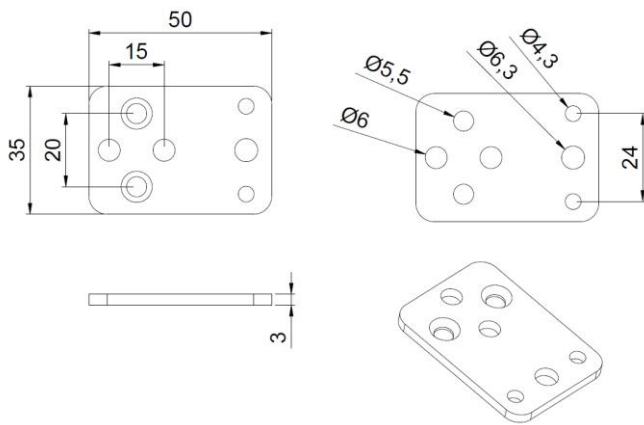


Junction box, power DMX to PD

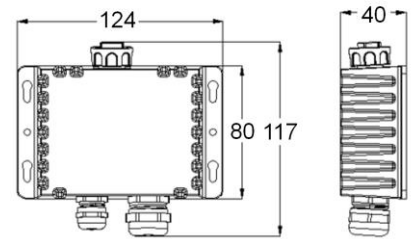

Quick mount bracket

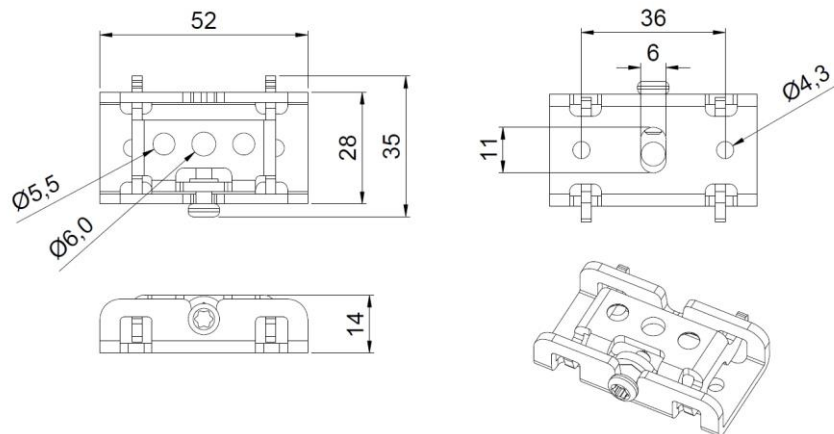

Adjustable bracket

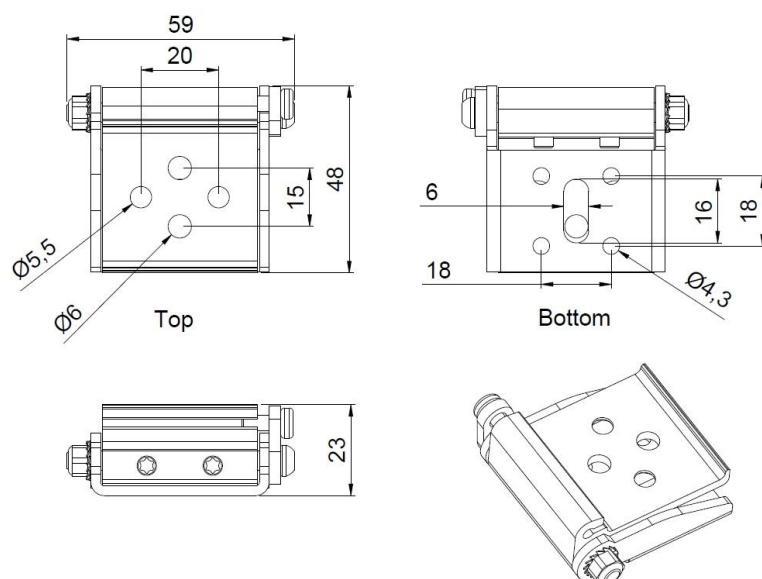

Safety information



WARNING!

Read the safety precautions in this manual before installing, operating or servicing this product.

The following symbols are used to identify important safety information on the product and in this manual:



Warning!

Safety hazard. Risk of severe injury or death.



Warning!

Powerful light emission. Risk of eye injury.



Warning!

See user documentation for important safety information.



Warning!

Hazardous voltage. Risk of lethal or severe electric shock.



Warning!

Fire hazard.



Warning!

Hot surfaces.



Warning! Risk Group 2 product according to EN 62471. This product produces intense light output that may be hazardous if suitable precautions are not taken. Do not view the light output with optical instruments or any device that may concentrate the beam. Do not stare directly into the beam.

This product presents risks of severe injury or death due to fire and burn hazards, electric shock and falls if the safety precautions in this manual are not followed.



Read this manual before installing, powering or servicing the fixture. Follow the safety precautions and note all warnings and information in this Safety and Installation Manual, in the Exterior Linear Pro User Manual and printed on the fixture.

The latest versions of this Safety and Installation Manual and the Exterior Linear Pro User Manual are available for download from the Exterior Linear Pro area of the Martin® website at www.martin.com. Before you install, operate or service the fixture, check the Martin website and make sure that you have the latest user documentation for the fixture. Document revisions are indicated at the bottom of page 2.

This product is for professional use only. It is not for household use. Respect all locally applicable laws, codes and regulations when installing, powering, operating or servicing the fixture. Install, operate and service Martin products and accessories only as directed in their user documentation, or you may create a safety hazard or cause damage that is not covered by product warranties.

The latest software, manuals and other documentation for all Martin products are available for download at www.martin.com

Technical Support

If you have questions about how to install or operate the fixture safely, please contact Harman Professional Technical support:

- For technical support in North America, please contact ProTechSupportUSA@harman.com, phone: (844) 776-4899
- For technical support outside North America, please contact your national distributor.



Protection from electric shock

Ensure that the fixture is electrically connected to ground (earth).

Disconnect the fixture from AC power when not in use.

Shut down power to the entire installation at the main power distribution board and lock out power before connecting or disconnecting cables and before carrying out any other installation or maintenance work.

Do not connect or disconnect a live hybrid (power + data) cable.

The fixture accepts AC power at 100 - 277 V nominal, 50 or 60 Hz. Do not connect it to power at any other voltage or frequency.

Use only a source of AC power that complies with local building and electrical codes and has both overload and ground-fault (earth-fault) protection.

Isolate the fixture from power immediately if any seal, cover, cable, or other component is damaged, defective, deformed or showing signs of overheating. Do not reapply power until repairs have been completed.

Before using the fixture, check that all power distribution equipment and cables are in perfect condition, are rated for the current requirements of all connected devices, are protected to IP66 minimum and are of suitable type for the location (including water, pollution, temperature and UV resistance).

Do not immerse the fixture in water or any other fluid.

Do not install the fixture in a location where flooding may occur.

Do not open the fixture or remove any cover. Refer any service operation not described in this manual to an authorized Martin Service partner.

The light source in this fixture is not user-replaceable. When the light source LEDs reach the end of their service life, they may be replaced only by Martin Service or an authorized Martin Service agent.

The external flexible cable (cord) of this fixture cannot be replaced. If the cord is damaged, the fixture must be sent to Martin Service or an authorized Martin Service agent for repair.



Protection from burns and fire

Do not operate the fixture if the ambient temperature (T_a) exceeds 45° C (113° F).

The surface of the fixture can reach up to 65° C (149° F) if the fixture is operated at the maximum permitted ambient temperature. Ensure that accidental physical contact with the fixture is impossible. Allow the fixture to cool for at least 5 minutes before handling.

Do not aim the fixture towards combustible materials (fabric, wood, paper etc.) that are within 10 cm (4 in.) of the fixture.

Keep the fixture well away from flammable materials (volatile liquids etc.).

Allow at least 10 cm (4 in.) free space around the fixture. Ensure that there is free and unobstructed airflow around the fixture.


Do not attempt to bypass thermostatic switches or fuses.

Do not modify the fixture in any way not described in this manual or install other than genuine Martin parts. Do not stick filters, masks or other materials onto any lens or other optical component. Use only accessories approved by Martin to modify the light output.



Protection from eye injury

Exterior Linear Pro fixtures fall into the following risk groups according to EN 62471 at the distances indicated:

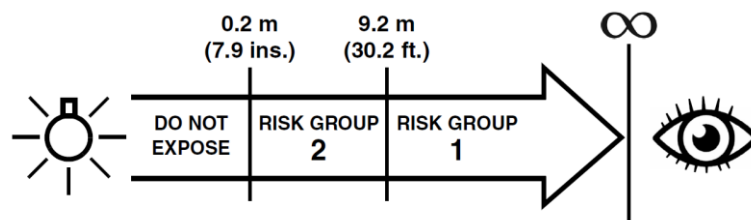

The risk group distances given above apply to the light output from one fixture only. If fixtures are operated in combination, light intensity can increase. In this case consult a lighting professional for safety recommendations.

Position the fixture so that prolonged staring into the light output at less than 9.2 m (30.2 ft.) from the fixture is not expected.

Do not look directly into the fixture's light output.

Do not look at the light output with magnifiers, telescopes, binoculars or similar optical instruments that may concentrate the light output.

Ensure that persons are not looking directly into the front of the fixture when the product lights up suddenly. This can happen when power is applied, when the product receives a DMX signal, or when an RDM command is sent to the fixture.

Shut down power to the fixture when the fixture is not in use.

Provide well-lit conditions to reduce the pupil diameter of anyone working on or near the fixture.

Wear protective glasses and other PPE (personal protective equipment) when working on or near the fixture.



Protection from injury

Fasten the fixture securely to a fixed surface or structure when in use. The fixture is not portable when installed.

The EPA (Effective Projected Area) of all fixtures in the Exterior Linear Pro series is 0.04 m² (0.44 ft.²) per foot (300 mm) of fixture length. Use this figure as a starting point when calculating the wind resistance requirements of supporting structures.

The weight of the fixtures in the Exterior Linear Pro series is as follows:

- All models, 1.02 ft. (312 mm) version: 0.85 kg (1.9 lbs.)
- All models, 4.02 ft. (1227 mm) version: 2.8 kg (6.2 lbs.)

Ensure that all supporting structures, surfaces, fasteners and lifting equipment can bear the weight of all the devices that they are intended to support plus an adequate safety margin, and that they conform to all local building and safety regulations.

Ensure that any accessory such as a glare shield is securely fastened so that it cannot fall, causing injury or damage.

Block access below the work area and work from a stable platform whenever installing, setting up, adjusting, servicing or cleaning the fixture.

Do not operate the fixture with missing or damaged covers, shields or any optical component.

If an operating problem occurs, stop using the fixture immediately and disconnect it from power. Do not attempt to use a fixture that is obviously damaged.

Précautions d'emploi



ATTENTION !

Lisez les précautions d'emploi de ce manuel avant d'installer, de mettre en service ou d'entretenir ce produit.

Les symboles suivants sont utilisés pour identifier les informations importantes de sécurité sur le produit comme au long du manuel :



Attention !

**Risque important.
Risque de blessure
sévère voire mortelle.**



Attention !

**Source de lumière
puissante.
Risque de lésions
oculaires.**



Attention !

**Reportez-vous
au manuel
pour les
précautions
d'emploi
importantes.**



Attention !

**Tensions dangereuses.
Risque de blessure
sévère voire mortelle par
électrisation.**



Attention !

**Risque
d'incendie.**



Attention !

**Surfaces
brûlantes.**



Attention ! Produit de groupe de risque 2 selon EN 62471. Cet appareil produit une lumière intense qui peut être dangereuse si les précautions nécessaires ne sont pas mises en œuvre. Ne fixez pas la source du faisceau avec un instrument optique ou tout appareil qui concentrerait la lumière. Ne fixez pas le fond du faisceau.



Ce produit présente des risques de blessures sérieuses voire mortelles par brûlures, incendie, électrisation et chute de hauteur si les précautions d'emploi ci-après ne sont pas respectées.

Lisez ce manuel avant d'installer et de mettre en service l'appareil ou d'en commencer la maintenance. Suivez les mises en garde listées ci-dessous et respectez tous les avertissements imprimés dans ce Guide de sécurité et d'installation, dans le Manuel d'utilisation et sur l'appareil lui-même.

Les dernières versions de ce Guide d'installation et de sécurité et du Guide de l'utilisateur sont disponibles en téléchargement depuis la rubrique consacrée à l'Exterior Linear Pro du site web de Martin® : www.martin.com. Avant d'installer ou de mettre en service l'appareil ou d'en faire la maintenance, consultez le site web de Martin et vérifiez que vous avez la dernière version de la documentation de l'utilisateur. Les indices de revision sont indiqués en bas de la page 2.

Ce produit est réservé à un usage professionnel uniquement. Il n'est pas destiné à un usage domestique. Respectez tous les codes, normes et réglementations locaux en vigueur lors de l'installation, la mise sous tension, l'utilisation et l'entretien du produit. L'installation, l'utilisation et l'entretien des produits et accessoires Martin doivent être effectués selon les consignes de leur documentation. Tout manquement peut s'avérer dangereux et provoquer des dégâts non couverts par la garantie du produit.

Les derniers logiciels, manuels et autres documents de tous les produits Martin sont disponibles au téléchargement à l'adresse www.martin.com.

Assistance technique

Pour toute question sur l'utilisation de ce produit en toute sécurité, contactez l'assistance technique professionnelle de Harman

- Pour l'Amérique du Nord, contactez ProTechSupportUSA@harman.com, Tel : (844) 776-4899
- Pour le reste du monde, contactez votre distributeur national.



Protection contre les électrisations

Assurez-vous que l'appareil est correctement raccordé à la terre électrique.

Déconnectez l'alimentation électrique lorsque le système n'est pas utilisé.

Coupez l'alimentation de toute l'installation au TGBT et consignez les disjoncteurs avant de connecter ou déconnecter des câbles, d'entamer toute installation ou toute maintenance.

Ne connectez ou déconnectez jamais un câble hybride Alimentation+Télécommande en charge.

L'appareil accepte une tension alternative comprise entre 100 et 277 V nominale sous 50 ou 60 Hz. Ne connectez pas l'appareil sur une source hors de ces plages.

N'utilisez qu'une source de courant alternatif conforme aux normes électriques en vigueur et protégée contre les surintensités et les défauts différentiels.

Isolez immédiatement l'appareil du secteur si un joint, un carter, un câble ou tout autre composant est visiblement endommagé, défectueux, déformé, humide ou semble avoir surchauffé. Ne remettez pas le système sous tension tant que toutes les réparations n'ont pas été effectuées.

Avant d'utiliser l'appareil, vérifiez que les équipements et câbles de distribution électrique sont en parfaite condition et homologués pour les besoins électriques des appareils connectés. Vérifiez que leur indice de protection est au moins IP67 et sont adaptés au lieu d'installation (y compris immunité à l'eau, à la pollution, aux températures et aux UV).

N'immergez pas l'appareil dans l'eau ou dans tout autre fluide.

N'installez pas l'appareil dans une zone inondable.

N'ouvrez pas l'appareil et ne retirez aucun carter. Référez tout entretien non décrit dans ce manuel à un service technique agréé Martin.

La source contenue dans cet appareil ne peut pas être remplacée par l'utilisateur. Quand la source LED atteint sa fin de vie, elle peut être remplacée uniquement par Martin Service ou par ses agents techniques agréés.

Le cordon souple externe de l'appareil ne peut pas être remplacé. S'il est endommagé, l'appareil doit être envoyé à Martin Service ou à un agent technique agréé par Martin Service.



Protection contre les brûlures et les incendies

N'utilisez pas l'appareil si la température ambiante (T_a) dépasse 45° C (113° F).

La surface de l'appareil peut atteindre 65° C (149° F) si l'appareil est utilisé à la température ambiante maximale permise. Assurez-vous que tout contact même accidentel avec l'appareil est impossible. Laissez l'appareil refroidir au moins 5 minutes avant de le manipuler.

Maintenez les matériaux inflammables (volatiles, liquides ...) très éloignés de l'appareil.

Ne braquez pas l'appareil vers des matériaux combustibles (tissus, papiers, bois...) situés à moins de 100 mm (4 in.) de l'appareil.

Maintenez un espace libre autour de l'appareil de 10 cm (4 in.) au moins. Assurez-vous que l'air circule librement autour de l'appareil.


Ne contournez pas l'action des protections thermiques et des fusibles.

Ne modifiez pas l'appareil d'aucune manière et n'installez que des pièces détachées d'origine Martin. Ne collez pas de filtre, de masque ou tout autre composant optique. N'utilisez que des accessoires d'origine Martin pour modifier le faisceau.



Protection contre les lésions oculaires

La gamme Exterior Linear Pro relève du groupe de risques ci-dessous selon EN 62471 aux distances indiquées :

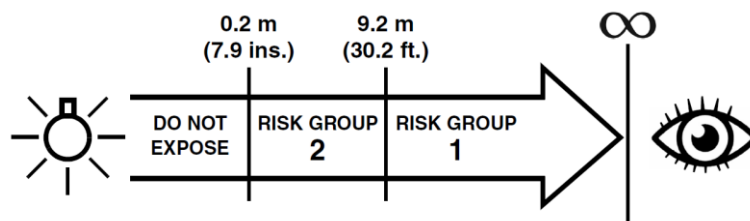

Les distances associées aux groupes de risqué ci-dessus sont données pour un appareil seulement. Si plusieurs appareils sont utilisés en combinaisons, l'intensité lumineuse peut augmenter. Dans ce cas, consultez un professionnel de l'éclairage pour une étude plus poussée.

Installez l'appareil de manière qu'il soit impossible de regarder la source d'une distance inférieure à 9.2 m (30.2 ft.).

Ne regardez pas directement la source de lumière.

Ne regardez pas les LEDs avec un instrument optique qui pourrait concentrer la lumière comme une loupe, un télescope ou des jumelles.

Assurez-vous que personne ne regarde l'appareil lorsque celui-ci risque de s'allumer subitement. Ceci peut se produire à la mise sous tension, lorsque l'appareil reçoit un signal DMX ou RDM.

Coupez l'alimentation de toute la zone quand les appareils ne sont pas utilisés.

Maintenez un éclairage suffisant dans la zone de travail afin de réduire le diamètre de pupille de toute personne travaillant sur ou à proximité de l'appareil.

Portez des lunettes de protection et tout autre EPI (Equipment de Protection Individuel) lorsque vous travaillez sur ou à proximité de l'appareil.



Protection contre les blessures

Fixez fermement l'appareil à une structure ou sur une surface lorsqu'il est en service. L'appareil n'est pas déplaçable pendant l'utilisation.

La Surface Effective Projetée de tous les appareils de la gamme Exterior Linear Pro est de 0,04 m² (0.44 ft.²) par pied linéaire (300 mm). Utilisez cette valeur de base comme point de départ pour le calcul de la résistance des systèmes de fixation et des structures de soutien.

Le poids des appareils de la gamme est donné ci-dessous :

- tous modèles, version 1.02 ft. (312 mm) : 0.85 kg (1.9 lbs.)
- tous modèles, version 4.02 ft. (1227 mm) : 2.8 kg (6.2 lbs.)

Assurez-vous que toutes les structures, surfaces et fixations ainsi que les appareils de levage acceptent le poids de tous les appareils qu'ils doivent supporter avec un facteur de marge adéquat et qu'ils sont conformes aux réglementations locales en vigueur pour le bâtiment et la sécurité.

Vérifiez que tous les accessoires externes comme les anti halo ou les lentilles diffuseur sont solidement attachés.

Interdisez l'accès sous la zone de travail et utilisez une plateforme stable lorsque vous installez, entretenez ou déplacez l'appareil.

N'utilisez pas l'appareil s'il manque des capots ou des composants optiques ou si ceux-ci sont endommagés.

En cas de problème de fonctionnement, arrêtez immédiatement l'appareil et déconnectez-le du secteur. N'essayez pas de mettre en service un appareil visiblement endommagé.

Sicherheitshinweise



WARNUNG!

Lesen Sie die Sicherheitshinweise in dieser Anleitung, bevor Sie das Produkt installieren, in Betrieb nehmen oder reparieren.

Die folgenden Symbole werden in dieser Anleitung und auf dem Produkt verwendet, um Sie auf besondere Sicherheitsinformationen hinzuweisen:



Warnung!

**Sicherheitsrisiko.
Verletzungs-/
Lebensgefahr.**



Warnung!

**Intensive
Lichtquelle.
Gefahr der
Augenver-
letzung.**



Warnung!

**Wichtiger
Hinweis.
Beachten Sie
die Anleitung.**



Warnung!

**Hochspannung.
Verletzungs- /
Lebensgefahr.**



Warnung!

Feuergefahr.



Warnung!

**Heiße
Oberfläche.**



Warnung! Gerät der Gefährdungsklasse 2 nach EN 62471. Dieses Gerät erzeugt einen starken Lichtstrahl, der gefährlich sein kann, wenn keine Vorsichtsmassnahmen getroffen werden. Blicken Sie nicht direkt oder mit sammelnden optischen Instrumenten oder Vorrichtungen in die Lichtquelle.



Von diesem Produkt gehen Verletzungsgefahren und Lebensgefahr durch Feuer und Verbrennung, elektrischen Schlag und Absturz aus, wenn die folgenden Sicherheitsvorschriften nicht beachtet werden.

Lesen Sie diese Anleitung, bevor Sie das Gerät installieren, verwenden oder reparieren. Befolgen Sie die Sicherheitshinweise und beachten Sie alle in diesen Sicherheits- und Installationshinweisen, der Exterior Linear Pro Anleitung oder auf dem Produkt gegebenen Warnungen.

Auf der Martin Webseite <http://www.martin.com> finden Sie die neueste Version dieser Sicherheits- und Installationshinweise, der Exterior Linear Pro Anleitung und weitere Informationen über dieses Produkt von Martin®. Prüfen Sie vor der Installation, der Verwendung oder der Reparatur des Geräts die Martin Webseite und stellen Sie sicher, dass Sie die neueste Version der Anwenderdokumentation dieses Gerätes verwenden. Die Version der Dokumente finden Sie auf Seite 2 des Dokuments.

Dieses Produkt ist für den professionellen Einsatz zugelassen. Die Verwendung in Haushalten ist unzulässig. Beachten Sie bei der Installation, dem Betrieb und der Reparatur des Geräts alle einschlägigen lokalen Gesetze, Vorschriften und Normen. Installieren, verwenden und reparieren Sie Martin Produkte und Zubehör nur, wie in der Anleitung beschrieben. Andernfalls erzeugen Sie ein Sicherheitsrisiko oder Schäden, die von der Gewährleistung ausgeschlossen sind.

Die neueste Software, Anwenderdokumentation und andere Dokumentation für alle Martin Produkte finden Sie zum Download auf der Martin Webseite www.martin.com.

Technische Unterstützung

Wenn Sie Fragen zum sicheren Einsatz des Gerätes haben, wenden Sie sich bitte an den technischen Support von Harman Professional:

- Kontakt für Unterstützung in Nordamerika: HProTechSupportUSA@harman.com
Phone: (844) 776-4899
- Für Unterstützung außerhalb Nordamerikas wenden Sie sich bitte an Ihren nationalen Distributor.



Schutz vor elektrischem Schlag

Erden Sie das Gerät immer elektrisch.

Trennen Sie das Gerät von der Stromquelle, wenn es nicht in Gebrauch ist.

Trennen Sie die gesamte Installation von der Stromquelle und sichern Sie gegen Wiedereinschalten, bevor Sie Reparatur- oder Wartungsarbeiten ausführen.

Das Gerät ist für den Netzspannungsbereich 100 – 277 V Wechselstrom, 50 oder 60 Hz Netzfrequenz geeignet. Verwenden Sie keine Stromquelle außerhalb dieser Spezifikation.

Verwenden Sie nur eine Stromquelle, die den lokalen elektrischen Sicherheitsvorschriften entspricht und mit einer Sicherung und einem Fehlerstrom-Schutzschalter (RCD) abgesichert ist.

Trennen Sie das Gerät sofort von der Stromquelle, wenn Dichtungen, die Netzleitung, Abdeckungen oder andere Komponenten beschädigt, defekt, verformt oder nass sind oder Zeichen von Überhitzung aufweisen. Verwenden Sie das Gerät erst wieder, wenn es repariert wurde.

Prüfen Sie vor Inbetriebnahme den einwandfreien Zustand aller Verteiler und Kabel. Die Installation muss für die Stromaufnahme aller angeschlossenen Geräte ausgelegt sein. Die Installation muss der Schutzart IP66 oder höher entsprechen und für die Umgebung (Wasser, Stäube, Temperatur und UV-Beständigkeit) ausgelegt sein.

Tauchen Sie das Gerät nicht in Wasser oder eine andere Flüssigkeit.

Installieren Sie es nicht in einer Umgebung, in der es überflutet werden kann.

Öffnen Sie das Gerät nicht. Entfernen Sie keine Abdeckung. Überlassen Sie alle Wartungsarbeiten, die nicht in dieser Anleitung beschrieben werden, einem autorisierten Martin Service-Partner.

Die flexible Anschlussleitung dieses Gerätes kann nicht ersetzt werden. Wenn die Leitung beschädigt ist, muss das Gerät vom Martin-Service oder einer autorisierten Martin Serviceniederlassung repariert werden.



Schutz vor Verbrennung und Feuer

Verwenden Sie das Gerät nicht bei Umgebungstemperaturen (T_a) über 45° C.

Bestimmte Teile des Gehäuses können während des Betriebs bei der höchsten zulässigen Umgebungstemperatur bis zu 65° C warm werden. Vermeiden Sie den unbeabsichtigten Kontakt mit Personen oder Objekten. Lassen Sie das Gerät mindestens 5 Minuten abkühlen, bevor Sie es berühren oder transportieren.

Richten Sie den Lichtstrahl nicht auf brennbares Material. Der Mindestabstand zu brennbarem Material (z.B. Kunststoff, Holz, Papier) beträgt 10 cm.

Halten Sie das Gerät von leicht entzündlichem Material fern.

Der Freiraum um das Gerät muss mindestens 10 cm betragen. Die Luft muss das Gerät frei umströmen können.


Überbrücken Sie niemals Temperaturschalter oder Sicherungen.

Verändern Sie das Gerät nicht anders, als in dieser Anleitung beschrieben. Verwenden Sie nur Original Martin Komponenten. Bedecken Sie die optischen Komponenten nicht mit Filtern, Masken oder anderem Material. Verwenden Sie nur von Martin freigegebenes Zubehör zur Formung des Lichtstrahls.



Schutz vor Augenverletzung

Exterior Linear Pro Geräte fallen gemäß der Definition der Risikogruppe der Normen EN 62471 bei folgenden Abständen in folgende Risikogruppen:

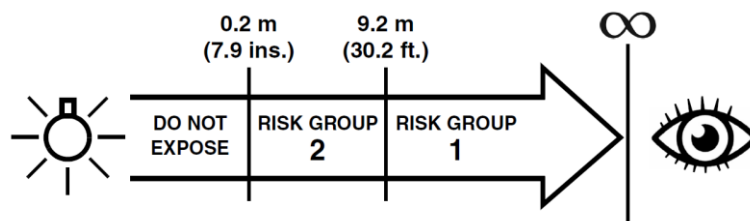

Die den Abständen entsprechenden Risikogruppen treffen auf einen Scheinwerfer zu. Wenn mehrere Geräte kombiniert verwendet werden, kann sich die Intensität erhöhen.

Wenden Sie sich in diesem Fall an einen Beleuchtungsfachmann, um den sicheren Betrieb zu gewährleisten.

Der Scheinwerfer soll so positioniert werden, dass längeres Blicken in den Lichtstrahl unter Entfernungen von 9,2 m nicht zu erwarten ist.

Blicken Sie nicht direkt in die Lichtaustrittsöffnung des Gerätes.

Blicken Sie nicht mit einer Lupe, einem Teleskop, Fernglas oder sammelndem optischen Instrument in die Lichtaustrittsöffnung.

Stellen Sie sicher, dass keine Personen direkt in die Lichtaustrittsöffnung des Scheinwerfers blicken können, wenn plötzlich Licht austreten könnte. Dies kann passieren, wenn das Gerät eingeschaltet wird, ein DMX oder RDM Signal empfängt.

Schützen Sie während der Installation oder Wartung die Augen durch helle Umgebungsbeleuchtung. Dadurch verringert sich der Pupillendurchmesser des Auges.

Tragen Sie eine Schutzbrille und weitere Schutzausrüstung, wenn Sie an oder in der Nähe des Gerätes arbeiten.



Schutz vor Verletzung

Befestigen Sie das Gerät während des Gebrauchs sicher an einer festen Oberfläche oder tragenden Struktur. Bewegen Sie das Gerät während des Gebrauchs nicht.

Die effektive projizierte Fläche aller Geräte der Exterior Linear Pro Serie beträgt 0,04 m² pro 300 mm Gerätelänge. Verwenden Sie diesen Wert als Grundlage, wenn Sie die Windlast der tragenden Struktur berechnen wollen.

Das Gewicht der Geräte der Exterior Linear Pro Serie beträgt:

- Alle Modelle mit 312 mm Länge: 0,85 kg
- Alle Modelle mit 1227 mm Länge: 2,8 kg

Die tragende Struktur, Oberfläche, Befestigungs- und Anschlagmittel müssen für das Gewicht aller daran befestigten Geräte ausgelegt sein. Sehen Sie einen ausreichenden Sicherheitszuschlag vor. Beachten Sie alle örtlichen Bau- und Sicherheitsvorschriften.

Zubehöre, wie Blendschutzvorrichtungen, müssen sicher befestigt sein, damit keine Verletzungen oder Sachschäden durch herabfallende Komponenten entstehen.

Sperren Sie den Bereich unterhalb des Geräts und arbeiten Sie von einer stabilen Plattform aus, wenn Sie das Gerät installieren, einstellen, einrichten oder reinigen.

Verwenden Sie das Gerät nicht, wenn Abdeckungen, Schutzvorrichtungen oder optische Komponenten fehlen oder beschädigt sind.

Trennen Sie das Gerät sofort von der Stromquelle, wenn während des Betriebs Probleme auftreten. Verwenden Sie kein Gerät, das offensichtlich beschädigt ist.

Introduction

The Exterior Linear Pro Series from Martin® is a line of rugged LED-based outdoor lighting fixtures that are available in the following configurations:

QUAD variants

Exterior Linear Pro QUAD variants feature RGBW LEDs and offer RGB control with automatic addition of White. They have a resolution of 8 x LEDs per foot (30 cm). QUAD fixtures have a dedicated color temperature control channel which accurately follows the black body curve and allows lighting designers to set their favorite default color temperature.

QUAD fixtures are available in the following models:

- Graze (15° native beam angle)
- Cove (100° native beam angle)
- DV (Direct View with round diffuser)

CTC variants

Exterior Linear Pro Controllable Color Temperature (CTC) variants feature even higher light quality and efficacy than QUAD variants. They offer white CT mixing with 3 x discrete color LEDs (2700 K, 4000 K and 6500 K) for high efficacy, with a resolution of 12 x LEDs per foot (30 cm).

CTC fixtures are available in the following models:

- Graze (9° native beam angle)
- Cove (100° native beam angle)

General information

Variants

All fixtures are available in 1.02 ft. (312 mm) and 4.02 ft. (1227 mm) lengths.

Besides these two length options, three types of fixture are available:

- Cove variants are designed for a range of indirect lighting applications.
- Graze variants are designed for illumination of walls or other surfaces.
- DV variants are designed for direct viewing and feature 6-inch (15 cm) segment control for low-resolution content.

Mounting brackets

Fixtures are supplied with sliding plates on the rear of the housing that accept the different types of mounting bracket that are available from Martin as accessories (see the Exterior Linear Pro area of the Martin website at www.martin.com for details). Brackets are sold separately from fixtures so that you can choose the type of bracket that best matches a specific installation or location. The sliding plate system also allows for easy design of custom brackets to cover special installation needs.

Asymmetric diffusers for Graze variants

Micro lens asymmetric diffuser film accessories are available for Graze variants only. The diffusers give additional beam angle options. See the photometrics information in the Exterior Linear Pro area of the Martin website at www.martin.com for details.

Before using the product for the first time

1. Read the 'Safety information' chapter starting on page 8 before installing, operating or servicing the fixture.
2. Unpack and ensure that there is no transportation damage before using the fixture. Do not attempt to operate a damaged fixture.
3. Before operating, ensure that the voltage and frequency of the power supply match the power requirements of the fixture.
4. If fixtures are exposed to a sudden temperature change, give them time to warm or cool to the ambient temperature before applying power. This will help avoid damage due to condensation.
5. Check the support pages on the Martin Professional website at www.martin.com for the most recent user documentation and technical information about the fixture. Martin user manual revisions are identified by the revision letter at the bottom of the inside cover.

Physical installation



Warning! Read the 'Safety information' chapter starting on page 8 before installing, operating or servicing the fixture.

Warning! The safety and suitability of lifting equipment, installation location, anchoring method, mounting hardware and electrical installation are the responsibility of the installer. All local safety regulations and legal requirements must be observed when installing and connecting the Exterior Linear Pro Series. Installation must be carried out by qualified professionals only.

Warning! Install the **Martin Junction Box Power Data to PD** so that cables enter it horizontally. This will minimize the risk of water pooling at cable glands.

Important! See the dimensions drawings at the beginning of this manual.

Important! Allow for thermal expansion by leaving 2 mm (0.08 in.) free space at the ends of fixtures and between fixtures installed in a line. The cable tails on fixtures are designed to give a distance of 2 - 3 mm between fixtures.

Contact your Martin supplier for assistance if you have any questions about how to install this fixture safely.

Fixture location

Exterior Linear Pro fixtures are intended for outdoor use. With an IP rating of 66, they are dust-resistant and able to withstand powerful water jets, but they are not submersible. Fixtures require free and unobstructed airflow around them to ensure adequate cooling.

Observe the following limitations in selecting a location:

- Respect the limitations listed in the 'Safety information' chapter starting on page 8.
- Do not allow water to collect on or near the pressure relief valve. Do not install the fixture in such a way that water can form a pool covering the valve membrane.
- Ensure sufficient drainage to cope with the heaviest rainfall. Make sure that water can drain away from the installation area at least as fast as it can enter it.
- Do not bury or locate the fixture in an unventilated space.
- If the fixture is operated at the maximum permitted ambient temperature, the housing can reach a temperature of up to 65° C (149° F). Restrict public access or locate the fixture so that it cannot accidentally be touched.

Mounting the fixture



Warning! All fasteners used to mount Exterior Linear Pro fixtures must be corrosion-resistant and strong enough to mount the fixture safely. Install a washer directly under the head of each fastener when anchoring mounting brackets to the installation surface.

Warning! When fastening fixtures to a surface or structure using the sliding plates in the back of fixtures, either alone or in combination with mounting brackets, use a minimum of two (2) sliding plates per fixture

The fixture can be mounted in any orientation.

The fixture and mounting brackets must be securely fastened to a suitable surface or structure that can safely support the weight of all fixtures, cables and accessories. using suitable mechanical fasteners. Do not stand a fixture on a surface or leave it where it can be moved or fall over. Fasteners must be high-strength, corrosion-resistant (recommended minimum properties: stainless steel A4-70 grade according to ISO 3506 or steel grade 8.8 according to ISO 898-1). Any nuts used must be self-locking.

Refer to 'Interconnecting a chain of fixtures' on page 23 when connecting each fixture's hybrid (power and data) input to the output of the previous fixture.

Leave a minimum of 2 mm (0.08 in.) free space at the end of each fixture and between fixtures installed in a line in order to allow for thermal expansion.

The fixture, sliding plates in the rear of the fixture, and mounting bracket accessories from Martin are manufactured in corrosion-resistant anodized aluminum. Avoid direct contact with other types of metal, as this can cause galvanic corrosion.

- When fastening a mounting bracket or fixture to a metal surface that is not anodized aluminum, use an electrically insulating material (such as rubber or plastic) or coating between the mounting bracket and the other metal.
- Use a non-conductive coating such as Delta Seal on fasteners (screws, bolts, washers, etc.) where they come into contact with the mounting bracket.

Installing fixtures will usually be easiest if you make the power/data connection each time you add a new fixture to the installation. See 'Interconnecting a chain of fixtures' on page 23.

Mounting bracket accessories

See illustration below. Exterior Linear Pro fixtures are supplied with sliding brackets A on the back of the fixture. The sliding brackets are designed to let you mount the fixture using the bracket accessories available from Martin (see the Exterior Linear Pro area of the Martin website at www.martin.com):

- Flange Brackets (B)
- Quick-Mount Brackets (C)
- Adjustable Brackets (D)

Before you install mounting bracket accessories on fixtures, plan the installation so that the sliding plates A in the back of fixtures will be evenly spaced with one plate close to each end of the fixture. Do not install the sliding plates where they will be exposed to significant lateral twisting forces (do not install two plates at one end of a fixture where the weight of the fixture will twist them, for example).

Fasten each sliding plate into its channel in the back of the fixture before you install a bracket accessory.



Figure 1. Mounting bracket accessories

Flange brackets

To mount the fixture using the Flange Brackets available from Martin for the Exterior Linear Pro:

1. See **B** in Figure 1. Fasten a flange bracket **B** securely to each sliding plate **A** in the back of the fixture using the two screws supplied with the bracket.
2. Hold the fixture up to the mounting surface or structure and fasten each flange bracket securely to the surface or structure using one or more suitable screws or bolts that can safely hold the weight that they will support. Check that the fixture is held safely and securely.
3. If convenient, prepare the connection to the next fixture.

Adjustable brackets

To mount the fixture using the adjustable brackets available from Martin for the Exterior Linear Pro:

1. See **D** in Figure 1. Fasten each adjustable bracket **D** securely to a sliding plate **A** in the back of the fixture using the two screws supplied with the bracket.
2. Hold the fixture up to the mounting surface and fasten each adjustable bracket securely to the mounting surface or structure using one or more suitable screws or bolts that can safely hold the weight that they will support.

3. See Figure 2. Tighten the Torx 20 locking screw **E** on both brackets to lock the brackets in position and hold the fixture securely at the desired angle. Check that the fixture is held safely and securely.
4. If the Adjustable Bracket ever becomes loose (this would only happen after several adjustments), tightening the Torx 25 pivot screw **F** will restore the correct tension.
5. If convenient, prepare the connection to the next fixture.

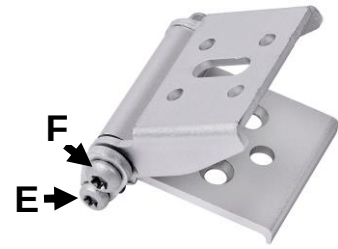


Figure 2. Adjustable Bracket locking screw

Quick-mount brackets

To mount the fixture using the Quick-mount Brackets available from Martin for the Exterior Linear Pro:

1. Use Figure 3. as a guide. Fasten each fixture bracket **H** securely to a sliding plate **A** in the back of the fixture using the two screws supplied with the bracket.
2. Mark up the mounting surface so that you can install wall brackets **G** on the surface. Make sure that you can line up each wall bracket **G** with a fixture bracket **H**. Install each wall bracket **G** securely on the mounting surface or structure using one or more suitable screws or bolts that can safely hold the weight that they will support.
3. Insert the hooks in each fixture bracket **H** into the corresponding cutouts in a wall bracket **G**, lift the fixture up so that the locking bolt **I** engages in the corresponding slot in the top of the wall bracket **G**.
4. Tighten the locking bolt **I** so that the fixture is held safely and securely.
5. If convenient, prepare the connection to the next fixture.

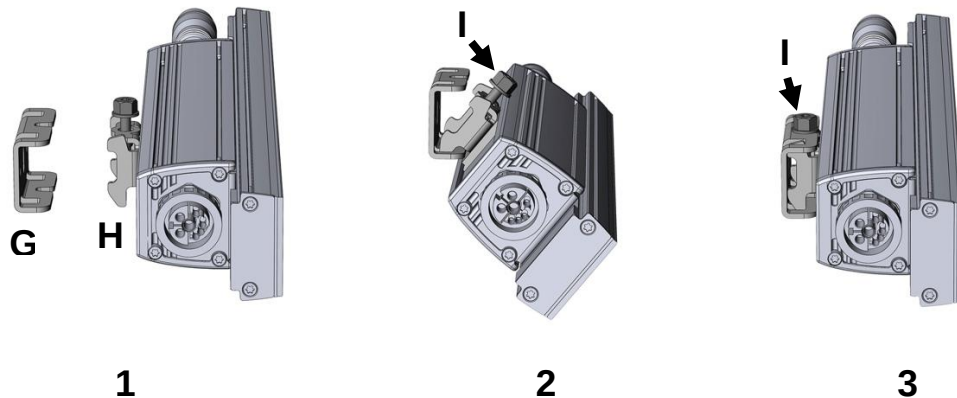


Figure 3. Quick-mount bracket installation

AC power and data connection



Warning! Read the 'Safety information' chapter starting on page 8 before installing, operating or servicing the fixture.

Warning! Make sure that cables from fixtures open into dry areas (e.g. junction boxes in dry locations). If there is a break or cut at any point in a cable (for example at a connection point), and if this is exposed to water, moisture can be drawn up the inside of the cable due to the vacuum effect of temperature fluctuations during operation. Ensure that the fixture is protected from the entry of water via the power cable by using IP66-rated connectors or junction boxes, or by protecting connectors with weatherproof housings.

Warning! There is no power on/off switch. Power is applied to the fixtures as soon as they are connected to power. Provide a means to disconnect or shut down power to fixtures that is easily accessible and is located close to the fixtures.

Important! Do not use an external dimming system to supply power to the fixture, as this may cause damage to the fixture that is not covered by the product warranty.

Power requirements

Exterior Linear Pro fixtures must be supplied with AC mains power at 100 - 277 V nominal, 50/60 Hz, using either a grounded single-phase (live, neutral, ground/earth) distribution system or one phase of a grounded three-phase (3 live phases, neutral, ground/earth) distribution system.

Safety limits for chains of fixtures



Warning! Read this section carefully and respect the safety limits given, or you may create a risk of fire or electric shock. Consult your Martin supplier if you have any questions about installation safety.

Maximum length of chain and number of fixtures


The maximum permitted total length of any line of fixtures that you can connect to AC mains power in one daisy-chain is 150 m (492 ft.), including fixtures and cable.

The maximum permitted total number of fixtures, excluding cable, that you can connect to AC mains power in one daisy-chain varies depending on the AC mains power voltage, length of the fixtures, the wattage mode of the fixtures and the DMX mode the fixtures are set to. The table below shows the maximum permitted number of fixtures per daisy-chain taking these factors into account:

AC mains power voltage	Number of fixtures in chain, 12-watt mode			Number of fixtures in chain, 10-watt mode			Number of fixtures in chain, 5-watt mode		
	DMX Mode	1ft.	4ft.	DMX Mode	1ft.	4ft.	DMX Mode	1ft.	4ft.
100-120 V	Raw	42	24	Raw	42	30	Raw	42	42
	Standard	42	24	Standard	42	30	Standard	42	42
	1 Seg.	42	24	1 Seg.	42	30	1 Seg.	42	42
	2/4 Seg.	42	24	2/4 Seg.	42	30	2/4 Seg.	42	42
	8 Seg.	42	21	8 Seg.	42	21	8 Seg.	42	21
220-277 V	Raw	42	42	Raw	42	42	Raw	42	42
	Standard	42	42	Standard	42	42	Standard	42	42
	1 Seg.	42	42	1 Seg.	42	42	1 Seg.	42	42
	2/4 Seg.	42	42	2/4 Seg.	42	42	2/4 Seg.	42	42
	8 Seg.	42	21	8 Seg.	42	21	8 Seg.	42	21

Maximum number of fixtures connected to power in one daisy-chain

System layout

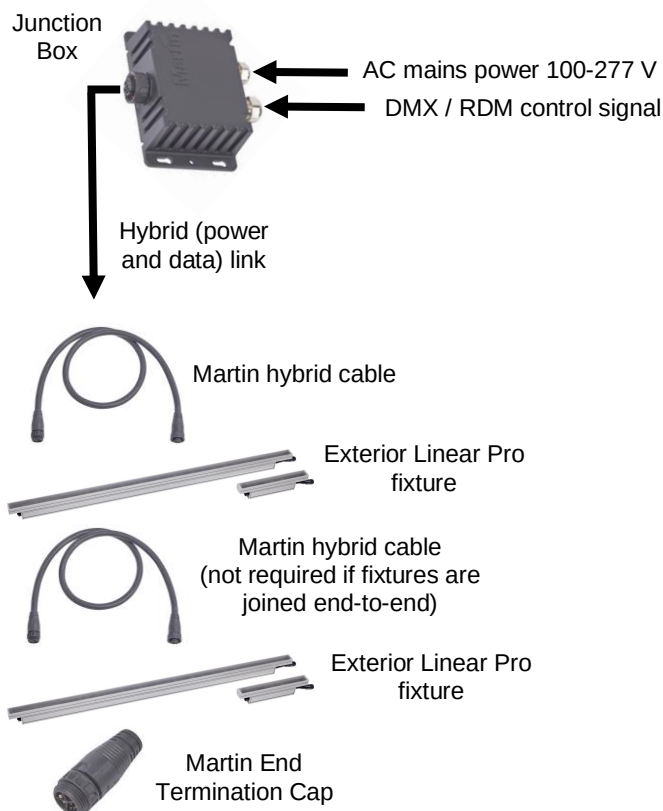

See illustration on left. An Exterior Linear Pro installation requires AC mains power at 100-277 V nominal, 50/60 Hz and control data from an RDM-compatible DMX controller.

Mains power and DMX/RDM control data are fed to a hybrid (combined power and data) connector inside a Martin Junction Box Power Data to PD.

Exterior Linear Pro fixtures are then connected in a daisy-chain using Martin hybrid cable with PD-type connectors that draws power and data from the hybrid connector on the junction box.

Finally, a Martin End Termination Cap must be installed on the unused THRU connector of the last fixture on the power and data link.

The Exterior Linear Pro area of the Martin website at www.martin.com gives details of the junction box, cables and connectors available as accessories.

Connecting via the Martin Junction Box

The Martin Junction Box Power DMX to PD lets you connect a fixture or chain of fixtures to AC mains power and to DMX/RDM data inside a protected, IP66-rated environment. Installing the junction box involves connecting the chain of fixtures to a pre-wired hybrid (power and data) connector and connecting the cables from the mains power and DMX/RDM data sources to terminal blocks inside the junction box.

Connecting to the power and data sources

To connect the cables from the mains power and DMX/RDM data sources:

1. Fasten the junction box to a surface or structure using the screw holes in the flanges on the box. Install the box so that cables will enter the box *horizontally*. This will avoid water pooling at cable glands.
2. Make sure that power cannot be applied to the power cable.
3. See Figure 4. Lift the terminal blocks off their pins in the junction box to give easier access.
4. Strip insulation as necessary from the power cable and data cable, then pass the cables through their respective cable glands and into the junction box.

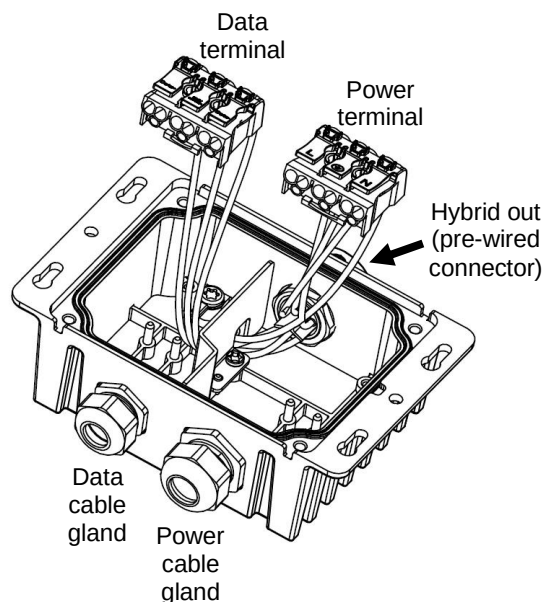


Figure 4. Junction box connections

5. Fasten wires into the power and data terminals respecting the following terminal markings:

Data

- Data shield to DMX common
- Data hot (+) to Data +
- Data cold (-) to Data -

Mains power

- Protective Earth to $\oplus$
- Live (phase) to L
- Neutral to N

See 'Mains power wire color coding' below for a guide to EU and US wire color coding systems.

6. Re-position the terminal blocks on their pins in the junction box and tighten the cable glands to make a waterproof seal at the cable entries.
7. Fasten the cover onto the junction box to make a waterproof seal.

Mains power wire color coding

	Live or L	Neutral or N	Earth, Ground, PE or $\oplus$
US system	Black	White	Green
EU system	Brown	Blue	Yellow/green

Connecting a chain of fixtures to power and data

To connect a daisy-chain of fixtures to mains power and DMX/RDM data, see illustration on right. Connect one of the hybrid (power and data) cables available as accessories from Martin to the hybrid connector (arrowed) on the Martin Junction Box and to the first fixture in the daisy chain.

To use hybrid connectors, position them so that the power and data pins line up and push the connectors together. Then tighten the locking ring on the female connector to create a seal.



Interconnecting a chain of fixtures

You can connect fixtures to each other either:

- directly, hybrid input cable tail to hybrid throughput connector (see Figure 5) or
- using the hybrid extension cables listed in the Exterior Linear Pro area of the Martin website at www.martin.com.

When installing two fixtures at an angle to each other (a 90° angle at the corner of a square, for example), use a 20 cm (8 inch) hybrid extension cable to connect the fixtures to each other.

The cable tails on fixtures allow the required 2 mm / 0.08 in. thermal expansion gap between fixtures when installing them end-to-end.

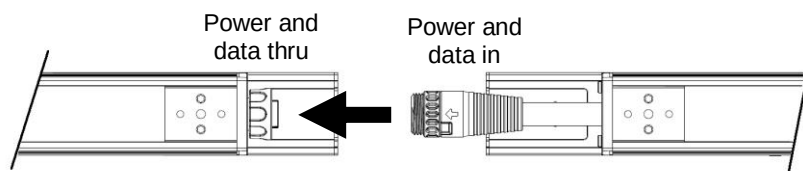


Figure 5. Interconnecting fixtures

To connect fixtures to each other:

1. Make sure that power cannot be applied to the installation. Do not connect or disconnect a hybrid cable that is live.
2. See Figure 5. Connect one fixture's throughput connector to the next fixture's input connector, either directly or with hybrid extension cables from Martin.
3. Install a termination cap in the throughput connector of the last fixture in the chain.
4. Check that all installation work is completed and carry out appropriate tests and safety checks before applying power.

Data network requirements

Though other configurations are possible, the recommended configuration for the data network is to use one DMX universe for each chain of Exterior Linear Pro fixtures. The following considerations must be taken into account when laying out the data network:

- 512 DMX channels are available in a single DMX universe. Each time the combined channel requirements of a group of connected fixtures exceeds 512, an additional DMX universe will be required.
- You can reliably connect up to 42 Exterior Linear Pro fixtures in a single daisy chain using the proprietary Martin DMX interface.
- Use RS-485 data cable designed for exterior use. RS-485 cable has low capacitance and a characteristic impedance of 85 to 150 Ohms. It is electrically shielded and has at least 1 twisted pair of conductors. The minimum recommended wire size is 0.25 mm² (24 AWG) for runs up to 200 meters (1000 ft.) and 0.32 mm² (22 AWG) for runs up 500 meters (1640 ft).
- Each daisy-chain of fixtures must be terminated by installing an End Termination Cap on the throughput connector of the last fixture on the chain.
- Long parallel runs of AC power and control data cables may cause interference on the data link and must be avoided. Even if not required by law, use separate conduits for power and data cables.
- Make sure that data connections are totally protected from water, or the suction created by normal heating and cooling may suck moisture up the inside of the cable and into fixtures.
- Exterior Linear Pro fixtures and hybrid cables use the first data pair (data 1 + and data 1 - conductors) but do not use the second data pair allowed for in the DMX512-A standard.

The DMX transceiver of the Exterior Linear Pro fixture is insulated, SELV design to prevent ground loops and for safety reasons.

Installation physique



Attention ! Lisez la rubrique 'Précautions d'emploi' en page 11 avant d'installer ou de mettre en service l'appareil ou d'en faire la maintenance.

Attention ! La sécurité et le choix d'appareils de levage, de lieux d'installation, de méthodes d'ancrage et de systèmes d'alimentation électrique sont de la responsabilité de l'installateur. Respectez toutes les normes et réglementations locales en matière de sécurité lors de l'installation et du raccordement de la gamme Exterior Linear Pro Serie. L'installation ne doit être effectuée que par un professionnel qualifié.

Attention ! Installez le boîtier **Martin Junction Box Power Data to PD** de façon à ce que les câbles entrent horizontalement pour minimiser l'accumulation d'eau sur les presse-étoupes.

Important ! Consultez les dimensions des appareils en début de manuel.

Important ! Laissez un intervalle de dilatation de 2 mm (0.08 in.) entre les extrémités de 2 appareils juxtaposés dans un alignement. Les cordons des appareils sont prévus pour un intervalle de 2 à 3 mm.

Contactez votre revendeur Martin pour assistance si vous avez la moindre question sur l'installation du produit en toute sécurité.

Placement de l'appareil

La gamme Exterior Linear Pro est conçue pour une utilisation en extérieur. Avec un indice IP66, les appareils sont étanches à la poussière et capables de résister à un jet d'eau puissant mais ils ne sont pas immergeables. Les appareils requièrent un espace de circulation d'air libre autour d'eux pour un refroidissement adéquat.

Observez les recommandations ci-dessous pour choisir le lieu d'installation :

- Respectez les consignes de la rubrique 'Précautions d'emploi' en page 11.
- Ne laissez pas l'eau s'accumuler sur ou à proximité de la valve de dépressurisation. N'installez pas l'appareil dans une position où la membrane de la valve serait horizontale afin d'éviter que l'eau ne s'accumule dessus.
- Assurez-vous que le drainage est suffisant pour évacuer les eaux des pluies les plus fortes. Assurez-vous que l'eau est évacuée aussi vite qu'elle rentre dans la zone d'installation.
- L'appareil requiert une circulation d'air suffisante pour assurer son refroidissement : ne l'encastrez pas dans une zone non ventilée.
- A la température ambiante maximale permise ; les carters de l'appareil peuvent atteindre une température de 65° C (149° F). Limitez l'accès du public et placez l'appareil dans un endroit d'où il ne peut pas être touché accidentellement.

Fixation de l'appareil



Attention ! Tous les éléments de fixation utilisés doivent être anti-corrosion et suffisamment solides pour garantir la sécurité de l'installation. Installez une rondelle sous chaque élément de fixation lors de l'installation des fixations articulées sur la surface porteuse.

Attention ! Lors de la fixation de l'appareil sur une surface ou une structure à l'aide de la platine arrière de l'appareil, qu'elle soit seule ou jumelée à un accessoire de réglage, utilisez au moins deux (2) platines par appareil.

L'appareil peut être installé dans n'importe quelle orientation.

L'appareil et son support doivent être fermement fixés à une surface adaptée ou une structure, capables de supporter le poids de tous les appareils, câbles et accessoires à l'aide de composants mécaniques et de visserie. Ne laissez pas l'appareil posé sur une surface d'où il peut être déplacé ou bien d'où il pourrait tomber. Les composants mécaniques et de visserie doivent être de haute résistance et anti-corrosion (propriétés minimales recommandées : inox A4-70 selon ISO 3506 ou acier 8.8 selon ISO 898-1). Tout écrou doit être à couple dominant ou autobloquant.

Reportez-vous à la section 'Interconnecting a chain of fixtures' en page 23 lors de la connexion des câbles hybrides (alimentation + données) entre les appareils.

Laissez un intervalle libre de 2 mm (0.08 in.) entre chaque appareil et aux extrémités dans un alignement d'appareils pour permettre leur dilatation.

L'appareil, ses platines réglables et ses accessoires de montage sont fabriqués en aluminium anodisé anti-corrosion. Évitez de monter l'appareil en contact direct avec tout autre matériau métallique pour éviter le risque de corrosion galvanique.

- Si vous fixez l'appareil sur une surface d'un autre métal que l'aluminium anodisé, utilisez un matériau isolant (plastique ou caoutchouc) ou bien un traitement isolant entre la lyre et l'autre métal.
- Utilisez un traitement isolant comme le Delta Seal sur les fixations (vis, écrous, rondelles) lorsqu'elles sont en contact avec la lyre.

L'installation sera généralement plus simple si vous connectez les appareils en même temps que la pose. Consultez la rubrique 'Interconnecting a chain of fixtures' en page 23.

Accessoires de pose

Voir illustration ci-dessous. Les Exterior Linear Pro sont fournis avec une platine glissante A à l'arrière. Cette platine est conçue pour être jumelée à un accessoire de pose disponible chez Martin (consultez la section consacrée à l'Exterior Linear Pro sur le site web de www.martin.com):

- Contre-platine fixe (B)
- Etrier à montage rapide (C)
- Platine réglable (D)

Avant de monter l'accessoire de pose sur l'appareil, planifiez votre installation. Les platines glissantes A doivent être régulièrement espacées et à proximité des extrémités des appareils. Installez-les de façon à éviter tout effort de rotation latéral sur l'appareil (ne les installez pas côte à côte sur la même extrémité de l'appareil car le poids de l'appareil les ferait tourner).

Fixez chaque platine dans sa glissière à l'arrière avant d'installer l'accessoire de pose.

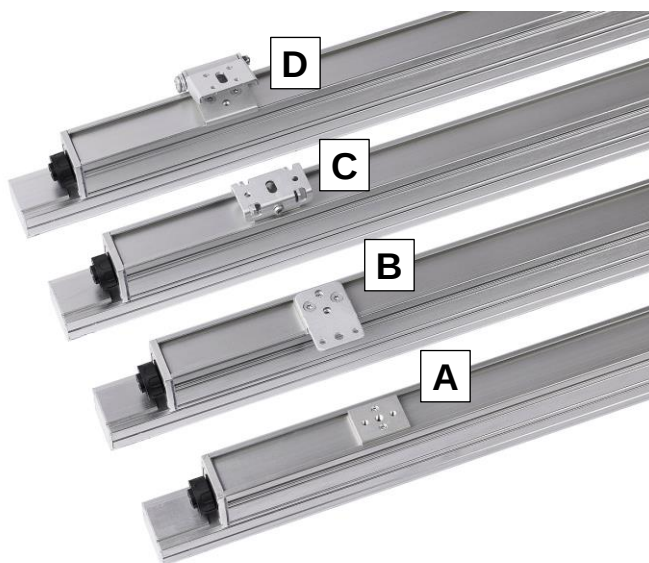


Figure 6. Accessoires de pose

Platine de fixation

Pour monter l'appareil avec les contre-platines B disponibles chez Martin dans la gamme Exterior Linear Pro :

1. Voir **B** dans la Figure 1. Fixez fermement une contre platine **B** à chaque platine glissante **A** à l'arrière de l'appareil avec les deux vis fournies.
2. Maintenez l'appareil contre la surface de montage ou la structure et fixez fermement chaque contre platine à la surface ou à la structure avec de la visserie adaptée capable de supporter le poids de l'appareil et ses accessoires. Vérifiez que l'appareil est maintenu fermement et en sécurité.
3. Si nécessaire, préparez la connexion à l'appareil voisin.

Platine réglable

Pour monter l'appareil avec les platines réglables disponibles chez Martin pour l'Exterior Linear Pro :

1. Voir **D** dans la Figure 1. Fixez chaque platine **D** fermement sur une platine glissante **A** à l'arrière de l'appareil avec les deux vis fournies.
2. Maintenez l'appareil contre la surface de montage ou la structure et fixez fermement chaque contre platine à la surface ou à la structure avec de la visserie adaptée capable de supporter le poids de l'appareil et ses accessoires. Vérifiez que l'appareil est maintenu fermement et en sécurité.
3. Voir Figure 2. Serrez la vis Torx 20 **E** sur chaque accessoire pour les verrouiller en position et maintenir l'appareil dans l'orientation souhaitée. Vérifiez que l'appareil est maintenu fermement et en sécurité.
4. Si l'accessoire prend du jeu (ce qui peut se produire après plusieurs essais de réglage), serrez la vis pivot Torx 25 **F** pour redonner de la fermeté.
5. Si nécessaire, préparez la connexion à l'appareil voisin.

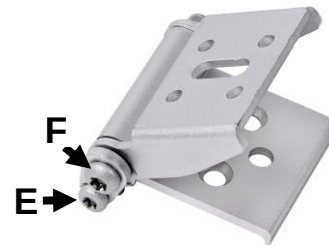


Figure 7. Vis de blocage de la platine réglable

Etriers de montage rapide

Pour monter l'appareil avec les étriers rapides disponibles chez Martin pour l'Exterior Linear Pro :

1. Suivez les étapes de la Figure 3 pour vous guider. Fixez chaque platine **H** fermement sur une platine glissante **A** à l'arrière de l'appareil avec les deux vis fournies.
2. Préparez la surface de montage pour l'installation des étriers **G**. Vérifiez que vous pouvez aligner l'étrier **G** avec les platines **H**. Fixez fermement les étriers **G** sur la surface de montage avec la visserie adaptée au poids qu'elle va supporter.
3. Insérez les crochets de la platine **H** dans les encoches de l'étrier **G**, basculez l'appareil pour engager l'écrou de blocage **I** dans l'encoche prévue sur **G**.
4. Serrez l'écrou **I** jusqu'à ce que l'appareil soit maintenu fermement.
5. Si nécessaire, préparez la connexion à l'appareil voisin.

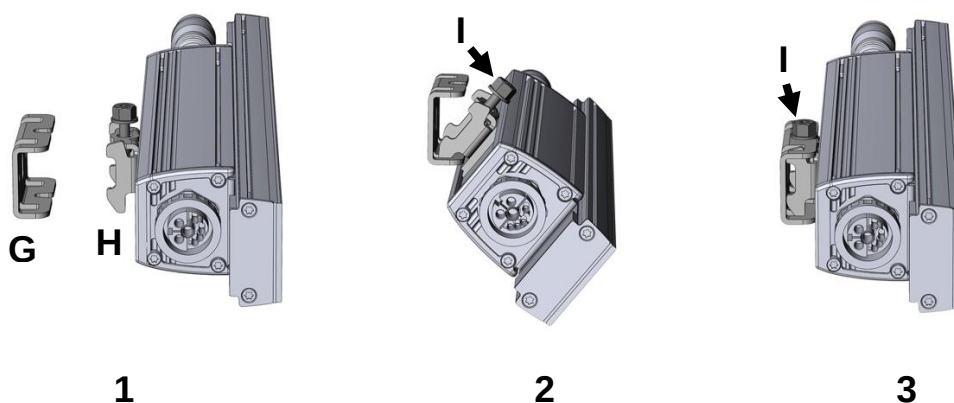


Figure 8. Installation de l'étrier à montage rapide

Alimentation et télécommande



Attention ! Lisez la rubrique 'Précautions d'emploi' en page 11 avant d'installer ou de mettre en service l'appareil ou d'en faire la maintenance.

Attention ! Assurez-vous que les câbles de l'appareil débouchent dans un endroit sec (une boîte de dérivation par exemple). Une simple entaille dans le gainage d'un câble (au point de raccordement par exemple) exposé à la pluie suffit à laisser filtrer l'humidité dans le câble lui-même par effet d'aspiration avec les fluctuations de température lors du fonctionnement du projecteur. Assurez-vous que le projecteur est bien protégé contre les infiltrations via le câble d'alimentation en utilisant des connecteurs de raccordement IP66 ou en protégeant les connecteurs avec des boîtiers étanches.

Attention ! Le projecteur n'a pas d'interrupteur Marche/Arrêt. Il reçoit l'alimentation dès qu'il est raccordé au secteur. Installez un moyen de déconnecter le projecteur du secteur et gardez-le aisément accessible et à proximité des appareils.

Important ! N'utilisez pas de gradateur externe pour alimenter l'appareil, cela endommagerait l'appareil et les dégâts ne seraient pas couverts par la garantie du produit.

Prérequis pour l'alimentation électrique

Les appareils de la gamme Exterior Linear Pro doivent être alimentés sous 100 - 277 V AC nominal, 50/60 Hz, soit avec un système monophasé avec terre (phase, neutre, terre) ou à partir d'une phase d'un système triphasé avec terre et neutre (3 phases, neutre, terre).

Limites de sécurité pour la connexion en cascade



Attention ! Lisez attentivement cette section et respectez les limites de sécurité données pour éviter de créer un risque d'incendie ou d'électrisation. Consultez votre revendeur Martin pour toute question sur la sécurité.

Longueur maximale de la chaîne et nombre d'appareils


La longueur maximale totale permise d'un alignement d'appareils interconnectés pour l'alimentation électrique est de 150 m (492 ft.), incluant appareil et câblage.

Le nombre maximal permis d'appareil - hors câbles - dépend de la tension d'alimentation secteur, du mode de puissance et du mode DMX des appareils. Le tableau ci-dessous donne le nombre maximal d'appareils permis en tenant compte de ces paramètres :

Tension secteur	Nombre d'appareil en cascade – mode 12 W			Nombre d'appareil en cascade – mode 10 W			Nombre d'appareil en cascade – mode 5 W		
	Mode DMX	1ft.	4ft.	Mode DMX	1ft.	4ft.	Mode DMX	1ft.	4ft.
100-120 V	Raw	42	24	Raw	42	30	Raw	42	42
	Standard	42	24	Standard	42	30	Standard	42	42
	1 Seg.	42	24	1 Seg.	42	30	1 Seg.	42	42
	2/4 Seg.	42	24	2/4 Seg.	42	30	2/4 Seg.	42	42
	8 Seg.	42	21	8 Seg.	42	21	8 Seg.	42	21
220-277 V	Raw	42	42	Raw	42	42	Raw	42	42
	Standard	42	42	Standard	42	42	Standard	42	42
	1 Seg.	42	42	1 Seg.	42	42	1 Seg.	42	42
	2/4 Seg.	42	42	2/4 Seg.	42	42	2/4 Seg.	42	42
	8 Seg.	42	21	8 Seg.	42	21	8 Seg.	42	21

Nombre maximal d'appareils connectés en cascade

Principe de raccordement

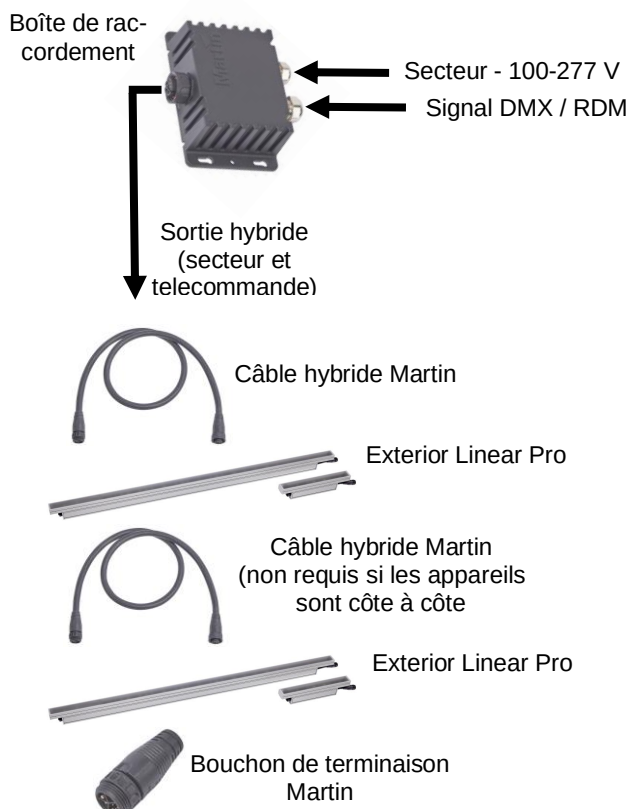

Voir illustration ci-contre. Une installation Exterior Linear Pro requiert une tension d'alimentation secteur de 100-277 V nominale, sous 50/60 Hz et une ligne de télécommande provenant d'un contrôleur DMX+RDM.

Les lignes secteur et télécommande sont réunies en une ligne hybride (secteur + télécommande) par un boîtier de raccordement Martin Junction Box Power Data to PD.

Les Exterior Linear Pro sont interconnectés en cascade avec des câbles hybrides Martin équipés de connecteurs PD qui portent à la fois le secteur et la télécommande.

En fin de ligne, un bouchon Martin End Termination Cap doit être posé dans le connecteur hybride de recopie du dernier appareil.

La rubrique consacrée à l'Exterior Linear Pro du site web de Martin donne plus de détails sur les boîtes de raccordement, les câbles et les connecteurs disponibles comme accessoires.

Connexion au boîtier Martin Junction Box

La boîte de raccordement Martin Junction Box Power DMX to PD permet la connexion d'un appareil ou d'une cascade d'appareils au secteur et à la télécommande DMX/RDM dans une enveloppe protégée IP66. Installer cette boîte de raccordement implique le branchement des appareils au connecteur hybride et raccorder le secteur et la télécommande au connecteur hybride avec les borniers à l'intérieur de la boîte.

Connexion du secteur et de la télécommande

Pour connecter les câbles secteur et DMX/RDM :

1. Fixez la boîte sur une surface ou une structure en utilisant les trous prévus sur les flancs de la boîte. Installez-la de façon à ce que les câbles entrent horizontalement pour éviter toute accumulation d'eau sur les presse-étoupes.
2. Vérifiez que le câble secteur ne peut pas être mis sous tension.
3. Voir Figure 4. Dégagez les borniers de leur empreinte au fond de la boîte pour faciliter l'accès.
4. Dégainez et dénudez le câble d'alimentation et le câble de télécommande et passez-les dans les presse-étoupes du boîtier.
5. Raccordez les fils sur les borniers en respectant les repères :

Data

- Blindage : DMX common
- Point chaud : Data +

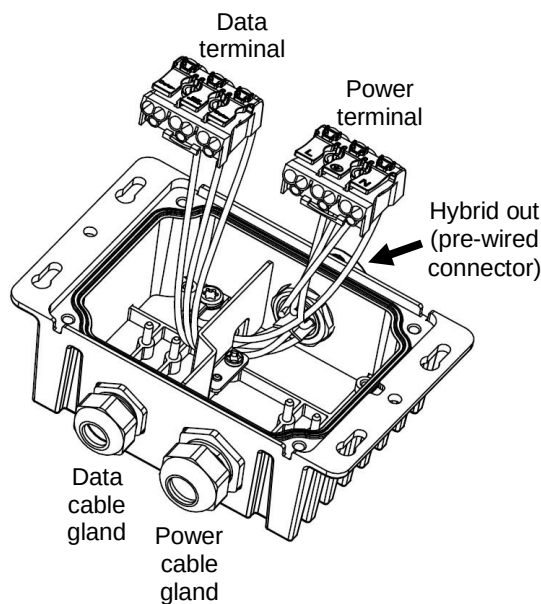


Figure 9. Connexion du boîtier

- Point froid : Data -

Secteur

- PE / terre : $\oplus$
- Phase : L
- Neutre : N

Voir 'Mains power wire color coding' ci-dessous pour les repères usuels et les codes couleurs US et EU.

6. Remplacez les borniers dans leur empreinte au fond de la boîte. Serrez les presse-étoupes pour rendre les entrées de câble du boîtier étanches.
7. Fermez le couvercle de la boîte pour la rendre étanche.

Codes de couleur des câbles d'alimentation

	Phase ou L	Neutre ou N	Terre, Masse, PE ou $\oplus$
Système US	Noir	Blanc	Vert
Système EU	Marron	Bleu	Jaune/Vert

Connexion des appareils en cascade hybride

Pour connecter une cascade d'appareils au secteur et à la télécommande, voir ci-contre. Connectez un câble hybride (secteur et télécommande) disponible en accessoires auprès de Martin à la sortie hybride (repérée ci-contre) du boîtier de raccordement Martin Junction Box et déployez-le pour le raccorder au premier appareil.

Pour effectuer le raccordement avec les connecteurs hybrides, présentez-les face à face pour aligner les broches secteur et télécommande, poussez-le à fond l'un dans l'autre puis serrez la bague du connecteur femelle pour les verrouiller et rendre la liaison étanche.



Interconnexion d'appareils en cascade

Vous pouvez connecter plusieurs appareils en cascade, soit :

- Directement, avec la queue de câble d'un appareil dans le connecteur de l'autre (voir Figure 5) ou
- Avec un câble hybride de la gamme Exterior Linear Pro, détaillée dans la rubrique correspondante du site de web de Martin : www.martin.com.

Lors de l'installation de 2 appareils à 90° l'un de l'autre (au coin de deux murs par exemple), utilisez un câble hybride de 20 cm (8 inch) pour les raccorder l'un à l'autre.

La queue de câble montée sur l'appareil permet de conserver un joint de dilatation de 2 mm / 0.08 in nécessaire entre 2 appareils alignés côte à côte.

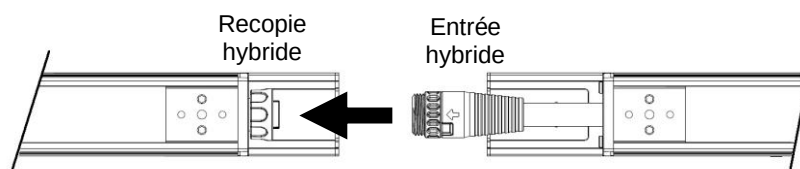


Figure 10. Interconnexion de deux appareils

Pour interconnecter deux appareils :

1. Assurez-vous que l'installation ne peut pas être remise sous tension. Ne connectez/déconnectez pas un câble sous tension.
2. Voir Figure 5. Raccordez le connecteur de recopie d'un appareil à la queue de l'appareil suivant soit directement, soit avec un câble hybride disponible chez Martin.
3. Installez un bouchon de terminaison dans le connecteur de recopie du dernier appareil de la chaîne.
4. Vérifiez que le travail d'installation est complètement terminé et effectuez les tests et vérifications de sécurité avant de mettre l'installation sous tension.

Montage



Warnung! Lesen Sie die „Sicherheitshinweise“ ab Seite 14, bevor Sie das Gerät installieren, verwenden oder reparieren.

Warnung! Die Beurteilung der Sicherheit und Eignung von Anschlagmitteln, Montageort, Befestigungsmethode und elektrischem Anschluss liegt in der Verantwortung des Installateurs. Beachten Sie alle lokalen Sicherheitsvorschriften und Gesetze, wenn Sie ein Modell der Exterior Linear Pro Serie montieren und anschließen. Die Montage darf nur von einem qualifizierten Fachmann ausgeführt werden.

Warnung! Anschlussleitungen müssen horizontal an die **Martin Verbindungsbox** angeschlossen werden. Das minimiert das Risiko der Wasseransammlung an den Leitungsdurchführungen.

Wichtig! Beachten Sie die Masszeichnungen am Anfang dieser Anleitung.

Wichtig! Das Gerät dehnt sich bei Erwärmung aus. Sehen Sie am Ende einer Linie und zwischen 2 Geräten 2 mm Spielraum vor. Die Anschlüsse der Geräte ermöglichen 2-3 mm Spielraum zwischen den Geräten.

Bitte wenden Sie sich an ihren Martin-Händler, wenn Sie Fragen zur sicheren Installation der Geräte haben.

Auswahl des Montageorts

Die Modelle der Exterior Linear Pro Serie sind für die Verwendung im Außenbereich geeignet (Schutzart IP 66). Sie sind staubdicht und gegen Strahlwasser geschützt. Das Gerät darf nicht eingetaucht werden. Zur adäquaten Kühlung muss die Luft das Gerät frei umströmen können.

Beachten Sie bei der Wahl des Montageorts:

- Beachten Sie die Beschränkungen im Abschnitt „Sicherheitshinweise“ ab Seite 14.
- Wasser darf sich nicht in der Nähe des Druckausgleichventils sammeln. Das Druckausgleichventil darf nicht horizontal oben liegen, um die Ansammlung von Wasser um das Ventil zu verhindern.
- Regenwasser muss auch bei dem stärksten, lokal auftretenden Niederschlag sicher vom Gerät weggeleitet werden. Das Wasser muss mindestens so schnell abfließen, wie es zufließen kann.
- Vergraben Sie das Gerät nicht und behindern Sie den Luftstrom um das Gerät nicht.
- Das Gehäuse des Gerätes kann bei Betrieb in maximal zulässiger Umgebungstemperatur bis zu 65° C warm werden. Sperren Sie den Bereich um das Gerät oder positionieren Sie das Gerät in unzugänglicher Umgebung, damit es nicht versehentlich berührt werden kann.

Montage des Gerätes



Warnung! Alle Elemente zur Montage eines Exterior Linear Pro müssen aus rostfreiem Material bestehen und für das Gewicht des Gerätes ausgelegt sein. Verwenden Sie unter jedem Schraubenkopf oder jeder Mutter zur Befestigung der Halterung an der Oberfläche eine Unterlegscheibe.

Warnung! Wenn Sie das Gerät mit Hilfe der verschiebbaren Anschlussplatten an der Rückseite des Gerätes, ob einzeln oder mit Halterungen, montieren, müssen Sie auf jeden Fall mindestens zwei (2) Anschlussplatten verwenden.

Das Gerät darf in beliebiger Orientierung montiert werden. Beachten Sie die Hinweise zur Lage des Goretex-Ventils.

Das Gerät und die Halterungen müssen sicher mittels geeigneter Befestigungsmittel an einer geeigneten Oberfläche oder Struktur befestigt werden. Die Oberfläche oder Struktur muss für das Gewicht aller montierten Geräte, Anschlagmittel, Leitungen und Zubehör geeignet sein. Stellen Sie ein Gerät nicht auf einer Oberfläche, an der es bewegt werden oder umfallen kann, auf. Die Befestigungsmittel müssen hochfest und korrosionsbeständig sein (empfohlene Mindest-Eigenschaften: rostfreier Stahl A4-70 gemäß ISO 3506 oder Stahl der Güte 8.8 gemäß ISO 898-1). Alle Muttern müssen selbstsichernd sein.

Beachten Sie die Hinweise im Abschnitt „Interconnecting a chain of fixtures“ auf Seite 23, wenn Sie den Hybrid (Netzspannung und Steuerdaten) Eingang mit dem Ausgang des vorherigen Gerätes verbinden.

Der Abstand zwischen zwei Geräten, die in einer Linie hintereinander montiert werden, muss wegen der thermischen Ausdehnung mindestens 2 mm betragen.

Das Gehäuse, die Anschlussplatten an der Rückseite des Gehäuses und die als Zubehör von Martin verfügbaren Halterungen bestehen aus korrosionsbeständigem, anodisiertem Aluminium. Vermeiden Sie wegen möglicher elektrochemischer Korrosion den Kontakt mit anderen, unterschiedlichen Metallen.

Wenn Sie das Gerät an einer metallischen Oberfläche montieren, müssen Sie

- Ein elektrisch isolierendes Material (Gummi oder Kunststoff) zwischen der Halterung und dem anderen Metall verwenden,
- Die Montage-Elemente mit einer isolierenden Oberfläche (z.B. Delta Seal) vor dem direkten Kontakt mit der Halterung schützen.

Für eine einfache Installation sollten Sie die Netz-/Datenverbindung zum nächsten Gerät der Installation bei Montage des Gerätes herstellen (siehe „Interconnecting a chain of fixtures“ auf Seite 23).

Montagezubehör

Siehe Bild unten. Exterior Linear Pro Geräte werden mit verschiebbaren Anschlussplatten A an der Rückseite des Gerätes geliefert. Die Anschlussplatten können mit Halterungen, die als Zubehör von Martin erhältlich sind, verbunden werden (mehr Information finden Sie im Exterior Linear Pro Bereich der Martin Webseite www.martin.com):

- Flanschhalterung (B)
- Schnellverschlusshalterung (C)
- Einstellbare Halterung (D)

Planen Sie vor Montage der Anschlussplatten die Installation. Die verschiebbaren Anschlussplatten A sollen gleichmäßig nahe den Enden des Gerätes angeordnet sein. Die Anschlussplatten dürfen keinem hohen Drehmoment, wie es z.B. bei Anordnung beider Platten an einem Ende des Gerätes auftritt, ausgesetzt werden.

Schieben Sie die Anschlussplatte in die Aufnahme an der Rückseite des Gerätes, bevor Sie eine Halterung montieren.

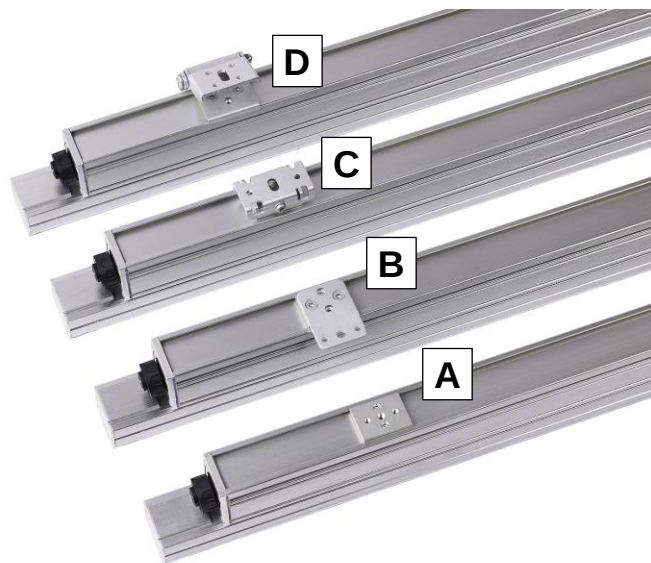


Bild 11. Montagehalterungen (Zubehör)

Flanschhalterung

Montage mit der von Martin für Exterior Linear Pro Geräte verfügbaren Flanschhalterung:

1. Siehe **B** in Figure 1. Montieren Sie eine Flanschhalterung **B** mit den zwei mit der Flanschhalterung gelieferten Schrauben fest an beide verschiebbaren Anschlussplatten **A** an der Rückseite des Gerätes.
2. Halten Sie das Gerät an die Oberfläche oder Struktur, an der das Gerät befestigt werden soll. Befestigen Sie jede Flanschhalterung mit einer oder mehreren für das Gewicht des Gerätes geeigneten Schrauben oder Bolzen sicher an der Oberfläche oder Struktur. Prüfen Sie die feste und sichere Befestigung.

3. Bereiten Sie die Verbindung mit dem nächsten Gerät vor, wenn erforderlich.

Einstellbare Halterung

Montage mit der von Martin für Exterior Linear Pro Geräte verfügbaren einstellbaren Halterung:

1. Siehe **D** in Figure 1. Montieren Sie eine einstellbare Halterung **D** mit den zwei mit der einstellbaren Halterung gelieferten Schrauben fest an beide verschiebbare Anschlussplatten **A** an der Rückseite des Gerätes.
2. Halten Sie das Gerät an die Oberfläche oder Struktur, an der das Gerät befestigt werden soll. Befestigen Sie jede einstellbare Halterung mit einer oder mehreren für das Gewicht des Gerätes geeigneten Schrauben oder Bolzen sicher an der Oberfläche oder Struktur. Prüfen Sie die feste und sichere Befestigung.
3. Siehe Illustration rechts. Ziehen Sie die Torx 20 Klemmschraube **E** beider einstellbaren Halterungen an, um das Gerät im gewünschten Winkel zu fixieren. Prüfen Sie den festen Sitz des Gerätes.
4. Wenn die sich einstellbare Halterung nach mehreren Änderungen der Einstellung locker sollte, ziehen Sie die Torx 25 Schraube **F** der Achse etwas an, um die korrekte Vorspannung herzustellen.
5. Bereiten Sie die Verbindung mit dem nächsten Gerät vor, wenn erforderlich.

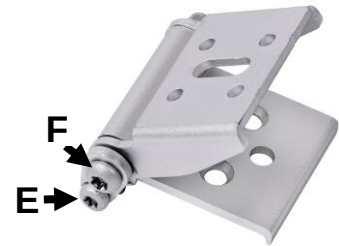


Bild 12. Klemmschraube der einstellbaren Halterung

Schnellverschlusshalterung

Montage mit der von Martin für Exterior Linear Pro Geräte verfügbaren Schnellverschlusshalterung:

1. Siehe Figure 3 zur Erläuterung. Montieren Sie eine Halteklammer **H** mit den zwei mit der Schnellverschlusshalterung gelieferten Schrauben fest an beide verschiebbare Anschlussplatten **A** an der Rückseite des Gerätes.
2. Markieren Sie an der Montagefläche die Position der Klammern **G**. Prüfen Sie die korrekte Position der Markierungen zu der Halteklammern **H**. Prüfen Sie die korrekte Ausrichtung der Klammern **G** zu den Halteklammern **H** (Lage der Aufnahme für den Verschlussbolzen). Befestigen Sie jede Klammer **G** mit einer oder mehreren für das Gewicht des Gerätes geeigneten Schrauben oder Bolzen sicher an der Oberfläche oder Struktur. Prüfen Sie die feste und sichere Befestigung.
3. Führen Sie die Haken der Halteklammern **H** in die entsprechenden Aussparungen der Klammern **G**. Kippen Sie das Gerät, um den Verschlussbolzen **I** in die entsprechenden Aufnahmen an der Oberseite der Klammern **G** einzuführen.
4. Ziehen Sie den Verschlussbolzen **I** fest, um das Gerät in der Klammer **G** zu fixieren.
5. Bereiten Sie die Verbindung mit dem nächsten Gerät vor, wenn erforderlich.

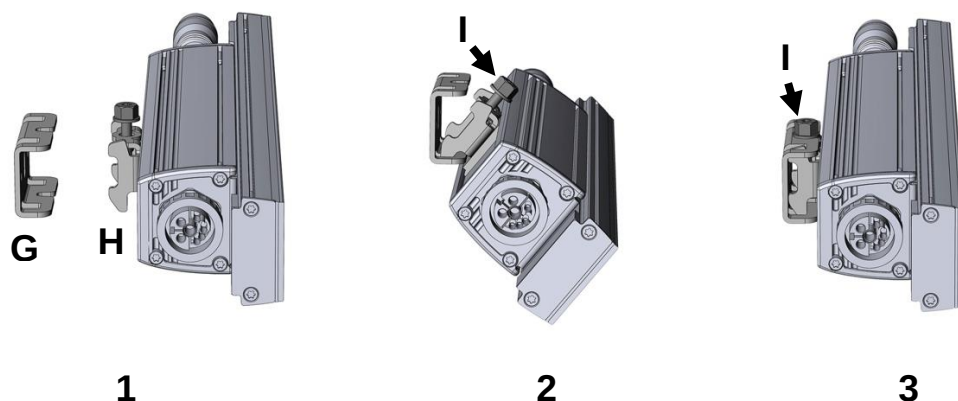


Bild 13. Montage der Schnellverschlusshalterung

Stromquelle und Datenverbindung



Warnung! Lesen Sie die „Sicherheitshinweise“ ab Seite 14, bevor Sie das Gerät installieren, verwenden oder reparieren.

Warnung! Leitungen sollen nur in trockener Umgebung enden (z.B. in einem Verteiler in trockener Umgebung). Wenn die Isolation der Leitung an einem Punkt unterbrochen wird und wenn diese Unterbrechung der Witterung ausgesetzt ist, kann durch den Vakuumeffekt bei Abkühlung des Gerätes Wasser durch die Leitung in das Gerät gelangen. Verteiler, Anschlussboxen und Verbinder müssen der Schutzart IP 66 entsprechen, um das Eindringen von Wasser in das Gerät durch die Anschlussleitung zu verhindern.

Warnung! Das Gerät hat keinen Netzschalter. Das Gerät ist eingeschaltet, sobald Netzspannung anliegt. Sehen Sie in der Nähe des Gerätes eine leicht erreichbare Möglichkeit vor, das Gerät von der Stromquelle zu trennen.

Wichtig! Das Gerät darf nicht an ein Dimmersystem angeschlossen werden. Dadurch entstehende Schäden sind von der Gewährleistung ausgeschlossen.

Anforderungen an die Stromquelle

Die Geräte der Exterior Linear Pro Serie sind für Netzspannungen von 100 - 277 V nominal, 50 / 60 Hz, geeignet. Verwenden Sie eine einphasige, dreiadrigte Stromquelle (Phase, Neutral, Erdung) oder den Anschluss an eine Phase einer dreiphasigen Stromquelle (3 Phasen, Neutral, Erdung).

Sicherheitshinweise zur Verbindung von Geräten



Warnung! Lesen Sie diesen Abschnitt sorgfältig, wenn Sie die mehrere Geräte seriell an einer Stromquelle anschließen. Beachten Sie die Sicherheitshinweise, um elektrischen Schlag oder Brandgefahr zu vermeiden. Wenden Sie sich an Ihren Martin Händler, wenn Sie Fragen zur sicheren Installation der Geräte haben.

Maximale Länge der Netzleitung und maximale Anzahl der seriell verbundenen Geräte


Die Gesamtlänge der Netzleitung darf von der Stromquelle bis zum letzten, seriell verbundenen Gerät inklusive Geräte und Verbindungsleitungen 150 m betragen.

Die maximale Anzahl der seriell verbundenen Geräte hängt von der Ausgangsspannung der Stromquelle, der Länge der Geräte und dem Leistungs- und DMX Modus der Geräte ab. Die folgende Tabelle zeigt unter Berücksichtigung der genannten Faktoren die maximal zulässige Zahl der Geräte in einer Versorgungslinie:

Spannung der Stromquelle	Zahl der Geräte der Linie im 12 W Modus			Zahl der Geräte der Linie im 10 W Modus			Zahl der Geräte der Linie im 5 W Modus		
	DMX Modus	312 mm	1227 mm	DMX Modus	312 mm	1227 mm	DMX Modus	312 mm	1227 mm
100-120 V	Raw	42	24	Raw	42	30	Raw	42	42
	Standard	42	24	Standard	42	30	Standard	42	42
	1 Seg.	42	24	1 Seg.	42	30	1 Seg.	42	42
	2/4 Seg.	42	24	2/4 Seg.	42	30	2/4 Seg.	42	42
	8 Seg.	42	21	8 Seg.	42	21	8 Seg.	42	21
220-277 V	Raw	42	42	Raw	42	42	Raw	42	42
	Standard	42	42	Standard	42	42	Standard	42	42
	1 Seg.	42	42	1 Seg.	42	42	1 Seg.	42	42
	2/4 Seg.	42	42	2/4 Seg.	42	42	2/4 Seg.	42	42
	8 Seg.	42	21	8 Seg.	42	21	8 Seg.	42	21

Maximal zulässige Zahl der Geräte in einer Versorgungslinie

Topographie des Systems

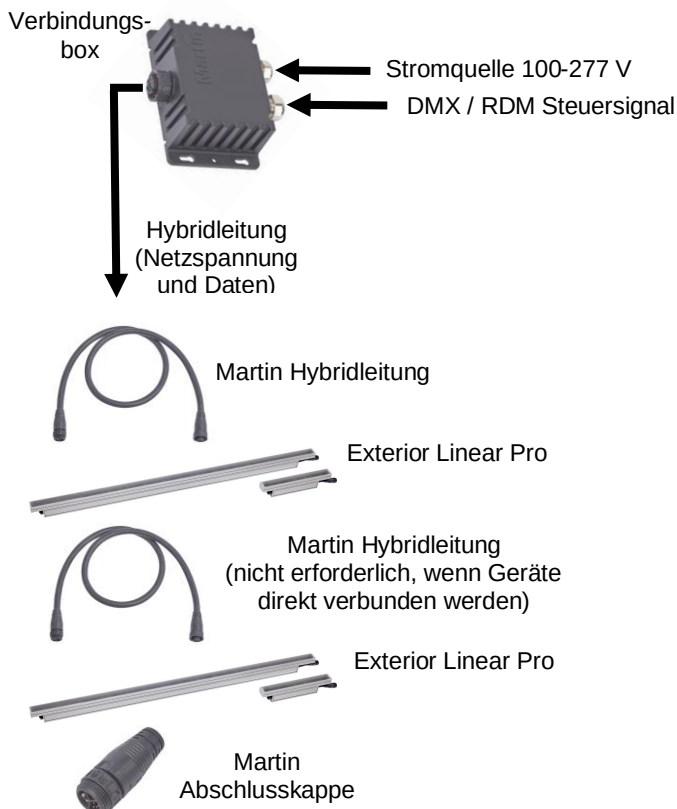

Siehe Illustration links. Eine Exterior Linear Pro Installation benötigt eine Stromquelle mit 100-277 V nominal, 50/60 Hz Ausgangsspannung und Steuerdaten von einer RDM-kompatiblen DMX Steuerung.

Die Netzspannung und Steuerdaten werden in einer Martin Verbindungsbox auf einen Verbinder für die Hybridleitung zu den Geräten aufgelegt.

Die Exterior Linear Pro Geräte werden dann seriell mit Hilfe von Martin Hybridleitungen mit PD-Verbindern mit der Verbindungsbox und miteinander verbunden und so mit Netzspannung und Daten versorgt.

Am Ende der Versorgungslinie wird eine Martin Abschlusskappe auf den Ausgangsverbinder des letzten Gerätes der Linie montiert.

Im Exterior Linear Pro Bereich der Martin Webseite www.martin.com finden Sie nähere Informationen zur Verbindungsbox, Hybridleitungen und als Zubehör erhältlichen Verbindern.

Anschluss mit Hilfe der Martin Verbindungsbox

Die Martin Verbindungsbox ermöglicht die Kombination der Netzspannung und Steuerdaten für den Anschluss eines Gerätes oder einer Linie von Geräten in einer geschützten IP 66 Umgebung. Die Verbindungsbox enthält einen vorverdrahteten Verbinder für den Anschluss der Hybridleitung zu den Geräten und zwei Anschlussblöcke für den Anschluss der Strom- und Datenquelle in der Box.

Anschluss der Strom- und Datenquelle

Anschluss der Strom- und DMX/RDM Datenquelle in der Box:

1. Befestigen Sie die Verbindungsbox mit Schrauben und den 4 Langlöcher am Flansch der Verbindungsbox. Die Leitungsdurchführungen müssen *horizontal* liegen, um die Ansammlung von Wasser an den Leitungsdurchführungen zu verhindern.
2. Die Netzleitung muss spannungsfrei sein.
3. Siehe Figure 4 rechts. Heben Sie die Anschlussblöcke für leichteren Zugang aus den Gehäuse.
4. Führen Sie die Netz- und Datenleitung durch die entsprechenden Durchführungen und isolieren Sie die Leitung und die Adern ab.

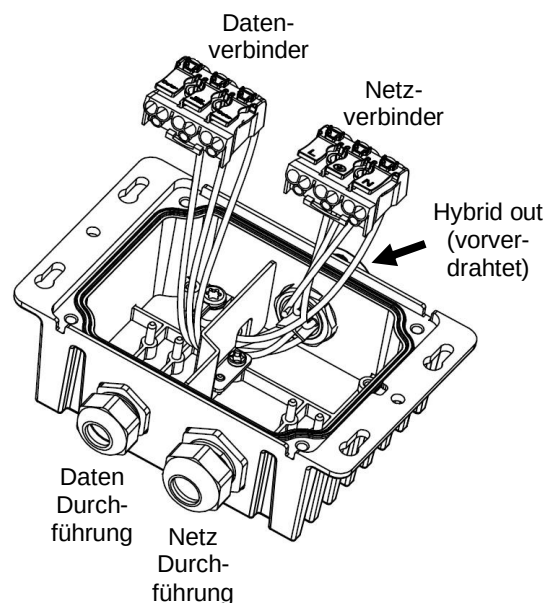


Bild 14. Anschlüsse der Verbindungsbox

5. Schließen Sie die Netz- und Datenleitung gemäß der Markierungen der Anschlussblöcke an:

Steuerdaten

- Abschirmung der Datenleitung an DMX common
- Daten + an Data +
- Daten - an Data -

Netzspannung

- Schutz Erde an $\oplus$
- Phase an L
- Neutraleiter an N

Siehe „Mains power wire color coding“ für eine Beschreibung der in der EU und den USA verwendeten Farbcodes für Netzleitungen.

6. Schieben Sie die Anschlussblöcke in die Aufnahmen des Gehäuses und ziehen Sie die Leitungsdurchführungen fest, um die Durchführung vor Wasser zu schützen.
7. Montieren Sie die Abdeckung der Verbindungsbox, um das Innere der Box vor Wasser zu schützen.


Farbcode der Netzleitung

	Phase oder L	Neutraleiter oder N	Erdung, PE oder $\oplus$
US System	Schwarz	Weiß	Grün
EU System	Braun	Blau	Gelb/Grün

Verbindung der Geräte mit der Verbindungsbox

Verbinden Sie eine als Zubehör erhältliche Martin Hybridleitung mit dem Hybridverbinder (Pfeil) der Martin Verbindungsbox und dem ersten Gerät der Versorgungslinie.

Richten Sie die Pins der Hybridverbinder aus und stecken Sie die Verbinder zusammen. Drehen Sie den Verschlussring der Kabelbuchse, um eine wasserdichte Verbindung herzustellen.

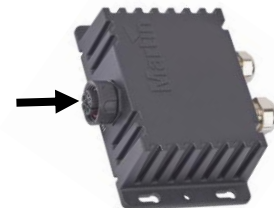

Verbindung der Geräte

Sie können Geräte entweder:

- Direkt miteinander verbinden (Hybridausgang eines Gerätes mit dem Hybrideingang des nächsten Gerätes verbinden, siehe Figure 5), oder
- Martin Hybridleitungen zur Verbindung verwenden (siehe Exterior Linear Pro Bereich der Martin Webseite www.martin.com).

Wenn Sie zwei Geräte in einem Winkel zueinander montiert haben (z.B. ein 90° Winkel an einer Ecke), verwenden Sie eine 20 cm lange Hybridleitung zur Verbindung der Geräte.

Die festen Leitungen an den Geräten ermöglichen die Montage der Geräte mit 2 mm Abstand, um die thermische Ausdehnung der Geräte zu berücksichtigen, wenn Sie in einer Linie aneinander montiert werden.

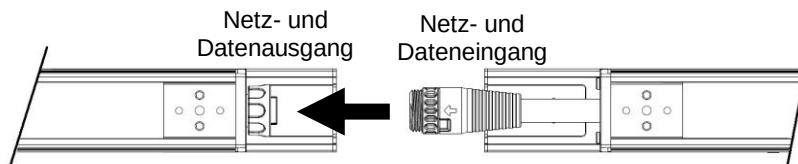


Bild 15. Verbindung der Geräte

Verbindung der Geräte untereinander:

1. Die Installation muss spannungsfrei sein. Verbinden oder trennen Sie keine Verbinder unter Last.
2. Siehe Figure 5. Verbinden Sie den Hybridausgang eines Gerätes direkt oder über eine Hybridleitung mit dem Hybrideingang des nächsten Gerätes.
3. Der Hybridausgang des letzten Gerätes der Linie muss mit einer Abschlusskappe geschützt werden.
4. Prüfen Sie die Installation und führen Sie Sicherheitschecks durch, bevor Sie die Installation in Betrieb nehmen

Accessories

Installing a glare shield

Glare shields designed to limit lateral glare in one direction are available from Martin in 1 ft. (300 mm) and 4 ft. (1200 mm) lengths for the Exterior Linear Pro. See details in the Exterior Linear Pro area of the Martin website at www.martin.com.


To install a glare shield, see illustration on right. Fasten the glare shield to the side of the fixture by passing the supplied screws through the holes A in the glare shield and into the holes B in the fixture.




Installing a louvre

Accessory louvres designed to limit all lateral glare are available from Martin in 1 ft. (300 mm) lengths for the Exterior Linear Pro. Different louvres are available to fit QUAD and CTC fixtures. See details in the Exterior Linear Pro area of the Martin website at www.martin.com.

Louvre, QUAD fixtures

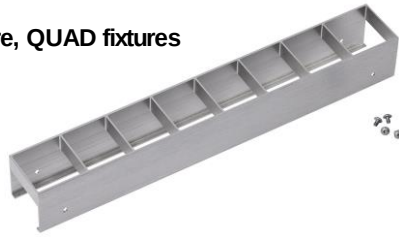


Louvre, CTC fixtures

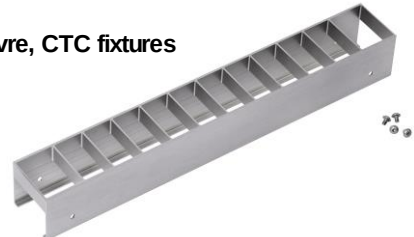

Louvres slide into accessory mounting channels in the fixture profile. To install a louvre:

1. See illustration on right (QUAD Graze 1 ft. fixture illustrated). Align the louvre with the mounting channel A.
2. Slide the louvre fully into the channel.
3. Secure the louvre by fastening the four screws supplied with each louvre through the louvre and into holes B in the fixture. Check that the louvre is held securely.

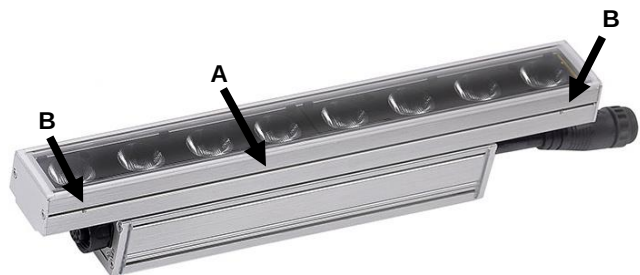


Installing a microlens diffuser (Graze fixtures only)

Asymmetric microlens diffusers that give wider, softer light output are available from Martin as accessories for the Exterior Linear Pro QUAD and CTC Graze. See the Exterior Linear Pro area of the Martin website at www.martin.com for details. Diffuser films are supplied in 4 foot lengths that can be cut into 1 foot lengths if required.

The diffuser film slides into a mounting channel in the Graze fixture profile.

To install a microlens diffuser:

1. See illustration on right. Undo and remove the two screws A in either end of the fixture.
2. Remove the end cap B and waterproof seal C from the end of the fixture.
3. Align the diffuser film D with the mounting channel and slide the film fully into the channel. Make sure that the film slides under the tabs (arrowed) in the fixture.
4. Reinstall the seal C, end cap B and screws A.

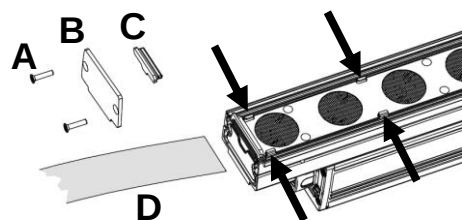

Maintenance



Warning! There are no user-serviceable parts inside. Do not open the housing. Refer any service operation not described in this manual to Martin Professional or its authorized service agents.

The only service operation the user can carry out on Exterior Linear Pro fixtures is occasional cleaning.

Be aware that the output of LEDs, like all light sources, changes gradually over many thousands of hours of use. If you require products to perform to very precise color specifications, you may eventually need to make small readjustments at the lighting controller.

Running test sequences

Exterior Linear Pro fixtures are programmed with a test sequence that is activated by 'swiping' (moving) a magnet past a magnetic switch inside the fixture. The magnetic switch is located on the side of the fixture, approximately halfway between the ends of the fixture. A magnet icon is provided on the fixture to show the correct location.

See illustration on right. We recommend that you use the Martin Service Tool to swipe and activate the magnetic switch.



Activating the magnetic switch lets you display the product's status and test the LEDs.

Exterior Linear Pro QUAD models

Swiping a magnet past the magnetic switch causes the fixture to step through the following sequence:

1. Display status code (see table below for meaning).
2. All LEDs at full intensity.
3. All red LEDs at full intensity.
4. All green LEDs at full intensity.
5. All blue LEDs at full intensity.
6. All white LEDs at full intensity.
7. All LEDs at 20% intensity.
8. Exit sequence and resume normal operation.

You can also resume normal operation by cycling power off and on. If you are sending a DMX signal to the fixture, it will exit the sequence and enter normal DMX operation again after a short period.

Fixture status is indicated as follows:

LED color	Signal	Status
Blue	Fast flash	Busy (booting or uploading SW)
Blue	Slow flash	No DMX detected
Green/blue	Alternating	Running normally in DMX mode

Exterior Linear Pro CTC models

Swiping a magnet past the magnetic switch causes the fixture to step through the following sequence:

1. Display status code (see table below for meaning).
2. All LEDs at full intensity.
3. All cold white LEDs at full intensity.
4. All neutral white LEDs at full intensity.
5. All warm white LEDs at full intensity.
6. All LEDs at 20% intensity.
7. Exit sequence and resume normal operation.

You can also resume normal operation by cycling power off and on. If you are sending a DMX signal to the fixture, it will exit the sequence and enter normal DMX operation again after a short period.

Fixture status is indicated as follows.

LED color	Signal	Status
Cold	Fast flash	Busy (booting or uploading SW)
Cold	Slow flash	No DMX detected
Cold/warm	Alternating	Running normally in DMX mode

Managing humidity

Exterior Linear Pro fixtures are IP66-rated and are designed to resist water and moisture in environments with widely varying climate, temperature and humidity conditions. But if fixtures are not managed correctly during installation and service, water and moisture can enter, leading to humidity and condensation inside the fixtures. Follow the precautions in this chapter to avoid this problem.

General

- Air, and even water, can be sucked along cables and into fixtures. A cracked or porous cable jacket can allow water into the cable. Replace any cable that is not in perfect condition. Make sure that cables from fixtures open into dry areas (e.g. junction boxes in dry locations).
- Do not clean fixtures with high-pressure water jets or immerse them.

Pressure relief valve

A valve with a Gore-Tex membrane on the back of the fixture equalizes pressure by allowing air to pass through it when the fixture heats up and cools down, but at the same time it acts as a barrier to water in liquid form. The expulsion of warm air (with a slightly higher water vapor content) and intake of cool air (with a slightly lower water vapor content) prevents humidity buildup over time, provided that the valve works correctly and the fixture is correctly sealed.

Pressure relief valves have a limited service life. They become blocked over time as the micropores in the membrane fill with particles. When a valve becomes blocked, excess pressure can damage seals or cause air and even water to be sucked into the fixture along cables. A blocked valve cannot be cleaned and must be replaced if it shows any signs of contamination or is not in perfect condition.

For maximum fixture service life, have the pressure relief valve replaced after an extended period of use. Intervals for valve replacement depend on the installation environment. Please consult your Martin dealer about a suitable replacement schedule. To ensure optimum humidity control, valve replacement must be carried out by Martin Service.

Cleaning

Regular cleaning is essential for fixture life and performance. Buildup of dust and dirt degrades the fixture's light output and cooling ability.

Cleaning schedules will vary greatly depending on the operating environment. It is therefore impossible to specify precise cleaning intervals for the Exterior Linear Pro Series. Inspect fixtures within their first few weeks of operation to see whether cleaning is necessary. Check again at frequent intervals. This procedure will allow you to assess cleaning requirements in your particular situation. If in doubt, consult your Martin dealer about a suitable maintenance schedule.

Do not use products that contain solvents, abrasives or caustic agents for cleaning, as they can cause surface damage to the fixture. The aluminum housing and front glass can be cleaned with mild detergents such as those for washing cars.

To clean the housing and front glass:

1. Visually check that the silicone seals and the power and data cables are in good condition. If any seal or cable shows signs of damage, cracking or loss of water resistance, stop cleaning the fixture and contact a Martin authorized service technician for replacement.
2. If seals are in good condition, rinse off loose dirt with a hose or low-pressure water spray.
3. Wash the aluminum housing and front glass using warm water with a little mild detergent and a soft brush or sponge. Do not use abrasive cleaners.
4. Rinse with clean water and wipe dry.

Approvals

This product has been tested and found to comply with the following standards:

- Global CB Certification/IECEE: IEC 60598-2-5 (IEC 60598-1)
- EU safety: EN 60598-2-5 (EN 60598-1), EN 62471, EN62493
- EU EMC: EN 55015, EN 55032, EN 61547, EN 55035, EN 61000-3-2, EN 61000-3-3
- US safety: UL1598
- US EMC: FCC Part 15 Class B
- Canadian safety: CSA C22.2 No. 250.0
- Canadian EMC: ICES-003 Class B; ICES-005 Class B
- United Kingdom: UKCA
- Australia/NZ: RCM

 
FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

	Disposing of this product Martin® products are supplied in compliance with Directive 2012/19/EC of the European Parliament and of the Council of the European Union on WEEE (Waste Electrical and Electronic Equipment), where applicable. Help preserve the environment! Ensure that this product is recycled at the end of its life. Your supplier can give details of local arrangements for the disposal of Martin products
---	--

