

Exterior 1200 IP error message chart

E7	Input voltage error
E8	Animation fan error
E9	Gobo fan error
E11	External Temperature error
E13	Internal Temperature error
E16	Realtime clock error
E17	EEPROM error
E18	RAM error
E20	Zoom reset error
E25	Color reset error
E26	Display error
E27	External fan error
E28	Internal fan 1 error
E29	Internal fan 2 error
E30	The doorswitch is open
E31	The Lamp is HOT (Remaining minutes: X)
E32	The Lamp circuit is shorted
E33	Lamp error
E36	Internal Temperature error
E37	Focus reset error
E38	Gobo selection reset error
E39	Gobo rotation reset error
E40	Animimation position reset error
E41	Animimation rotation reset error
E42	Slave board link error
E64	Effects too cold to function - Heating up
E65	Slave board realtime clock error
E66	Slave board EEPROM error
E67	Slave board RAM error