BB 100

BROADCAST SERIES



Soundcraft

BB 100



With the relentless expansion of Broadcasting in all parts of the world, we have recognised the market's need for a more cost-effective, small format audio console which is not only well-featured, but also able to deliver the performance and build quality expected by today's Broadcast professionals.

The BB100 is a versatile member of our range of professional audio mixing consoles with a flexible design aimed primarily at broadcasters, but still remaining suitable for use in many other applications.

FEATURES

- Up to 40 channels can be fitted
- Up to 8 subgroups can be fitted
- There are 8 Aux sends, Aux 1-2 can be configured as stereo
- Up to 5 Stereo FX returns (depending on the number of subgroups fitted)
- Five chassis sizes are available — typical configurations are:
  (8 + 2 stereo / 4 / 2) (16 + 2 stereo / 4 / 2)
  (24 / 8 / 2) (32 / 8 / 2)
  (40 / 8 / 2)
- Mono channels have 4 band EQ, Stereo channels have 3 band EQ. Both have swept mids with adjustable Q and In/Out switch

OTHER SYSTEM FEATURES

- LED indication on all important switches
- Major inputs and outputs are balanced
- Stereo PFL/AFL bus
- Many internal jumper links for user configuration
- Line up oscillator with 3 frequencies
- Metering uses 28 segment lightmeters and moving coil meters



THE BB100 INCLUDES MANY FEATURES USEFUL TO BROADCASTERS

- Up to 4 Cleanfeed Outputs with talkback. These outputs can be changed (using internal jumpers) to an output matrix fed from the groups and main output
- Control Room Monitor with external inputs and outputs for Main and Nearfield speakers. One of the sources has a 4 input sub mixer for returns from video machines
- Studio Monitor with talkback. This output is automatically muted by the On Air switch or when a channel fader is open and that channel is selected to “Mic”
- The On-Air Switch also inhibits line-up tone and oscillator signals and provides an output which can be used to operate an external On-Air lamp. The On-Air function can also be activated from outside the console
- “Soft” Mute circuits
- Fader Starts and External Mutes
- Stereo channels have M-S (Sum and Difference) Switches
- Channel Meters reading the prefade signal
- Direct Outputs on all mono input channels
- Conductive plastic faders



LB 1 MONO INPUT

BALANCED MIC/LINE INPUT

Phantom Power	+48V to Mic Input.
Pad	Attenuates Mic Input by 15 dB, maximum signal level is +7 dBu.
Li ne	Selects Mic or Line Input.
Phase Reverse	Operates on both Mic and Line inputs.
Gain Control	Mic from +10 to +70 dB. Line from -20 to +20 dB.

FOUR BAND EQUALISER WITH “IN” SWITCH

HF	+/-18 dB shelving response at a frequency of 6 kHz or 12 kHz.
HMF	+/-14 dB with a continuously variable frequency range from 300 Hz to 6 kHz. The x3 button changes the range to 900 Hz - 18 kHz.
HMF Q Switch	Q setting of 0.7 or 1.3
LMF	+/- 14 dB with continuously variable frequency range from 40 Hz - 800 Hz. The x3 button changes the range to 120 Hz - 2.4 kHz.
LMF Q Switch	Q setting of 0.7 or 1.3
LF	+/-18 dB shelving response at a frequency of 40 Hz or 80 Hz. The x3 Button changes the frequencies to 120 Hz or 240 Hz.
HP Filter	18 dB per octave, -3dB at 80 Hz.

8 AUX SENDS

Mono Aux Sends	Aux sends 3/4, 5/6, and 7/8 can be switched Pre/Post fader in pairs and have dual concentric controls for a level/level arrangement.
Stereo Aux Send	Aux 1/2 is similar but has an internal option to change the controls to a level/pan arrangement.

OTHER FEATURES

Insert point	The insert point is post-EQ and pre-fader. The insert return is balanced.
Channel Pan	This pans across the stereo and group buses. Pan to left routes to the odd groups and pan to right routes to the even groups.
Group Disable	Pan can be disabled from the groups by using the Group Disable switch.
Soft Mute	The module uses a soft mute circuit for click free switching.
Fader	Conductive Plastic ALPS 100 mm fader with 10 dB gain in hand.
Fader Start	- is provided
Mute bus	When a channel is selected to Mic and the fader is open, a control signal is sent to mute Monitor 2 (Studio Monitor).
Direct Output	The direct output is normally fed from the post fade signal, but can be selected to pre-fader-post-mute or pre-EQ using internal jumpers.
PFL	The PFL switch provides pre fade signal to the monitor speakers.
AFL Option	An internal jumper option allows the PFL signal to be replaced by AFL - this signal is derived post pan and is therefore stereo.
Meter	A four segment meter displays channel pre-fade level, monitoring pre-EQ and post-EQ simultaneously. The overload LED lights when the signal reaches +18 dB.
Group Routing	Four Group assign switches are provided, assigning groups in pairs. These are labelled ‘1 /2’, ‘3/4’, ‘5/6’, & ‘7/8’. * Groups are available only if the appropriate number of Group Modules are fitted.
Routing to Stereo	Assigns the signal on the Input module to the Stereo Bus.

LBS STEREO INPUT

BALANCED INPUT

Mono Left	Applies the left hand signal to both left and right hand sides of the module
Mono Right	Applies the right hand signal to both left and right hand sides of the module. * If both mono switches are pressed together, a blend of left and right signals appears both sides of the module.
Phase Reverse	Reverses the phase of the right hand signal only.
Gain Control	From -20 to +20 dB.

THREE BAND EQUALISER WITH “IN” SWITCH

HF	+/-18 dB shelving response at a frequency of 6 kHz or 12 kHz.
MF	+/-14 dB with a continuously variable frequency range from 80 Hz to 5 kHz. The x3 button changes the
range	to 240 Hz - 15 kHz.
MF Q Switch	Q setting of 0.7 or 1.3
LF	+/-18 dB shelving response at a frequency of 40 Hz or 80 Hz. The x3 Button changes the frequencies to 120 Hz or 240 Hz.
HP Filter	18 dB per octave, -3dB at 80 Hz.

8 AUX SENDS

Mono Aux Sends	Aux sends 3/4, 5/6, and 7/8 are fed from the sum of left and right signals. They can be switched Pre/ Post fader in pairs and have dual concentric controls for level/level arrangement.
Stereo Aux Send	Aux 1/2 is similar but has an internal option to change the controls to a stereo level/pan arrangement, i.e. Aux 1 will be fed from the left only and Aux 2 will be fed from the right only.

OTHER FEATURES

Insert point	The insert point is post-EQ and pre-fader. The insert return is balanced.
Channel Pan	This pans across the stereo and group buses. Pan to left routes to the odd groups and pan to right routes
to the	even groups.
Soft Mute	The module uses a soft mute circuit for click free switching.
Fader	Conductive Plastic ALPS 100 mm fader with 10 dB gain in hand.
Fader Start	- is provided
PFL	The PFL switch provides stereo pre-fade signal to the monitor speakers.
AFL Option	An internal jumper option allows the PFL signal to be replaced by AFL - this signal is derived post pan.
Meter	A four segment meter displays channel pre-fade level, monitoring left and right simultaneously. The overload LED lights when the signal reaches +18 dB.
Group Routing	Four Group assign switches are provided, assigning groups in pairs. These are labelled ‘1/2’, ‘3/4’, ‘5/6’, and ‘7/8’. * Groups are available only if the appropriate number of Group Modules are fitted.
Routing to Stereo	Assigns the signal on the Input module to the Stereo Bus.

LB2 DUAL SUBGROUP

AUX SENDS AND OUTPUT MATRIX OPTION

Mono Aux Sends	Both subgroups can feed Aux sends 1/2 and 3/4 only. Two sets of controls are provided - the first set is fed from the odd numbered group and the second set from the even numbered group. Each set can be switched Pre/Post fader, the switches operate on all four Aux sends. They have dual concentric controls, for level/level arrangement.
Matrix Send Option	The aux controls can be used to feed an output matrix instead of the aux buses, this option is selected using an internal switch. * Note – this option can only be used if the Cleanfeed outputs are not used.

CLEANFEED (MIX-MINUS) AND OUTPUT MATRIX OPTION

Output	The Cleanfeed output is electronically balanced.
Number of Outputs	One Cleanfeed mix amp is located in each dual subgroup module, so the number of available Cleanfeed outputs is the same as the number of Dual Subgroup modules fitted in the console, with a maximum of four.
Matrix Send Option	This uses the same circuitry as the Cleanfeed outputs and so the option is not possible if Cleanfeeds are being used.
AFL	The AFL switch sends the post fade signal to the monitor speakers.
Talk to Cleanfeed	This switch enables talkback when the Talk switch is pressed on the LB6 Aux Master module.
Mute	The mute switch mutes the output. The output is also temporarily muted when the console is switched on to prevent power-on thumps in equipment connected to it.
Cleanfeed Channels	The four channels immediately to the left of the Dual Group modules are used for Cleanfeed Inputs. If the signal is inserted into the first of the four modules (Cleanfeed 1), it will then be removed from the Cleanfeed Output 1 on the Group module.
Tally Lamp	The Tally Lamp can provide a telephone line “ready” indication controlled from outside the console

STEREO RETURN INPUT

Level Control	From “Off” to +10 dB.
ST / Mix Switch	This switch feeds the stereo return either to the Stereo bus or to the associated pair of groups.
Aux Send	The Aux send control can send the signal to Aux 1/2 or Aux 3/4 via an internal jumper link. It also includes a pre/post switch which switches between Pre and Post the group return level pot.
Pan Control	This pans across the stereo and group buses.
Mute Switch	- is provided
PFL	The PFL switch provides pre fade signal to the monitor speakers.

SUBGROUP

Output	The Subgroup output is electronically balanced.
Fader	Conductive Plastic ALPS 100 mm faders with 10 dB gain in hand.
Fader Start	One output is provided which is activated when either of the two faders is open.
Insert point	Each group has a pre-fader insert point. The insert return is balanced.
Subgroup Pan	This pans across the stereo bus.
Soft Mute	The module uses a soft mute circuit for click free switching.
Power On Mute	In addition to the soft mute circuit, the output is also temporarily muted when the console is switched on to prevent power-on thumps in equipment connected to it.
AFL	The AFL switch provides post fade signal to the monitor speakers.
Routing to Stereo	Assigns the signal on the subgroup to the Stereo Bus.
Metering	Group meters can be fitted in the console meterhood depending on the meterhood type.

LB 6 AUX MASTER AND COMMS

AUX OUTPUTS

Output	The Aux outputs are electronically balanced with 10 dB gain in hand.
Mute	A Mute switch is provided.
AFL	An AFL switch is provided.

COMMUNICATIONS

Mic Input	The top of the module contains a Talkback Mic XLR connector with a balanced input.
Talk Switch	A Talk switch activates the Comms system. This switch can be momentary or latching depending on the length of time it is pressed.
Dim on Talkback	There is an option to dim the Control Room Monitors when talkback is active.
Talkback Destinations	Four switches select destination of Talkback sources: Slate — assigns Comms to group buses 1-8 and/or the stereo bus. Aux 5-8 — assigns Comms to Aux 5, 6, 7, & 8. Aux 1-4 — assigns Comms to Aux 1, 2, 3, & 4. Speaker — assigns Comms to Monitor 2 and/or the Comms output connector. Four additional switches located on the Subgroup modules enable talkback to the Cleanfeed outputs.

ON-AIR (USER) SWITCH

Operation	The On-Air (User) switch disables tone and talkback from the destinations of the slate switch (other destinations are not affected). The On-Air switch also mutes Monitor 2 (Studio Monitors).
Control output	There is a control output which can be used to operate external equipment such as an On-Air light (using a suitable relay).
Control Input	The On-Air function can be activated from outside the console.

OSCILLATOR

Frequencies	The oscillator has three frequencies. The default is “OFF” with both buttons up. Pressing the “1 kHz” button provides 1 kHz, pressing the “10 kHz” button provides 10 kHz and pressing both buttons provides 100 Hz.
Routing	The Oscillator utilises the same four assignment switches as the Comms systems to send tone to Slate, Aux Sends and Speaker outputs.

HEADPHONES

Source	A stereo headphone jack is provided which can be fed from the Control Room Monitor, or optionally Monitor 2. A second headphone jack is provided on the console chassis.
Load	The headphones should have an impedance of 200 ohms or greater.





LB 4 MASTER AND MONITOR

AUX SENDS, OUTPUT MATRIX OPTION AND MONITOR MIXER OPTION

Mono Aux Sends	The main left and right outputs can both feed Aux sends 1/2 and 3/4. Two sets of controls are provided - the first set is fed from the stereo bus left signal and the second set from the right signal. Each set can be switched Pre/Post fader, the switch operates on all four Aux sends. They have dual concentric controls, for level/pan. There is an internal option to change controls to a level/level arrangement.
Aux to Cleanfeed	The aux controls can be used to feed signal to the Cleanfeed (or Matrix) outputs instead of the aux buses, this option is selected using internal jumpers.
Monitor Mixer	The aux controls can also be used as a four input mixer with level and pan controls to feed one of the Control Room monitor sources. In this case, the source for the Aux controls is changed from the stereo bus to the four Monitor Return inputs using internal jumpers. Further jumpers allow the destination to be the Stereo Return switch for the Control Room Monitors.

STEREO RETURN INPUT

Level Control	From –20 to +10 dB.
Mute Switch	- is provided.
PFL	The PFL switch provides pre fade signal to the monitor speakers.
ST / Mix Switch	This switch feeds the stereo return either to the Stereo bus or to the associated pair of groups.

PEAK / VU SWITCH

This switch operates on the bargraph meters in the meterhood so that they measure the peak or the average level of the signal.

PFL / AFL LEVEL CONTROL AND LED

This control adjusts the level of the solo bus to the monitor speakers. The LED lights when the PFL / AFL system is active.

MONITOR 2 (STUDIO MONITOR)

Input Sources	Three sources are available: Stereo bus — follows the stereo bus. Control Room Monitor — follows the selected Control Room monitor source. Stereo Return — follows the Stereo Return inputs.
Talkback	Talkback is available via the switch on the LB6 master module.
Power On Mute	The output is temporarily muted by a relay when the console is switched on to prevent power-on thumps in equipment connected to it.
Mute bus	When a mono channel is selected to Mic and the fader is open on that channel, a control signal is sent to mute Monitor 2.
On-Air Mute	The On-Air (User) switch also mutes Monitor 2.
External Mute	There is a jumper selectable option to enable a mute line from outside the console.
Mute LED	This lights when one of the mute conditions described above is active.
Headphones	The console has one headphone output which can be fed from Monitor 2 or Monitor 1 signals. The source for the headphone output is selected via an internal jumper.

MONITOR 1 (CONTROL ROOM MONITOR)

Input Sources	Six sources are available Tape 1 to Tape 4 — Provide four balanced inputs. Tape 1 has an option to set the input sensitivity to –6dBu. Stereo Return — monitors the stereo return input and (via internal jumpers) can be selected to read the 4 input monitor mixer (see earlier in this section). Stereo bus — monitors the main stereo bus outputs.
Speaker 2	A Speaker 2 switch is provided.
Headphones	The console has one headphone output which can be fed from Monitor 1 or Monitor 2 signals. * The source for the headphone output is selected via an internal jumper.
Mute	A Mute switch is provided.
Power On Mute	The output is temporarily muted by a relay when the console is switched on to prevent power-on thumps in equipment connected to it.
Mono	A Mono switch is provided.
Meter Output	A stereo meter output feeds the console meters and is also available on a connector to feed an additional external meter.
Dim on Talkback	There is an option to automatically dim the monitors when console talkback is active.
PFL/AFL	The monitors automatically switch to PFL/AFL when a PFL/AFL switch is pressed.
External Mute	There is a jumper selectable option to enable a mute line from outside the console.

MAIN OUTPUT

Output	The main outputs are electronically balanced.
Fader	Conductive Plastic ALPS 100 mm faders with 10 dB gain in hand. Separate faders are fitted for left and right signals.
Insert point	The main output has a pre-fader insert point. The insert return is balanced.
Mute Switch	— is provided.
Power On Mute	The output is temporarily muted by a relay when the console is switched on to prevent power-on thumps in equipment connected

METERING

Metering is via 28 segment LED bargraph meters plus a pair of moving coil meters which can be either PPM scales (BBC or DIN) or VU scales.


BBC


DIN




VU


Bargraph meters can be switched to Peak or Average response using the switch on the LB4 Master Module.


Meters can read Subgroup Outputs, Follow Monitor and PFL/AFL.


The meterhood switch selects the VU meters to read Follow Monitor or PFL/AFL together with a pair of trimmers for fine adjustment.

CONFIGURATIONS AND DIMENSIONS

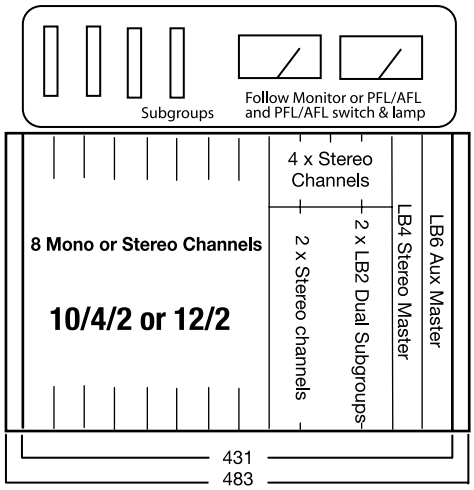

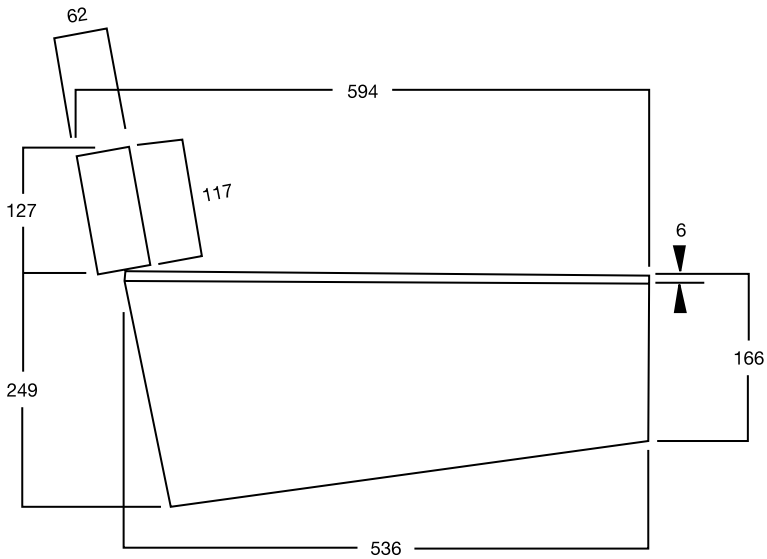

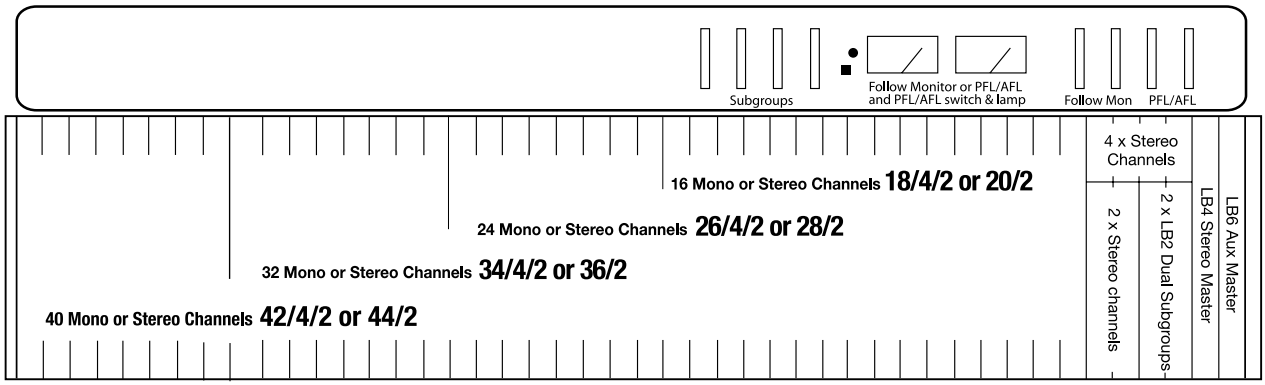

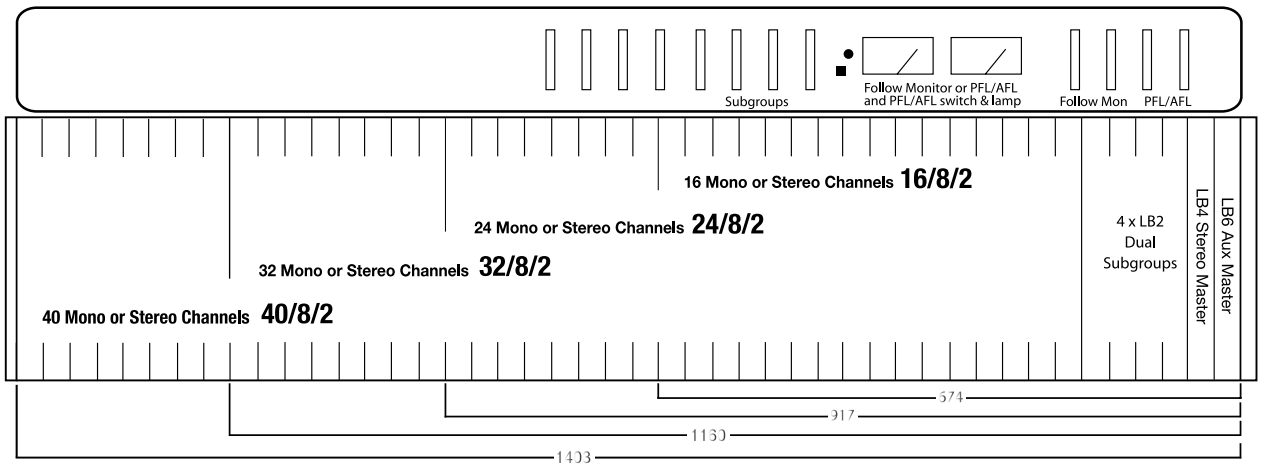

Overall widths:
16/8/2 — 725mm
24/8/2 — 968mm
32/8/2 — 1211mm
40/8/2 — 1454mm

PLEASE CHECK WITH YOUR DISTRIBUTOR FOR AVAILABLE MODULE CONFIGURATIONS

BB100

TECHNICAL SPECIFICATIONS

NOISE

EIN - 200R source, Gain 70dB - 20kHz band RMS..... -127dBu

One Line input to Stereo - Gain unity - 20kHz band RMS ..... -86 dBu

THD

Mic input to Main output with 10kΩ or 600Ω load,

Test signal -30dBu @ 1kHz, Gain 40dB ..... <0.03%

Line input to Main output with 10kΩ or 600Ω load,

Test signal +20dBu @ 1kHz, Gain unity ..... <0.01 %

FREQUENCY RESPONSE

All Filters & EQ out, output load 10kΩ

Mic input to Main output, Gain 60dB, test signal -40dBu ..... +/- 0.5dBu (20Hz - 20kHz)

Line input to Main output, Unity gain, test signal +20dBu ..... +/- 0.5dBu (20Hz - 20kHz)

CROSSTALK

Channel breakthrough

CH1 to Subgroup 1, CH4 to Subgroup 4, Gain unity

Test signal +20dBu to CH1, 200Ω load to CH4

Measured @ Subgroup 4 output ..... Better than -90dBu (40Hz - 15kHz)

Channel Pan cut-off

CH1 to Subgroup 4, Pan hard right, Gain unity

Test signal +20dBu to CH1

Measured @ Subgroup 3 output ..... Better than -65dBu (@ 1kHz)

MAXIMUM SIGNAL HANDLING

Mic input ..... +25dBu (with PAD)

Line input ..... +25dBu

Subgroup & Main Outputs ..... +25dBu (600Ω load or higher)

IMPEDANCE

Mic input ..... > 1.2kΩ (20Hz - 20kHz)

Line input..... 15kΩ (20Hz - 20kHz)

Outputs ..... 75Ω (@ 1 kHz)

POWER CONSUMPTION

10-4-2 console ..... approx. 0.5 kW

32-8-2 console ..... approx. 1.2 kW

NOTES

1. 0dBu = 0.775 volts.
2. Above specifications apply to standard configuration with 8 mono inputs.
3. All measurements taken using the Audio Precision System One test set.
4. Where no load impedance is specified, use 10kΩ or greater.
5. All figures quoted above are expected typical performance from standard production models.
6. No literature represents an offer for sale of any particular product.
7. The company operates a policy of continuous design improvement and reserves the right to change specifications without notice.

Soundcraft Registered Community Trade Mark/RTM No. 000557827

SOUNDCRAFT
Harman International Industries Ltd.
Cranborne House, Cranborne Road
Potters Bar, Herts. EN6 3JN, UK
T: +44 (0)1707 665000
F: +44 (0)1707 660742
E: info@soundcraft.com

SOUNDCRAFT USA
8500 Balboa Blvd.
Northridge, CA 91329, USA
T: +1-818-920-3212
F: +1-818-920-3208
E: soundcraft-usa@harman.com

www.soundcraft.com

Soundcraft reserves the right to improve or otherwise alter any information supplied in this document or any other documentation supplied hereafter. E&OE 07/05
This equipment complies with the EMC Directive 89/336/EEC

Part No. ZL0635

CE

A Harman International Company