

MAC 250™ Beam Kit Installation Guide

Introduction

This Installation Guide explains how to install the MAC 250 Beam Upgrade Kit to convert a standard Martin Professional™ MAC 250 Wash™ to a MAC 250 Beam™ model. Installation only takes a few minutes. A fixture software update is required if the installed software version is earlier than v. 1.4.0.

If you keep the standard components you remove, the MAC 250 Beam components can be uninstalled and the fixture returned to standard MAC 250 Wash configuration at any time.

The MAC 250 Beam Kit has part number P/N 91610101.

For the latest documentation and information about this and all Martin Professional products, please visit the Martin website at www.martin.com.



Warning! The MAC 250 Beam has a much more intense light beam than the standard MAC 250 Wash. Do not use it to illuminate any surface closer than 3.5 m (11 ft. 6 ins.) from the front of the head, or you may create a fire risk.



Apart from the new minimum distance to illuminated surfaces specified above, follow all the other safety precautions in the MAC 250 Wash user manual when installing the MAC 250 Beam Kit and using the modified product. The user manual is supplied with MAC 250 Wash fixtures, and the latest revision of the user manual is also available for download from the Product Support page for the MAC 250 Wash at www.martin.com

Disconnect the fixture from power and allow to cool before starting work.

The MAC 250 Beam Kit must be installed by qualified professional technicians only. Read all of this Installation Guide carefully before starting to install the Kit.

If you have any questions about how to install the MAC 250 Beam Kit or use the MAC 250 Beam safely, please contact your local Martin distributor (see www.martin.com/distributors for details) or call the Martin 24-hour service hotline on +45 8740 0000, or in the USA on 1-888-tech-180.

Important! Do not get oil or grease onto optical components. If necessary, clean components with 99.9% isopropyl alcohol.

Overview

The MAC 250 Beam Upgrade Kit contains the following items:

- MAC 250 Beam front lens assembly, P/N 62409076
- MAC 250 Beam lens bracket assembly, P/N 62420240
- Four M4 x 12 Torx 20 button-head screws, P/N 08070710
- Set of six beam effect gobos for MAC 250 Beam, P/N 62420250
- Aperture plate with sunlight shield, MAC 250 Beam, P/N 23819530
- Warning label (min. distance to illuminated surfaces), P/N 33150092

Keep the protective packaging from the front lens assembly for re-use when packing the fixture in a MAC 250 flightcase.

Tools required

Screw sizes given in this Installation Guide are indicative only.

The following tools are normally required to install the standard MAC 250 Beam Kit. However, if screws have been replaced during service, for example, you may find that other tools are required.

- Pozidriv PZ1 and PZ2 screwdrivers
- Torx TX20 screwdriver

Installation procedure

To install the MAC 250 Beam components in a standard MAC 250 Beam fixture:

1. Disconnect the fixture from power and allow it to cool.
2. See Figure 1. Release the head cover retaining screws (arrowed) and remove both head covers. You can either let the head covers hang on their safety cables or unclip their safety cables and remove them completely, whichever is more convenient.
3. Apply the tilt lock with the head topside up (in this position the text on the back of the head is the right way up).
4. See Figure 2. Remove the four crosshead retaining screws from the front lens assembly and remove the front lens. The screws have Loctite applied at the factory, so take care when removing them. Store the front lens for possible re-use if the fixture is to be returned to standard MAC 250 Wash configuration at a later time. You can send the screws for scrap metal recycling, because new Torx screws are supplied in the Kit.

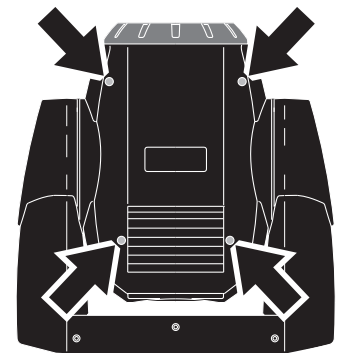


Figure 1

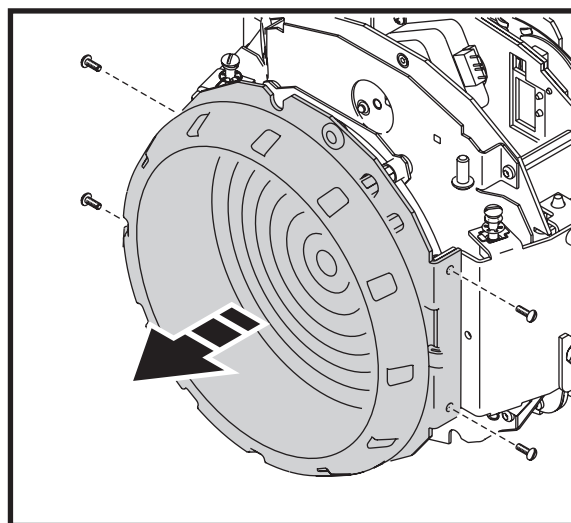


Figure 2

5. See Figure 3. Fasten the new front lens mounting bracket (P/N 62420240) supplied in the Kit to the front of the head using the four M4 X 12 Torx 20 screws (P/N 08070710) also supplied in the Kit. Apply a very small quantity of Loctite to the threads before tightening the screws.

If you reinstall the original front lens at a later date to return the fixture to standard MAC 250 Wash configuration, re-use these Torx screws.

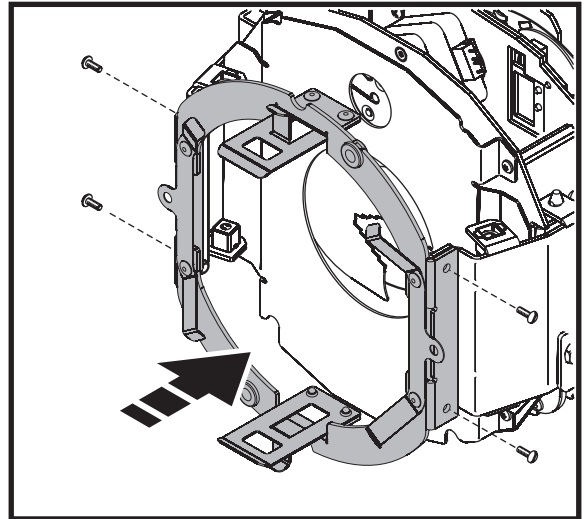


Figure 3

6. See Figure 4. Remove the four screws (arrowed) that hold the aperture plate in place inside the front of the head. See Figure 5. Remove the aperture plate and install the new aperture plate with shield plate (P/N 23819530) supplied in the Kit in its place, re-using the original four screws. The shield plate in the aperture plate must face downwards as illustrated to protect the wiring in the head from sunlight that might be focussed into the head by the new front lens assembly.

If you reinstall the original front lens at a later date to return the fixture to standard MAC 250 Wash configuration, you must remove the new aperture plate together with the new front lens assembly.

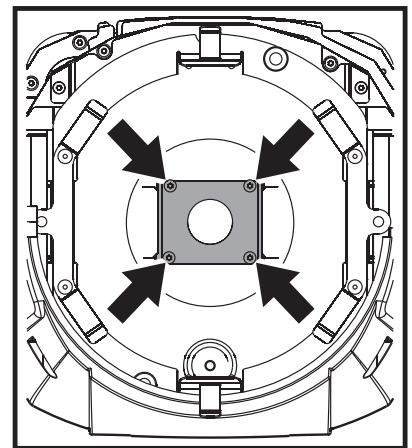


Figure 4

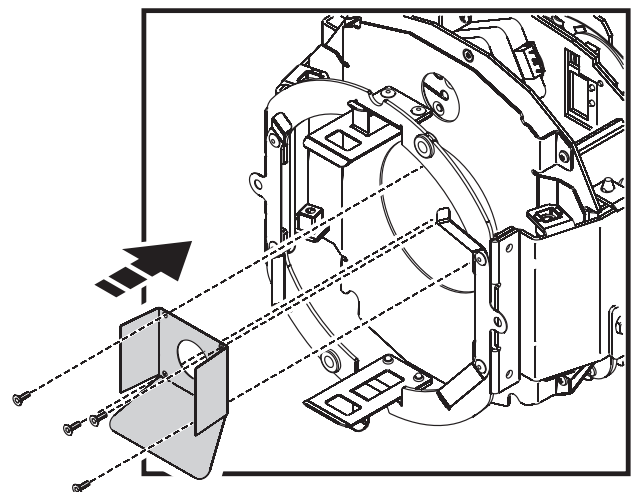
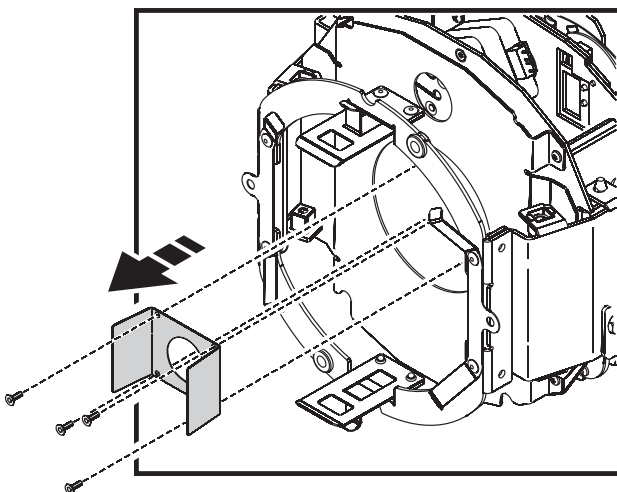


Figure 5

7. See Figure 6. A set of six beam effect gobos (P/N 62420250) is supplied in the Kit. To install a beam effect gobo, remove a color filter from the color wheel by pressing it gently away from its retaining tabs (A) and lifting it carefully out of the color wheel (B). Replace with a gobo. Store the original color filters safely for possible future re-use.

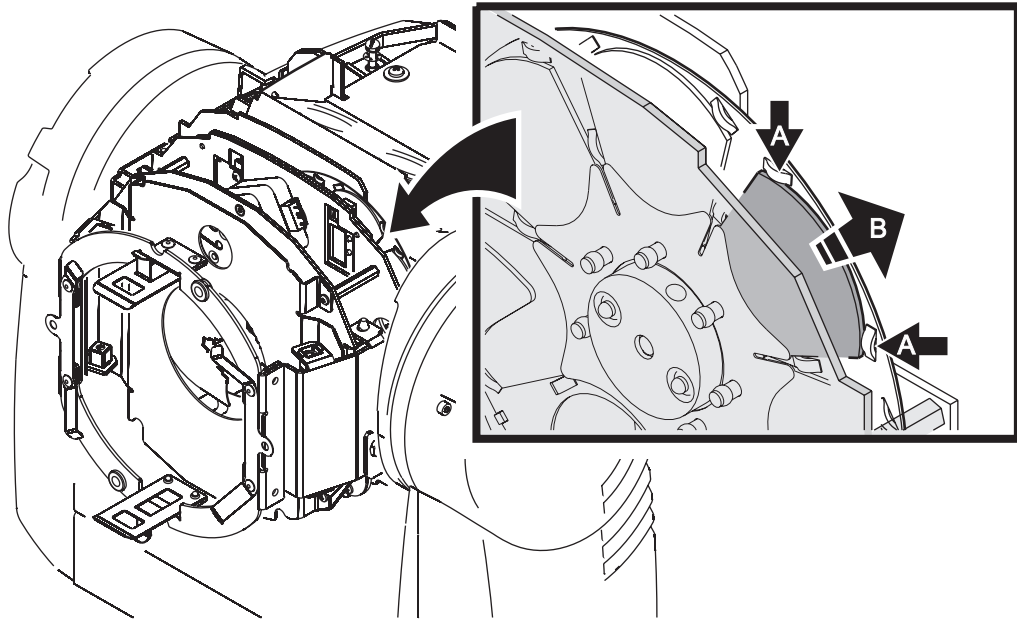


Figure 6

8. We recommend that you install beam effect gobos in the color wheel in the positions shown in Figure 7 in all the fixtures that you modify so that all MAC 250 Beam fixtures will have identical behavior under DMX control. A copy of this illustration is included on the last page of this guide as a reference for lighting designers and lighting desk operators.

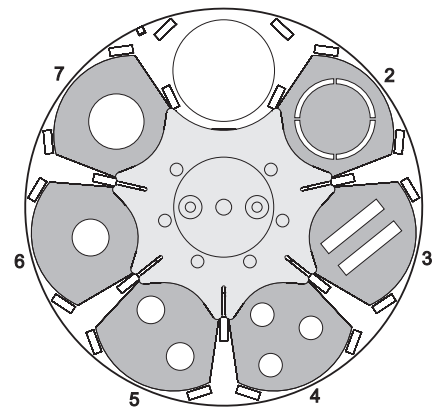


Figure 7

9. See Figure 8. The new front lens assembly (P/N 62409076) has a safety cable with a carabiner clip. Attach the clip to the head using either of the two holes (A) provided in the new front lens mounting bracket, then push the clip flat (B) to give space for the front lens assembly.

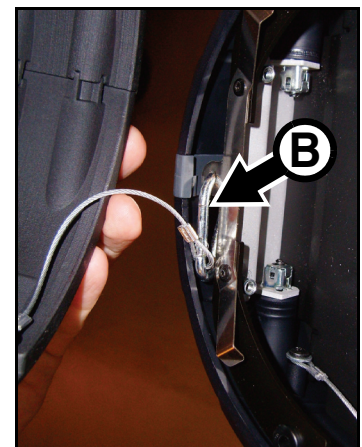
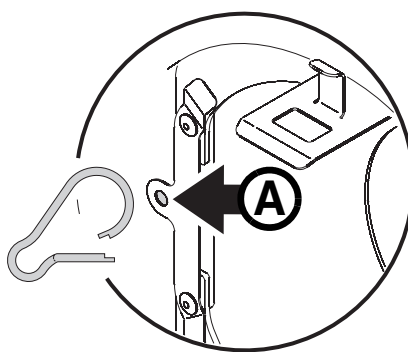


Figure 8

10. See Figure 9. Clip the new front lens assembly securely onto its mounting bracket in the front of the head.

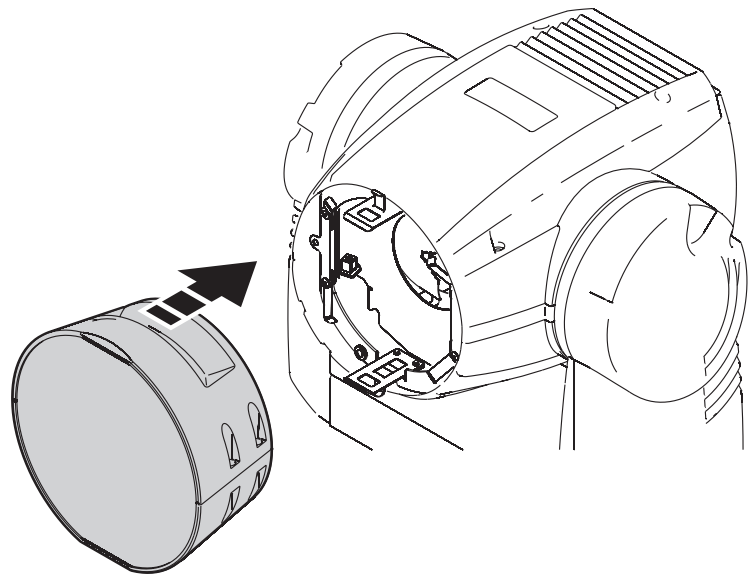


Figure 9

11. Stick the warning label supplied in the Kit onto the back of the head as shown in Figure 10. With the Beam Kit installed, this label replaces the warning printed on the standard MAC 250 Wash. **Do not illuminate any surface within 3.5 m (11 ft. 6 ins.) of the MAC 250 Beam.**

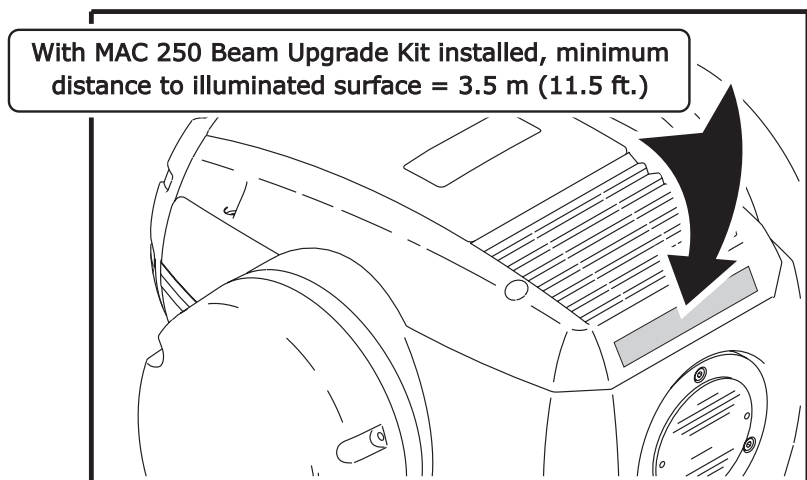


Figure 10


12. Finally, before using the fixture, update the fixture software to version 1.4.0 or later, following the software update instructions in the MAC 250 Wash user manual. From software v.1.4.0, the frost filter is moved very slightly forward in order to reduce reflections from the CMY flags. There is no need to roll back the software to an earlier version than v.1.4.0 if the fixture is returned to a standard MAC 250 Wash configuration at a future time.

The front lens assembly must be unclipped and removed from the head when the fixture is packed in a MAC 250 flightcase. The front lens assembly can be stored in the tray in the flightcase using its protective packaging from the MAC 250 Beam Kit.



Martin Professional A/S • Olof Palmes Allé 18 • 8200 Aarhus N • Denmark
Tel: +45 8740 0000 • Fax +45 8740 0010 • www.martin.com

MAC 250 BEAM™ RECOMMENDED GOBO POSITIONS

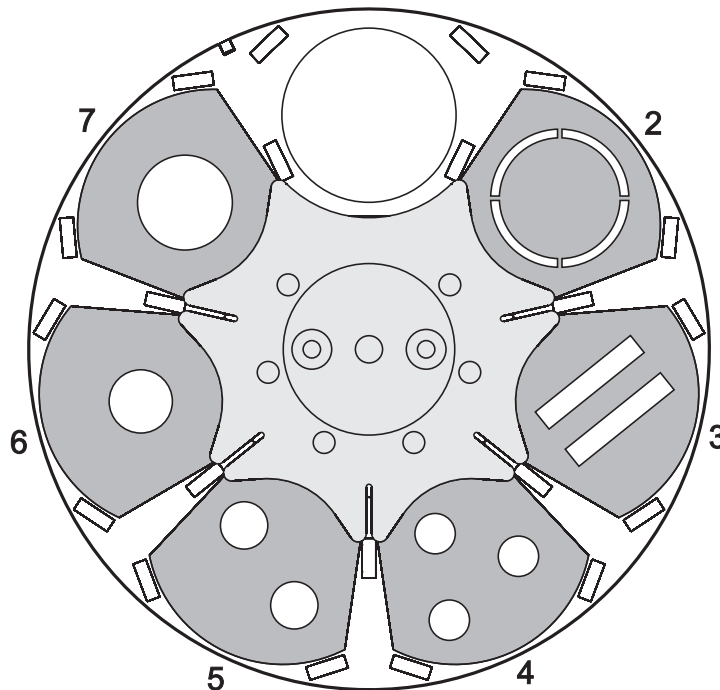

1. Open
2. Beam cone
3. Beam 2 bars
4. Beam 3 dots
5. Beam 2 dots
6. Beam aperture 10
7. Beam aperture 15