
JEM[™] READY 365[™] user manual



Dimensions

All dimensions are in millimeters

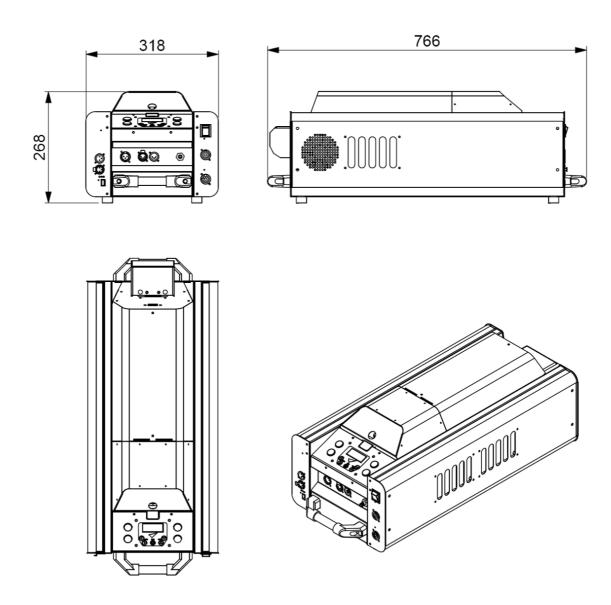

©2013 Martin Professional A/S. Information subject to change without notice. Martin Professional A/S and all affiliated companies disclaim liability for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this manual. The Martin logo, the Martin name and all other trademarks in this document pertaining to services or products by Martin Professional A/S or its affiliates and subsidiaries are trademarks owned or licensed by Martin Professional A/S or its affiliates or subsidiaries.

2 Dimensions

Contents

Dimensions	2
Contents	3
Safety information	5
Product overview Product description Features at a glance Product details	8 8
Quick Start Setting up Making haze Switching off	. 10 . 10
Installation and setting up. Location	. 11 . 11 . 12 . 12
Control settings Overview Quick access buttons Setting Run mode Setting Haze density Setting Fan speed Setting the Timer Setting the DMX base address Setting the master-slave link mode Checking gas pressure Priming the machine after fluid out Resetting options to factory settings Aux menu	. 13 . 14 . 14 . 14 . 15 . 15 . 15
Remote control	. 17 . 17 . 17
DMX control Overview Connection DMX functions RDM operation.	. 18 . 18 . 18
Haze fluid types	. 20
Basic service	. 21
Troubleshooting	. 22
Status messagesResetting the machine after fluid out	. 23
Specifications	. 24

4 Contents

Safety information

The following symbols are used to identify important safety information:



Caution! Safety hazard. Risk of personal injury.



Caution! Burn hazard. Hot surface. Do not touch.



Danger! Hazardous voltage. Contact will cause electric shock.



Caution! Fire hazard.



Warning! This product is not for household use. It presents risks of injury due to electric shock, burns, falls and respiratory problems!

Read this manual before operating the machine, follow the safety precautions listed below, and observe all warnings in this manual and printed on the machine. Use the system only as described in this manual and in accordance with local laws and regulations.

If you have questions about how to operate the machine safely, or if you have followed the instructions in this manual and the machine is malfunctioning, please contact Martin Service.

Preventing electric shocks



- Always ground (earth) the machine electrically.
- Use only a source of AC power that complies with local building and electrical codes, and that has both overload and ground-fault protection.
- Before connecting the haze machine to power, check that the voltage indicated on the machine's serial label matches your local AC power voltage. If your AC power voltage does not match, do not use the machine. Contact Martin Service for assistance.
- Before using the machine, check that all power distribution equipment and cables are in perfect condition and rated for the current requirements of all connected devices.
- If the machine or any cables connected to it are in any way damaged, defective, wet, or show signs of overheating, stop using the machine and contact Martin Service for assistance. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Disconnect the machine from AC power before servicing and when not in use.
- This system is not waterproof and should not be exposed to wet outdoor conditions. Do not immerse in water or any other liquid. Do not expose to high-pressure water jets.
- Do not spill fluid over or inside the machine. If fluid is spilled, disconnect
 AC power and clean with a damp cloth. If fluid is spilled onto electronic
 parts, take the system out of service and contact Martin for advice.

- Do not remove the covers or attempt to repair a faulty machine. Refer any service not described in this manual to Martin.
- Do not operate the machine if any parts are damaged, defective or missing.
- Moisture and electricity do not mix. Do not aim haze output at electrical connections or devices.

Preventing burns and fire



 The haze produced by the machine is hot enough to cause burns when it leaves the nozzle, and very hot droplets of fluid escape occasionally.
 Keep people and objects at least 60cm (24 inches) away from the haze output nozzle.



- Do not touch the haze output nozzle during or after use it becomes extremely hot and remains hot for several hours after the machine has been shut down.
- Haze output contains glycol, a flammable alcohol that burns with an almost invisible blue flame. Do not point haze output at sources of ignition such as open flames or pyrotechnic effects.
- Do not attempt to bypass thermostatic switches, fluid sensors or fuses.
- Replace fuses only with ones of the type and rating specified in this manual for the machine.
- Provide a minimum free space of 100mm (4 inches) around the machine.
- Provide a minimum free space of 500mm (20 inches) around fans and air vents and ensure free and unobstructed air flow to and around the machine.
- Keep the machine at least 60cm (24 inches) away from combustible and heat-sensitive materials.
- Do not operate the machine if the ambient temperature (Ta) is below 5° C (41° F) or above 40° C (104° F).
- Do not operate the machine if the relative air humidity exceeds 80%.

Preventing injuries



- Ensure that the surface on which the machine is located or installed can safely hold the weight of the machine.
- Do not install the machine over areas where people are present.
- This appliance is not intended for use by persons (including children)
 with reduced physical sensory or mental capabilities, or lack of
 experience and knowledge, unless they have been given supervision or
 instruction concerning use of the appliance by a person responsible for
 their safety. Children should be supervised to ensure that they do not
 play with the appliance.
- Haze machines can cause condensation. Do not point the output at smooth floors. Floors and surfaces may become slippery. Check these frequently and wipe dry as necessary to avoid any danger of slipping.
- Ensure at least 2m visibility in areas where haze is being produced.
- Haze fluid contains food-grade glycols and glycerol in solution but may
 present health risks if swallowed. Do not drink it. Store it securely. If eye
 contact occurs, rinse with water. If fluid is swallowed, give water and
 obtain medical advice.

Preventing breathing problems



- A haze machine can operate safely only with the haze fluid it is designed for. Use the machine only with fluids specified under "Haze fluid options" on page 20 or you may cause the release of toxic gases, presenting a severe health hazard. You will also probably damage the machine.
- Do not create dense haze in confined or poorly ventilated areas.
- Do not expose people with health problems (including allergic and/or respiratory conditions such as asthma) to haze output.
- Do not point haze output directly at a person's face or at face height.

Product overview

Product description

The Jem Ready 365™ is a versatile haze machine from Martin Professional designed for the highly demanding professional market. Its ability to produce exceptionally fine water-based atmospheric haze with long hang time makes it an ideal choice for rental houses, shows, theatres, TV studios, clubs, bars, cruise ships, theme parks and more, especially where the residue of oil-based hazers presents an issue.

Robust and portable, the Jem Ready 365™ is capable of dispersing an even, continuous haze with exceptional optical clarity and reflectivity, the perfect small-particle haze for highlighting today's highly defined light beams. A pressurised gas propulsion system ensures smooth distribution while a unique mixing channel allows the haze to optimize before being expelled.

Congratulations on your purchase of the Jem Ready 365™ from Martin. Details of the full range of Martin products are available on our website at www.martin.com.


Features at a glance


- Finest haze production in its class
- Small particle, even haze
- Continuous output
- 5 minute heat-up time
- Water-based fluid with long hang time
- Up to 70 hours continuous operation (subject to gas supply)
- Low noise (Silent Mode available)
- Portable
- Variable haze and fan controls with 5% increments
- 3.8 liter fluid capacity
- Sealed fluid system for transportation
- Advanced Pump Technology (APT)
- Standby battery runs automatic shutdown procedure after power down to prevent clogging
- RDM equipped
- On-board DMX, 5 pin or 3 pin
- User-friendly on-board control panel
- Optional Digital Remote Control



Use only R365 Haze Fluid™. Use of other fluid will void warranty.

Product details

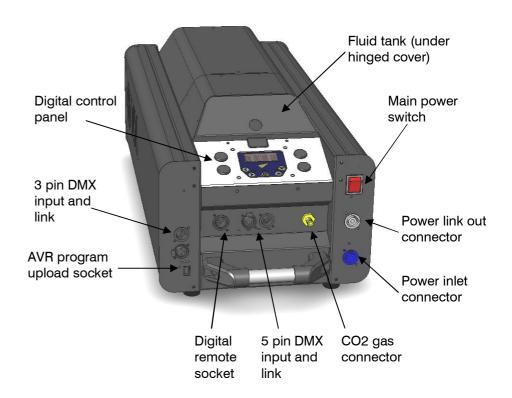

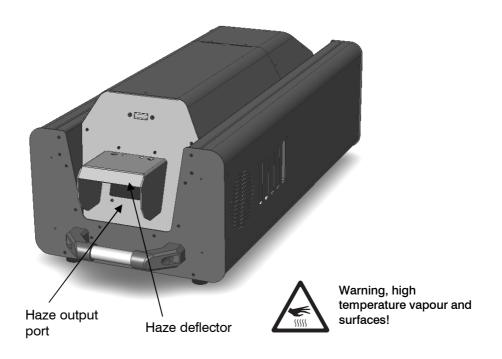

Quick Start

You are no doubt eager to switch on the machine and try it out by making a lot of haze. This section tells you how to do that. However, please also make the time to read the safety and servicing instructions in the remainder of this manual.

Setting up

Locate the machine in a suitably large area with nothing in front of the haze output.

Fill the fluid tank with 3.8 litres of Martin R365 Haze Fluid™ only. Use of other fluid will void the warranty.

Connect the gas line from the CO₂ cylinder using the push fit connector on the rear panel. Connect the regulator to the cylinder and tighten using a suitable spanner. Fully turn on the gas valve at the cylinder. No gas adjustment is required to vary the output of the machine.

Connect a suitably rated power supply to the machine using the supplied Neutrik Powercon cable. The power requirements are 3.1A @ 230V (EU model) or 6.2A @ 120V (US model).

Now turn on the mains switch at the rear of the machine. The display will show **HEAT**, then after about 5-6 minutes the machine will reach operating temperature. If the display shows **OFF**, press the RUN button to the right of the display.

Making haze

If the machine does not automatically start making haze, press the **RUN** quick access button to the right of the display. Press **RUN** again to stop the haze.

If you want to change the haze density, press the Menu < > buttons until the display shows **HAZE**, then press the Enter button and use the Value up/down buttons to select a value above 0%.

You can also adjust the fan speed using the FAN menu.



If no haze is produced it may be necessary to prime the machine, press the Menu <> buttons until the display shows PRME, then press the Value Up button so the display shows Y, then press the Enter button.

Switching off

The Ready 365 is designed to run a self-cleaning cycle after power down to help prevent blockages. It uses an internal rechargeable battery to do this.

If cleaning is needed, when the power is disconnected the display will show "WAIT", then "WAIT 89" counting down to "WAIT 00" will scroll across the display. The unit will then automatically power down.

If the unit is not to be used for some time, turn off the valve on the CO₂ cylinder.

10 Quick Start

Installation and setting up



DANGER! DO NOT operate the haze machine until you have read and observed all the precautions listed under "Safety information" on page 5.

Location

The Jem Ready 365™ is designed to be located on the floor. An optional trolley is available which holds the machine, two gas cylinders and one AF1 MKII fan.

Ensure that there is at least 100mm clearance all round the machine and at least 60cm in front of the haze output.

AC power

Before using the machine, ensure that a grounding-type (earthed) power plug that fits the local power outlets is installed on the Neutrik Powercon cable provided.



DANGER! Make sure the power plug is correctly rated:

- For EU (230V) use fit a plug rated 10 amp minimum
- For US (120V) use fit a plug rated 10 amp minimum

When installing the plug, follow the plug manufacturer's instructions and connect pins as follows:

Yellow and green wire to ground (earth), blue wire to neutral and brown wire to live.

The table below shows some common pin identification schemes.

wire	function	marking	screw colour
brown	live	"L"	yellow or brass
blue	neutral	"N"	silver
green/yellow	earth	(4)	green

Before connecting the haze machine to power, verify that the AC supply is adequately dimensioned for the current draw of the machine. The machine requires:

3.1A @ 230V (EU model)

6.2A @ 120V (US model)

Check that the local AC voltage is appropriate, as indicated on the machine's serial number label. If your AC voltage is outside the appropriate range, do not use the machine. Contact Martin Service for assistance.



The Neutrik Powercon outlet connector is provided to power the Jem AF1 or AF2 fan. No other equipment should be connected to this outlet.

Setting up

Fill the fluid tank only with Martin R365 Haze Fluid™ (see page 20).

Connect the gas line from the $\rm CO_2$ cylinder using the push fit connector on the rear panel. Connect the regulator to the cylinder and tighten using a suitable spanner. Fully turn on the gas valve at the cylinder. If using a variable regulator, set to 30PSI or 2Bar. No gas adjustment is required to vary the output of the machine.

If DMX control is being used, connect the machine to the DMX line (see page 18).

If the Jem Digital Remote is being used (optional accessory), connect the remote to the Remote socket (see page 17).

The haze deflector flap on the front of the machine can be positioned in either the raised position so the haze goes up into the air, or in the lowered position to reduce air turbulence.

Final checks

Before applying power to the haze machine, verify the following:

- the machine is safely located or installed and meets the location requirements stated on page 11
- the operator is familiar with, and able to comply with, the requirements for safe operation listed on page 5.
- the haze fluid is one of the genuine Martin fluids listed under "Haze fluid options" on page 20.
- the machine is electrically grounded (earthed)
- the AC power distribution circuits and lines are adequately rated for the current load

Turning on the power

Turn on the main power switch located next to the power inlet. The display will show $H \to H \to I$, then after about 5-6 minutes the display will show $H \to I \to I$ and the machine is ready to produce haze.

If the display shows $\square FF$, press the RUN button to the right of the display to enable the machine.

Turning off the power

The Ready 365 is designed to run a self-cleaning cycle after power down to help prevent blockages. It uses an internal rechargeable battery to do this.

If cleaning is needed, when the power is disconnected the display will show $\[\[\] \] \] \]$, then $\[\[\] \] \] \[\] \] \] \]$ counting down to $\[\[\] \] \] \] \]$ will scroll across the display. The unit will then automatically power down.


If the unit is not to be used for some time, turn off the valve on the CO₂ cylinder.

Control settings

Overview

The four **quick access buttons** to the left and right of the digital display at the rear of the unit allow you to quickly set the haze level and engage timer or continuous run modes.

The **digital display** in the centre of the top panel allows you to configure the machine using option menus.

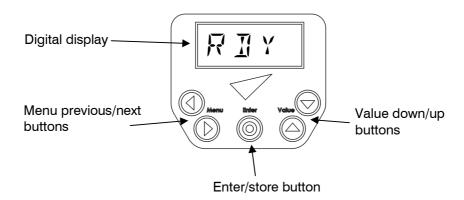

Quick access buttons

The two quick access buttons to the left of the display allow you to quickly set the machine to one of two haze output levels, and engage timer mode or continuous run mode. The display shows the current setting.

quick mode	haze and fan settings
PRE I	Haze 55%, Fan 20%
PRE2	Haze 20%, Fan 20%

The buttons to the right of the display change the operating mode.

Press RUN to turn on haze in continuous run mode. The display shows $\square N \top$. To stop the haze, press the Run button again to set the machine to Standby mode (heaters remain on).

Press SILENT to engage a low noise mode which slows down the fan. If the RUN button is used to stop the haze, Silent mode is not cancelled. Silent mode is a global setting and will affect both manual and DMX control. Note that using silent mode may cause increased gas consumption.



To change the preset settings, adjust the Fan and Haze settings using the menu, then within 3 seconds press the Pre1/Pre2 button to store the settings. $5 \, \text{E}^{-7}$ will then be displayed if successful.

Setting Run mode

The Run mode sets the operational mode of the unit, either Off, Standby (heaters remain on), Fan only, Timer mode or Continuous mode.

When the mode is changed to $\square FF$, if the unit has been running it will enter a 90-second shut down sequence before powering down, to prevent block clogging. The display shows $\bowtie \Pi II$ with a countdown. You can cancel the shut-down sequence by changing the run mode back to an active state.

Setting Haze density

Use the Menu Previous / Next buttons to select the HHZE option. Use the Up/Down buttons to select the density from 2% - 122%. Press the Enter button to store the haze setting. The display shows 5ET.



If you want to temporarily change the haze density, do not press Enter. The haze setting will go back to its stored value next time the machine is powered up. This applies to all options.

Setting Fan speed

Use the Previous / Next buttons to select the $\digamma \bowtie \bowtie$ option. Use the Up/Down buttons to select the fan speed from $\bowtie \bowtie - \bowtie \bowtie \bowtie$. Press the Enter button to store the fan setting.

The fan will run continuously if set above 0% and the RUN menu is set to FAN, TIME or CONT.

If haze is being produced and the fan is off or set to a low speed, the fan speed will be automatically increased to prevent build-up of haze at the machine output.



If using the deflector on the front of the machine, use a low fan speed.

Setting the Timer

To enable timer operation, select the Time option from the Run menu (or press the quick access TIMER button). You can then set the TRUN (run time) and TOFF (off time) values using the menu options. Times are set in seconds and are in the range 1-90. The timer will cycle continuously until the run menu is changed.

Timer mode is useful for maintaining a low level of haze in smaller venues.



When the timer is running and the display is not showing a menu, the display shows RNxx or OFxx (where the xx is the time counting down) as the timer cycles between run and off modes.

Setting the DMX base address

Use the Previous / Next buttons to select the $\mathbb{R} \mathbb{I} \mathbb{I} \mathbb{R}$ option.

Use the Up/Down buttons to set the DMX base address from $\mathbb{Z} \mathbb{Z} + \text{to } \mathbb{Z} \mathbb{Z} \mathbb{S}$. If you hold down the button the address will count up or down.

Press the Enter button to store the address setting.

The machine will automatically respond to a DMX controller whenever it is connected. The Address may also be set via RDM, and requires 3 channels.

When using in a DMX system ensure the LINK menu is set to RECV to avoid causing DMX errors to other devices on the system.

Setting the master-slave link mode

It is possible to control several machines from one digital remote. The machine with the remote plugged into it becomes the Master. The other machines are Slaves. The machines are interconnected with DMX cabling.

Use the Previous / Next buttons to select the L I N K option. Use the Up/Down buttons to select R E L V (slave unit) or S E N I (master unit). Press the Enter button to store the link setting.

The machine should be set to 5ENI only if it is running as a master. If running as a slave, stand-alone or DMX controlled it should be set to REEV.

Checking gas pressure

Select the $\mathbb{P} \ 5 \ I$ option, then use the Enter button to display the recorded value. The display will show the gas pressure in PSI which should be about 34 when running at 100% output (not in silent mode). This information is for diagnostic use only and has no effect on the operation of the machine, gas pressure control being fully automatic.

To disable the PSI display, use the menu forward/ back keys or wait for a timeout of the display to occur.



The machine automatically compensates for changing gas pressure. You cannot change the haze density by adjusting the gas cylinder valve. If the gas cylinder runs out, the machine will run for about 30 minutes before shutting down and the display will show GAS LOW, followed by GAS OUT.

Priming the machine after fluid out

If the machine runs out of fluid it should be shut down to prevent damage to the pump. To suck the new fluid back into the machine, replace/refill the fluid tank and use the prime function.

Use the Previous / Next buttons to select the PRME option. Use the Up/Down buttons to change the option to Y. Press the Enter button to start the priming function.

The machine will pump at full power for about 10 seconds or until the unit senses fluid in the heat exchanger. You may need to repeat this two or three times if the fluid pipes are completely empty.

To exit this menu if you decide not to activate the Prime function, select $\ensuremath{\mathbb{N}}$ and press Enter.

If the machine is not up to operating temperature the Prime function will do nothing.

Resetting options to factory settings

The factory settings configure a standard mode of operation for the machine.

Use the Previous / Next buttons to select the $R \subseteq E \setminus V$ option. Use the Up/Down buttons to change the option to Y. Press the Enter button to reset all options.

To exit this menu if you decide not to reset the options, select $\ensuremath{\mathbb{N}}$ and press Enter.

The factory settings are:

option	setting
HAZE	3 2 %
FAN	30%
TRUN	2 Ø seconds
TOFF	2 Ø seconds
RUN	SIBY
ADDR	00 (
LINK	RECV
ALT	00
PRME	N


Aux menu

The Aux menu currently has no function on this machine.

Remote control

Overview

The Jem digital remote control, available separately, may be used for remote control of the Jem Ready 365[™]. Several machines may be controlled from one remote using the LINK function (see page 15).

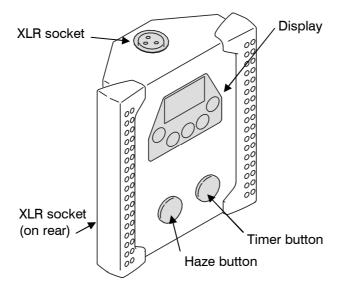

Functions

The remote control provides the following functions:

- Haze button: turns haze output on and off. Press once to start haze and again to stop.
- Timer button: turns the haze timer on and off.
- Haze level setting (HAZE = 0 -100%)
- Fan speed setting (FAN = 0 -100%)
- Timer run time/off time settings (TRUN = 1 -90 seconds, TOFF = 20-89 seconds)
- Run mode (RUN = OFF, STBY, FAN, TIME, CONT)

The functions are the same as on the built in control panel and are described on page 13.

The **RUN** menu duplicates the functions of the Haze and Timer buttons. The buttons are simply a quick way to control this menu function.

Connection

The remote control has two identical XLR sockets on the top and back for connection to the Jem Ready 365^{TM} . Plug the cable provided with the remote control into one of these sockets and into the 3-pin XLR socket on the rear panel of the Jem Ready 365^{TM} .

The remote control is powered through its cable by the Jem Ready 365™; no batteries are required.

The cable may be extended to up to 25 m (82 ft.) with a 3-pin XLR DMX cable, available from your Martin dealer.

DMX control

Overview

DMX is a digital control system widely used in entertainment and architectural lighting. Any controller meeting the DMX-512 standard may be used to control and program the haze output of the Jem Ready 365™.



When a DMX signal is present, the Jem Ready 365™ stand-alone functions do not work. To fire the unit from the control panel or remote control, the DMX controller must be powered off or disconnected.

Connection

The Jem Ready 365™ provides 3-pin or 5-pin XLR sockets on the rear panel of the base for DMX connection. The sockets are interconnected: a DMX line connected to the 3-pin IN socket may be continued through the 5-pin OUT socket and vice versa. Do not, however, attempt to split a DMX line by using both the 3-pin and 5-pin OUT sockets.

For best results, use cable designed for high speed digital data transmission. Suitable DMX cable is available from your Martin dealer.

DMX functions

The Jem Ready 365[™] address setting must match the DMX address allocated to it on your lighting console. To set the address, see "Setting the DMX base address" on page 15. The Jem Ready 365[™] requires three DMX channels.

For example if the Jem Ready 365[™] is set to DMX address 100, channel 1 will be controlled by address 100 and, channel 2 will be controlled by address 101, etc.

When the machine is at running temperature and is under DMX control it displays IMX, or various error messages such as SRS LUW.

18 DMX control

The functions of each DMX control channel are as follows:

Channel 1	DMX value range	Function	Macro description	Default value
Haze	0-12	Idle range	None	0
output	13- 24	Haze 5%		
Level	25- 36	Haze 10%		
	245 -255	Haze 100%		
Channel 2	DMX value	Function	Macro description	Default
	range			value
Fan	0-12	ldle range	None	0
output	13-24	Fan 5%		
level (fan	25-36	Fan 10%		
will always				
run if haze	245 -255	Fan 100%		
is active)				
Channel 3	DMX value	Function	Macro description	Default
	range			value
Special	0-50	Idle range	None	0
functions	51-100	Prime	5 seconds within	
			range to activate	
			once	
	101-150	Auto Fan	None (level	
		mode	triggered)	
	151-200	Heater off &	5 seconds within	
		shutdown	range to activate	
			once	
	201-255	Heater on	None, but heaters	
		(normal	will stay on if	
		operation)	channel 3 returns to	
			zero	

RDM operation

The Jem Ready 365™ supports DMX Remote Device Management (RDM). This allows configuration and status monitoring of the machine from a suitably equipped lighting console or control system.

The following can be configured using RDM: Set/read DMX start address Set/read RDM device label Reset device Reset options to factory defaults

The following parameters can be read using RDM: Device status (ready, heating, gas errors) DMX "slot" functions (channel functions) Device software version Device model/manufacturer Service Data

Haze fluid types

The Jem Ready 365™ must only be used with R365 Haze Fluid™. Martin supplies high quality haze fluids that are based on ultra-pure deionized water. No other fluid is suitable for use.



DANGER! The Jem Ready 365™ can run safely only on the specific haze fluid it is designed for. Use ONLY the Martin haze fluid designated in this manual. NEVER use any other type of fluid, or toxic gas may be produced. You will probably also cause damage to the system that will invalidate the product warranty. Do not dilute haze fluid with water or any other liquid. Discard haze fluid if it becomes contaminated.

Basic service



Before servicing the Jem Ready 365[™], read and observe all the precautions listed in "Safety information" on page 5. Any service not described in this section must be carried out by a Martin service technician.

Cleaning

Excessive dust, haze fluid, and dirt build-up will degrade performance and cause overheating and damage to the machine that is not covered by the product warranty. To maintain adequate cooling, dust must be cleaned from the outer casing and air vents of the machine periodically.



Isolate the machine from power and allow to cool completely before cleaning. The haze output nozzle remains hot for a period after use.

- Remove dust from the air vents with a soft brush, cotton swab, vacuum, or compressed air.
- Clean haze fluid residues from the haze output of the machine using a damp cloth.
- Clean the outer casing with a damp cloth only.

Fuse replacement

The two fuses for the haze machine are located on the electronics board inside the unit.



DANGER! Disconnect the power supply before removing any covers. Live parts inside!

To replace a fuse, disconnect the power cord from the supply, unscrew the screws holding the top cover of the unit and remove the cover. The electronics board is located in the compartment under the display.

Remove the spent fuse and replace with one of exactly the same size and rating. The fuse type is indicated below. Contact Martin Service if the fuse blows repeatedly.

```
F1

120V = 10AT

230V = 6.3AT

F2

120V = 3.15AT
```

230V = 3.15AT

Troubleshooting

Problem	Probable cause(s)	Suggested remedy
	Machine not at operating temperature	Wait until HERT message no longer shown
Machine will not produce haze when control panel set	HRZE set to 0	Increase setting
to RUN or remote control Haze switch turned on	TRUN set to 0	Increase setting
Haze switch turned on	DMX signal present	Disconnect or turn off DMX controller
Machine can be fired from	DMX address setting incorrect	Change DMX address (page 14)
control panel or remote control, but not by DMX controller	Poor connection in DMX line	Check DMX cables and connections
	LINK menu is set to SEND	Set LINK menu to RECV
Haze output is weak	Machine requires priming	Prime machine (page 15)
Wet, greasy, non-uniform haze output, fluid drips or spits from nozzle, or very loud noise when firing machine	Incompatible haze fluid	Use approved fluid!
Machine appears dead	Mains fuse blown	Replace fuse (page 21)
	No power at AC cable inlet	Check power cable and circuit breaker
Machine causes DMX errors to occur on other units when connected to a DMX system	LINK menu is set to SEND	Set LINK menu to RECV

Status messages

message	reason
OFF	The heaters are Off, the unit is shut down.
HERT	The unit is heating up to operating temperature.
RIY	The heater is at operating temperature, but Haze is not turned on (RUN set to STBY or HAZE set to 0%).
IMX	The heater is at operating temperature and the unit is under DMX control.
ΠN	The heater is in run mode and is producing haze.
CAL ERR	The machine has detected an error with its calibration settings and will not operate. Call Martin Service.
OVER TEMP	The machine has detected an error in the temperature sensor and will not operate. Call Martin Service.
WRIT	The machine is running a cleaning cycle which lasts 90 seconds (number may be 89 to 0)
585 OUT	There is no gas pressure in the cylinder.
GAS LOW	The gas pressure is too low to operate and the machine will turn off in approximately 20 minutes.
BHII	(on start-up) The internal battery is low and the last shutdown did not complete. If this message displays on every start-up, call Martin Service to obtain a replacement battery.
	battery.

Resetting the machine after fluid out

If the machine runs out of fluid simply refill the fluid container and follow the priming instructions on page 15.

Specifications

Length	Physical
Height	· ·
Performance continuous Operating time	
Performance Operating time	_
Operating time	Dry Weight191(g
Warm up time (approx)	Performance
Max' operating time at min output	
Control and programming Control options	
Control options onboard digital control panel, DMX (385 pin), Multi function digital remote control (optional). DMX channels 3 RDM equipped RDMX channels 8.3 RDM equipped RDMX channels 9.3 RDM equipped RDMX channels 9.3 RDM equipped RDMX channels 9.3 RDM pressure chancing piston, high pressure chancing piston	wax operating time at min output8 nours
Multi function digital remote control (optional). DMX channels	Control and programming
DMX channels	
Fluid/gas system Fluid pump	
Fluid/gas system Fluid pump	
Fluid pump	RDM equipped
Capacity	Fluid/gas system
Compatible fluids	Fluid pumpOscillating piston, high pressure
CO2 consumption 90-300mg/hour Connections DMX data .5 or 3 pin XLR Remote / machine link .3 pin XLR AC power Neutrik PowerCon Electrical AC power (EU models) .220-240V, 50/60Hz AC power (US models) .6.3AT Main fuse (EU models) .6.3AT Main fuse (US models) .600W Heat exchanger (EU models) .600W Heat exchanger (US models) .600W Thermal Maximum ambient temperature (Ta max) .40°C (104°F) Exterior surface temperature, steady state, at 20°C ambient .40°C (104°F) Max nozzle temperature .290°C (554°F) Approvals EN 61000-6-3:2001 European EMC: EN 60 335-1:2002 European safety: EN 61000-6-1:2001 European safety: EN 61000-6-1:2001 EN 50 366: 2003 Electromagnetic fields	
Connections DMX data	
DMX data	CO2 consumption90-300mg/nour
Remote / machine link	Connections
AC power Neutrik PowerCon Electrical AC power (EU models) 220-240V, 50/60Hz AC power (US models) 110-120V, 50/60Hz Main fuse (EU models) 6.3AT Main fuse (US models) 10AT Heat exchanger (EU models) 600W Heat exchanger (US models) 600W Thermal Maximum ambient temperature (Ta max) 40°C (104°F) Exterior surface temperature, steady state, at 20°C ambient 40°C (104°F) Max nozzle temperature 290°C (554°F) Approvals E European EMC: EN 61000-6-3:2001 European safety: EN 60 335-1:2002 Immunity: EN 61000-6-1:2001 EN 50 366: 2003 Electromagnetic fields	DMX data5 or 3 pin XLR
Electrical AC power (EU models)	
AC power (EU models)	AC power
AC power (US models)	Electrical
AC power (US models)	AC power (EU models)
Main fuse (US models) 10AT Heat exchanger (EU models) 600W Heat exchanger (US models) 600W Thermal 40°C (104°F) Exterior surface temperature, steady state, at 20°C ambient 40°C (104°F) Max nozzle temperature 290°C (554°F) Approvals EN 61000-6-3:2001 European EMC: EN 60 335-1:2002 Immunity: EN 61000-6-1:2001 EN 50 366 : 2003 Electromagnetic fields	
Heat exchanger (EU models)	Main fuse (EU models)
Heat exchanger (US models) 600W Thermal Maximum ambient temperature (Ta max) 40°C (104°F) Exterior surface temperature, steady state, at 20°C ambient 40°C (104°F) Max nozzle temperature 290°C (554°F) Approvals EN 61000-6-3:2001 European EMC: EN 60 335-1:2002 Immunity: EN 61000-6-1:2001 EN 50 366 : 2003 Electromagnetic fields	
Thermal Maximum ambient temperature (Ta max)	
Maximum ambient temperature (Ta max)	Treat exchanger (03 models)
Exterior surface temperature, steady state, at 20°C ambient	Thermal
Max nozzle temperature. 290°C (554°F) Approvals European EMC: EN 61000-6-3:2001 European safety: EN 60 335-1:2002 Immunity: EN 61000-6-1:2001 EN 50 366: 2003 Electromagnetic fields	
Approvals C	
European EMC: EN 61000-6-3:2001 European safety: EN 60 335-1:2002 Immunity: EN 61000-6-1:2001 EN 50 366 : 2003 Electromagnetic fields	Max nozzle temperature
European EMC: EN 61000-6-3:2001 European safety: EN 60 335-1:2002 Immunity: EN 61000-6-1:2001 EN 50 366 : 2003 Electromagnetic fields	Approvals
European EMC: EN 61000-6-3:2001 European safety: EN 60 335-1:2002 Immunity: EN 61000-6-1:2001 EN 50 366 : 2003 Electromagnetic fields	
European safety: EN 60 335-1:2002 Immunity: EN 61000-6-1:2001 EN 50 366 : 2003 Electromagnetic fields	()
European safety: EN 60 335-1:2002 Immunity: EN 61000-6-1:2001 EN 50 366 : 2003 Electromagnetic fields	
Immunity:	
EN 50 366 : 2003 Electromagnetic fields	
	EN 50 366 : 2003 Electromagnetic fields
, , ,	ETL approval (pending) UL Std.998, CAN/CSA Std. C22.2 No 104-01

Included items:

User manual Power cable Fluid Container 3.8L Gas connection hose with 9mm and 3/8" BSP connectors

Ordering information

Jem Ready 365 Hazer 120V 50/60Hz	92225975
Jem Ready 365 Hazer 230V 50/60Hz	92225970
,	
Accessories	
Remote Control, JEM Ready 365™	92765041
Traller JEM Deads OCE IM	0000000

Trolley, JEM Ready 365™92620025 Co² Bottle Holder JEM Ready 365™92620026 PowerCon to IEC Lead, JEM Ready 365™ (Power connection from JEM Ready 365™to AF1 /AF2 Fans)......92620027

CO2 pressure regulatorCountry specific

Specifications subject to change without notice. For the latest product specifications, see www.martin.com



Disposing of this product

Martin™ products are supplied in compliance with Directive 2002/96/EC of the European Parliament and of the Council of the European Union on WEEE (Waste Electrical and Electronic Equipment), as amended by Directive 2003/108/EC, where applicable.



Help preserve the environment! Ensure that this product is recycled at the end of its life. Your supplier can give details of local arrangements for the disposal of Martin products.



Martin Professional A/S,Olof Palmes Allé 18, DK-8200,Aarhus N Phone: +45 87 40 00 00 Internet: www.martin.com