


RUSH MH2

Adjust instruction for MH2 Belts

Please make sure that there are no electrical hazards when servicing the products.

Adjustment instruction for tilt belt

1. Open the arm covers
2. Loosen the 4 screws as below pictures

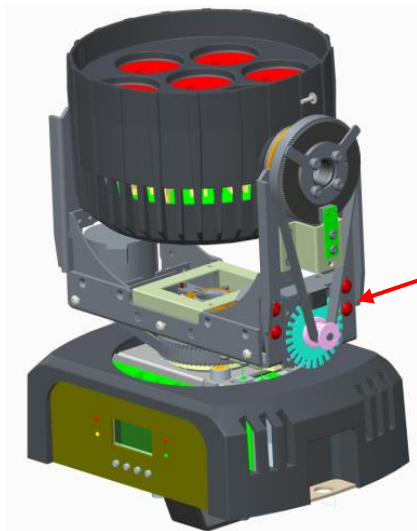


Loosen the 4 screws (marked in red)

3. Push down the motor of tilt to the end
4. Tighten the 4 screws

Adjustment instruction for pan belt

1. Loosen the 4 screws as below pictures

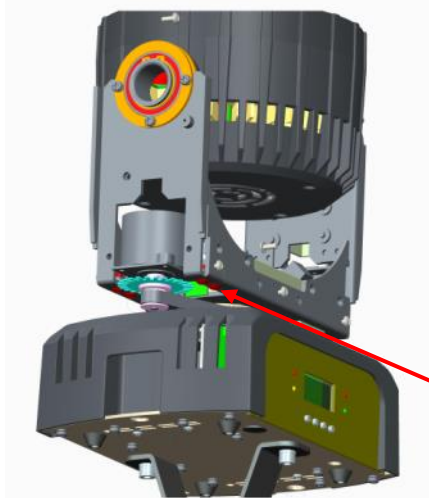

Loosen the 4 screws in red

2. Push out the motor of pan to the end
3. Tighten the 4 screws
4. Load the fixture covers



www.martin.com • Olof Palmes Allé 18 • DK-8200 Aarhus N • Denmark
Tel. (+45) 8740 0000 • Fax (+45) 8740 0010