

RoboColor Pro 400

Phase Compensation Capacitor Replacement Procedure

This document describes the procedure for replacing the phase compensation capacitor in RoboColor Pro 400 fixtures.

The replacement capacitor is P/N 04030087, "35 μ F MFR-1 w. quick connect."

Safety information

Warning! Disconnect the fixture from power and allow to cool before servicing. Service must be carried out by qualified professional technicians only.

Replacement procedure

To replace the phase compensation capacitor:


1. Disconnect the fixture from power and allow to cool.
2. Remove the two screws from the top front of the fixture.




3. Remove the four screws at the rear of the fixture and lift the cover off.




4. Remove these two screws.

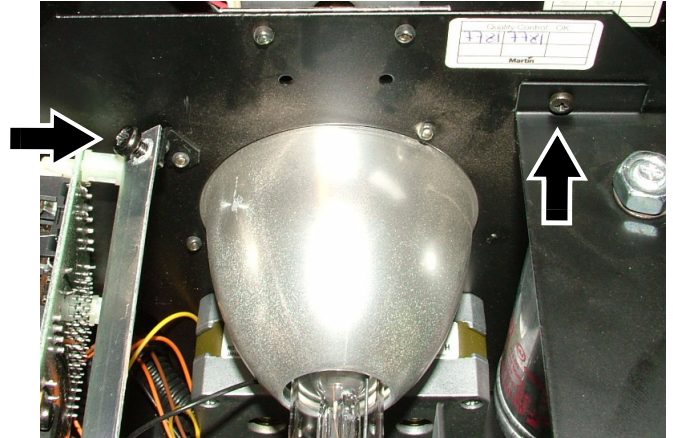

5. Pull the end of the fixture out of the fixture housing.

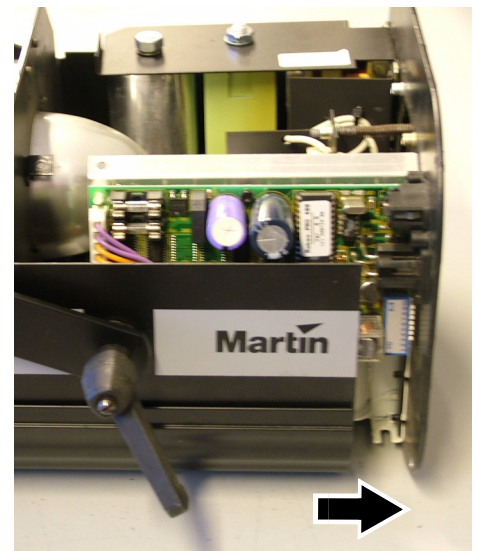


6. Use a wrench to remove the 13 mm capacitor retaining nut and lock washer to release the capacitor.

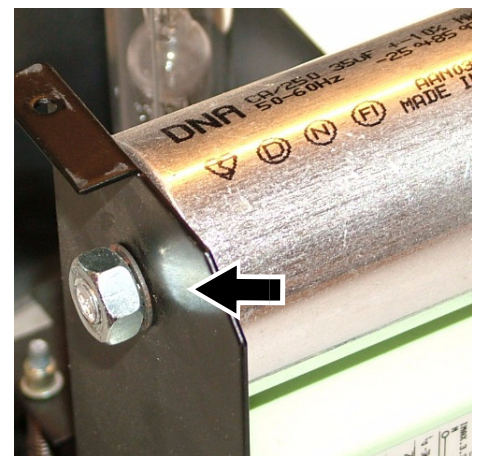

7. Use a wire cutter to clip the wires as close to the capacitor as possible.
8. Strip about 5 mm (slightly less than 1/4 inch) of insulation from the ends of the two leads.



9. Press each end into a terminal on each side of the new capacitor to establish a circuit through the capacitor (the capacitor is not polarized).
10. Transfer the nut and lock washer from the old capacitor to the new capacitor, place the capacitor in the fixture and use a wrench to tighten the retaining nut.

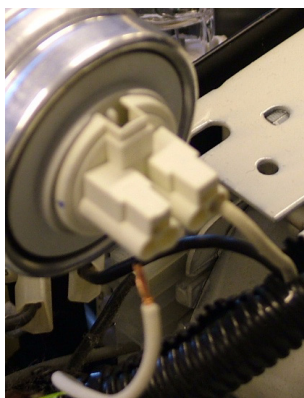

11. Push the end of the fixture back into the fixture housing.



12. Replace these two screws.



13. Ensure that wires are clear of moving parts and secure them as necessary with strip ties.
14. Check that wires are not under tension and are in perfect condition.
15. Check that connections are secure.
16. Replace the cover and secure it using the four screws at the rear of the fixture and the two screws at the front of the fixture.

Martin[®]