



Solecis AVB-DA-RGBHV-HD15-0106

Overview

The Solecis AVB-DA-RGBHV-HD15-0106 (**FG1340-4616-01**) is an RGBHV distribution amplifier on HD-15 connectors with all outputs 75 Ohm driven for long cable runs connections and has TTL sync restore for compatibility with all display devices.

The high-performance, wide-bandwidth circuitry provides compatibility across all resolutions. The AVB-DA-RGBHV-HD15-0106 can be used for RGBHV, RGBS, RGsB and YUV. The unit is a 1-In 6-Out RGBHV distribution amplifier on HD-15 connectors and Output 1 can be used as a local monitor output.

The AVB-DA-RGBHV-HD15-0106 is housed in a 1U metal enclosure and features a 100-240V internal power supply.





FIG. 1 Solecis AVB-DA-RGBHV-HD15-0106

Common Application

Great for delivering up to six outputs over long cable runs.

Product Specifications

AVB-DA-RGBHV-HD15-0106 Specifications RGB Input (HD-15)					
Level:	Analog				
Max Level:	1V p-p				
Impedance:	75 ohm				
Sync Input					
Type:	Analog or TTL				
Impedance:	75 ohm				
RGB Video Bandwidth:	350MHz -3dB				
RGB Return Loss:	-40dB@10MHz, -27dB@100MHz				
Adjacent Channel X-talk:	-70dB@10MHz, -48dB@100MHz				
RGB Outputs (HD-15)					
Number:	6				
Level:	Analog				
Gain:	Unity				
Impedance:	75 ohm				
Sync Output					
Level:	TTL				
Impedance:	75 ohm				
Power					
Input Voltage:	100-240V 50/60Hz				
Power Consumption:	8W				
Heat Dissipation:	27.29 BTU/hr				
Dimensions (HWD):	1.72" x 17.00" x 6.43" 43.7mm x 431.8mm x 163.4mm				
Weight:	5.73 lbs. (2.6kg)				
Included Accessories:	Detachable Rack Mount AC Power Cord				

	Specifications	

· RoHS/WEEE compliant

Safety Instructions

Please read these instructions before using your AMX Solecis device. Failure to comply with these instructions could result in fire, electrical shock, personal injury, death, or damage to the equipment.

Power Source

Use only a 3-wire grounding type source. The power source should not exceed 264VAC. Do not remove under any circumstances the ground wire.

Power Cord

Use only the cord shipped with the unit. Do not use the cord if it has become damaged or frayed. Contact your AMX Solecis dealer if you need to replace the power cord.

Groundina

The interface is grounded through the grounding conductor on the power cord. To avoid electric shock plug the power cord into a properly wired receptacle. Do not defeat the purpose of the grounding-type plug.

Fuse

For protection against the risk of fire, use only a fuse of the same rating and type.

Liquid Spills

Do not set drinks on top of the unit or immerse the unit in liquid.

Do Not Disassemble

This device contains no user serviceable parts. All servicing must be performed by a qualified service technician.

For Safety Reasons

- · Do not place the unit on an unstable surface.
- Do not use near water or sources of heat.
- · Use only recommended attachments.
- Use the type of power supply as specified.
 Unplug the power to the unit and refer servicing to qualified personnel under the following conditions:
- If liquid has been spilled or the unit has been exposed to rain or water.
- If it does not operate normally when the operating instructions are followed or if it exhibits a distinct change in performance indicating a need for service.
- If the unit has been dropped or the cabinet damaged.

Connections

Connect the PC input and outputs on the rear panel of the unit.

Note: It is imperative that the input source is fully compatible with the display devices.

The RGB input is 75 ohm terminated and the outputs fully 75 ohm driven for connection to long cable runs.

The unit can now be connected to the mains and the power switched on.

Video Pin Connections

FIG. 2 provides the pin layout for the HD-15 connectors:

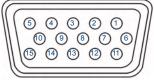


FIG. 2 RGBHV HD-15 connector

The pin configuration for the HD-15 (video) connector are as follows:

1 - RED 9 - r

2 - GREEN 10 - SYNC GROUND 3 - BLUE 11 - n/c 4 - n/c 12 - n/c

 5 - n/c
 13 - H SYNC

 6 - RED GROUND
 14 - V SYNC

 7 - GREEN GROUND
 15 - n/c

8 - BLUE GROUND

