

### Overview

The Mio Modero Elite (FG5796-01xx, single style; FG5796-02xx, double style; FG5796-03xx, single style with LCD; FG5796-04xx, double style with LCD; xx indicates color selection) provides a wide range of control capabilities in the form of keypads that are as adept as they are elegant. Each device is available as single style (8 button max) or double style (16 button max) with an optional LCD capped button. You need KeypadBuilder to properly program these devices. The application and documentation are available from [www.amx.com](http://www.amx.com).

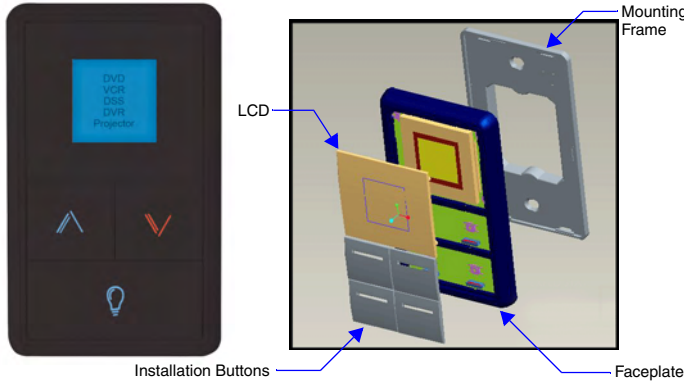


FIG. 1 Mio Modero Single Style Elite with LCD

### Specifications

The Mio Modero device family keypad specifications are as follows:

Specifications	
Power:	12 vDC, 70 - 230 mA (range depending on device type and number of buttons)
Front Panel Components:	<ul style="list-style-type: none"> <li>LCD (where applicable) - SPI controlled 96 x 96 pixel resolution, monochrome FSTN display with a white Electroluminescent backlight; an active button.</li> <li>Pushbuttons - a maximum of 8 buttons on the single style and 16 buttons on the double style. The Elite is backlit.</li> <li>LEDs - red and blue backlit buttons indicate activity.</li> </ul>
Rear Panel Components:	<ul style="list-style-type: none"> <li>DIP switch - 8 position mini DIP switch used to set the device address for the keypad on the AXlink Bus.</li> <li>Wiring connection - 4 pin 3.5mm Phoenix AXlink connector.</li> </ul>
Dimensions (HWD):	<ul style="list-style-type: none"> <li>Single style - 4.46" x 2.71" x .57" (113.28 mm x 68.83 mm x 14.48 mm)</li> <li>Double style - 4.46" x 4.39" x .57" (113.28 mm x 111.51 mm x 14.48 mm)</li> </ul>
Supported Languages:	<ul style="list-style-type: none"> <li>English</li> <li>Spanish</li> <li>French</li> <li>Italian</li> <li>German</li> <li>Portuguese</li> <li>Arabic</li> <li>Mandarin Chinese</li> <li>Russian</li> <li>Japanese</li> <li>Thai</li> <li>Hindi</li> <li>Korean</li> <li>Hebrew</li> <li>Greek</li> </ul>
Weight (range):	.25 lbs (.11 kg) - .50 lbs (.23 kg) Style and number of buttons will decide weight.
Operating Environment:	<ul style="list-style-type: none"> <li>Operating Temperature: 0° to 50° C (32° to 122° F)</li> <li>Storage Temperature: -10° to 70° C (14° to 158° F)</li> </ul>
Mounting:	Mounts into US and a majority of International single gang back boxes.
Included Accessories:	<ul style="list-style-type: none"> <li>Single style mounting kit (KA-5795-01)</li> <li>Double style mounting kit (KA-5795-02)</li> <li>Installation Buttons</li> <li>Phoenix Connector (41-5045)</li> </ul>
Optional Accessories:	<ul style="list-style-type: none"> <li>Accent Frame (for some larger wallboxes): <ul style="list-style-type: none"> <li>Elite Colors (xx indicates color selection) - FG5796-08xx (single button); FG5796-09xx (double button)</li> </ul> </li> <li>Custom buttons: <ul style="list-style-type: none"> <li>Elite Colors (xx indicates color selection) - FG5796-21xx (4 single buttons); FG5796-22xx (2 double buttons)</li> </ul> </li> <li>Blank buttons: <ul style="list-style-type: none"> <li>Elite Colors (xx indicates color selection) - FG5796-07xx</li> </ul> </li> </ul>

### Available Color Schemes

The Mio Modero device family is available in a range of colors. The Elite supports a variety of Lutron color schemes, Black (BL), White (WH), Beige (BG), Almond (AL), Brown (BR), Gray (GR), Ivory (IV), Light Almond (LA), Taupe (TP), Gold (GL), Silver (SL).

### Mio Modero LCD Feature

The Mio Modero Elite is available with an optional LCD screen. The LCD is a scalable black-and-white image (SPI) controlled 96 x 96 resolution monochrome FSTN display with a white Electroluminescent back light. The viewable area of the screen is 25 mm x 25 mm. The LCD displays an 18 pt. font and supports 4 lines of text. The viewing angle of the LCD is 12 o'clock, allowing for a top down viewing once mounted to a wall. The LCD is capable of displaying levels via a bar graph and text over the bar graphs. Additionally, the LCD has a button cap enabling it to act as a button.

### Fixed Menu System

Using the KeypadBuilder application available for download from [www.amx.com](http://www.amx.com), the LCD can be programmed with a Fixed Menu System (FMS) that is navigated via the Mio Modero and its LCD button. See the *KeypadBuilder Instruction Manual* for more information on programming Fixed Menu Systems.

### Proximity Detection "People Sensor"

The Mio Modero Elite has an electromagnetic field proximity detector or "People Sensor." A disruption of the field within 4 to 6 inches will activate the keypad's backlight. The default setting for the proximity sensor is ON.

### Changing the proximity sensor sensitivity

Use the following SEND\_COMMAND to change the setting:

^PRX-	Sets the sensitivity for the proximity sensor.
Syntax:	" '^PRX-#' "
Variables:	# = a value from 0 - 31.
Example:	SEND_COMMAND Panel1, "'^PRX-15' "
	Sets the proximity sensor for the device to a level of 15; default is 20.

### Installation

**Note:** Before touching the device, discharge the static electricity from your body by touching a grounded metal object.

The basic front and rear components of the Mio Modero are as follows:

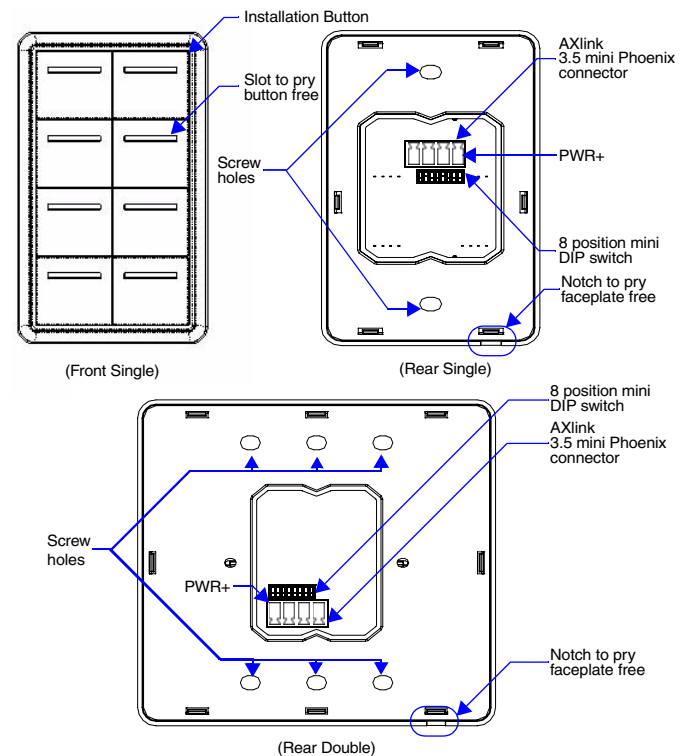


FIG. 2 Mio Modero Front and Rear Components

## Changing Buttons

The Mio Modero Elite is shipped with "installation" buttons; they are intended to be place holders until your engraved buttons, designed with KeypadBuilder, arrive.

### To switch out "installation" buttons:

1. Pry the button using the slot on the front of the "installation" buttons to remove them from the Mio Modero.
2. Select the location of the custom buttons and snap them into place. Be sure to note the orientation of the white insert on the back of the button, the notch must be down. Insert the bottom of the button first and then push the top into place.
3. Snap the faceplate on the mounting frame.

### To change custom buttons:

1. If connected, disconnect the power supply.
2. If connected to mounting frame, place a flathead screwdriver in the notch at the bottom right of the Mio Modero, and pry the faceplate from the mounting frame.
3. On the back of the faceplate locate the button access points, outlined with white circles. Using a straightened paperclip, poke through the button access points until the buttons pop free.
4. Snap the desired custom buttons into place. Be sure to note the orientation of the white insert on the back of the button, the notch must be down. Insert the bottom of the button first and then push the top into place.
5. If the power supply was disconnected in **Step 1**, reconnect and return power to the device.
6. Snap the faceplate on the mounting frame.

Be certain to reprogram the Mio Modero to match the new button arrangement; use KeypadBuilder to assign the locations. See the *KeypadBuilder Instruction Manual* available at [www.amx.com](http://www.amx.com).

### Setting The AXlink Device Number

1. If connected, disconnect the power supply.
2. Locate the 8-position Device DIP switch on the rear panel.(FIG. 3).
3. Set the DIP switch according to the switch values shown below.

Switch	1	2	3	4	5	6	7	8
Value	1	2	4	8	16	32	64	128

The device number is set by the total value of DIP switch positions that are ON (up).

As an example, the DIP switch in FIG. 3 defines device number 129 (1+128=129).



FIG. 3 Example Device DIP Switch set to 129

If you later change the device number, remove and reconnect the AXlink power connector to enter the new device number into memory.

**Note:** AMX has created *Dip Switch2* to assist in calculating dip switch position values. Download the program *Dip Switch2* from [www.amx.com](http://www.amx.com) for free.

### Wiring

The Mio Modero uses a four-pin mini AXlink connector for power and data.

**Caution:** Do not connect power to the Mio Modero until the wiring is complete.

### Preparing captive wires

You will need a wire stripper, and flat-blade screwdriver to prepare and connect the captive wires.

1. Strip 0.25 inch (6.35 mm) of wire insulation off all wires.
2. Insert each wire into the appropriate opening on the connector according to the wiring diagrams and connector types described in this section.
3. Turn the flat-head screws clockwise to secure the wires in the connector.

**Note:** Do not over-torque the screws; doing so can bend the seating pins and damage the connector.

### Wiring guidelines

The Mio Modero requires 12 VDC power to operate properly. The necessary power is supplied via the AXlink cable. The maximum AXlink wiring distance is determined by power consumption, supplied voltage, and the wire gauge used for the cable. The following table lists wire sizes and the maximum lengths allowable based on the maximum power consumption rating of 170 mA.

Wiring Guidelines at 170 mA	
Wire Size	Maximum Wiring Length
18 AWG	690.42 feet (210.43 m)
20 AWG	436.80 feet (133.13 m)
22 AWG	272.33 feet (83.00 m)
24 AWG	171.66 feet (52.32 m)

The maximum wiring lengths for using AXlink power are based on a minimum of 13.5 volts available. If the distance is greater than what is listed in the table, consult the *Mio Modero Device Family Instruction Manual* for wiring with external power sources.

## Connecting the Wiring

**Caution:** If using power from AXlink, disconnect the wiring from the control system before wiring the Mio Modero.

### AXlink Data and Power Connections

Connect the control system's AXlink connector to the AXlink connector on the rear panel of the Mio Modero for data and 12 VDC power as shown in FIG. 4.

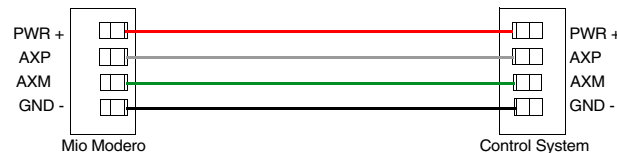


FIG. 4 AXlink straight-thru wiring

### Mounting Procedures

AMX recommends mounting the Mio Modero in a standard one-gang wallbox, a conduit box per NEC specs section 370, with a minimum internal clearance of 2-5/8" x 1-3/4" x 1-5/8" (HWD), but it is possible to mount the Mio Modero to a podium without a wallbox. More installation details are available in the *Mio Modero Device Family* instruction manual.

### Wallbox Mounting

1. Use the cutout dimension for the wallbox to cutout the install surface for the Mio Modero.
2. Confirm that the terminal end of the AXlink cable is disconnected, and not receiving power.
3. If the faceplate is connected to the mounting frame, place a flathead screwdriver in the notch at the bottom right of the Mio Modero, and pry the faceplate from the mounting frame.
4. Connect the AXlink power supply. The connector passes through the center of the mounting frame and connects to the board. The connection is illustrated in FIG. 2.
5. Place the mounting frame on the wallbox; align the screw holes with the mounting holes on the panel, and fasten the mounting frame to the wallbox using the screws supplied.

**Note:** Do not overtighten the screws when mounting the mounting frame. The device should be flush with mounting surface.

6. Attach the faceplate to the mounting frame first at the top and swing it to the bottom. See FIG. 5

### Podium Mounting

1. The necessary area for the mounting frame opening is 2.00 x 2.25; cutout the mounting frame install surface to accommodate the Mio Modero.
2. Confirm that the terminal end of the AXlink cable is disconnected, and not receiving power.
3. If the faceplate is connected to the mounting frame, place a flathead screwdriver in the notch at the bottom right of the Mio Modero, and pry the faceplate from the mounting frame.
4. With the mounting frame resting in the cutout area, drill the mounting holes into the flat surface.

**Note:** Do not overtighten the screws when mounting the mounting frame. The device should be flush with mounting surface.

5. Connect the AXlink power supply. The connector passes through the center of the mounting frame and connects to the board. The connection is illustrated in FIG. 2.
6. Attach the faceplate to the mounting frame first at the top and swing it to the bottom. See FIG. 5.

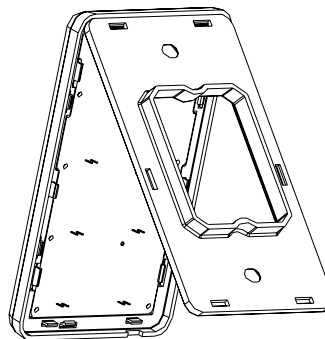


FIG. 5 Attaching the faceplate to the mounting frame

## Programming The Mio Modero

### KeypadBuilder

Most functionality of the Mio Modero is handled using the application, *KeypadBuilder*. Go to [www.amx.com](http://www.amx.com) for the *KeypadBuilder Instruction Manual*.

There are a select number or SEND\_COMMANDs the Mio Modero recognizes. For a full list and descriptions, consult the *Mio Modero Device Family Instruction Manual*.